

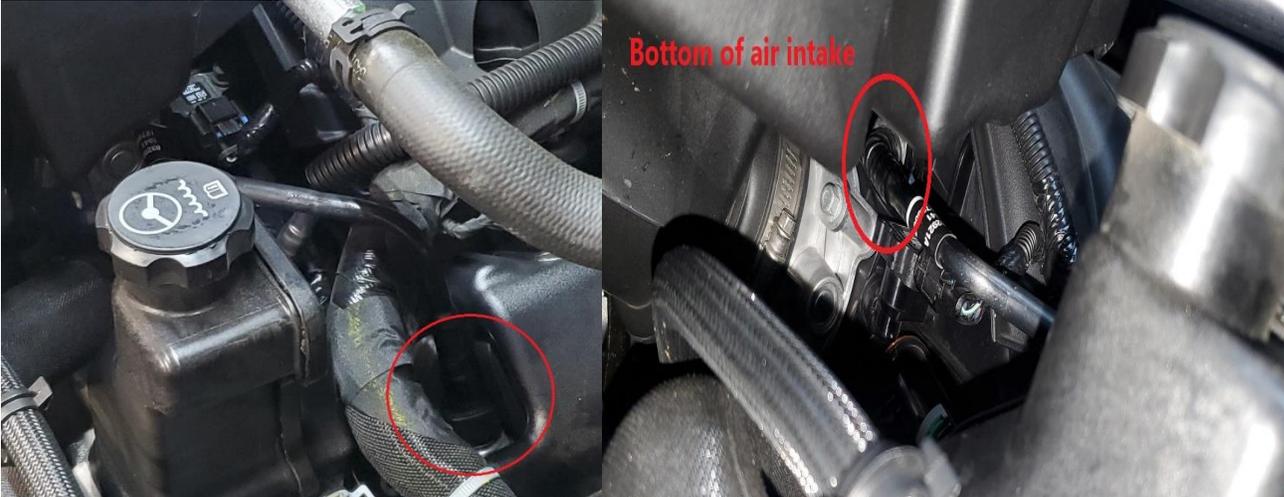


**757-842-6497**  
**WWW.JLOSC.COM**

**J&L 3.0 Oil Separator**  
**(2020-2025 Chevy Silverado 2500/3500/GM Sierra 2500/3500 6.6L Gas Driver Side)**  
**#3089D**

**Install video available on our website [www.JLosc.com](http://www.JLosc.com)**  
**Search: 3089D and click videos**

**Please review complete instructions prior to installing.**

| Step#    |  |
|----------|--|
| <b>1</b> | <b>Verify you have all of the following parts included in the kit:</b> (1) J&L Oil Separator with hoses, (1) J&L Mounting bracket, (2) M4 screws, (1) M8x1.25 Bolt   |
| <b>2</b> | <b>Gather all of the following tools needed for the installation:</b> 9/16" socket, ratchet, Phillips screwdriver, light oil and Q-tip. (optional)   |
| <b>3</b> | Locate and remove stock PCV hose from PCV valve (driver side valve cover) and intake manifold. Depress grey tabs to release hose. Note: You can remove the stock airbox for more room if needed<br>   |
| <b>4</b> | Mount J&L Bracket to auxiliary battery mounting bracket with the supplied bolt. <b>Note:</b> If your truck is optioned with the auxiliary battery, remove bolt securing this bracket and use the same bolt to mount the J&L Oil separator bracket.<br> |

|          |  |
|----------|--|
| <b>5</b> | Assemble J&L Oil separator onto mounting bracket, line up logos for proper orientation. Use supplied screws to secure to bracket.  |
| <b>6</b> | <p>Route the hose from the "O" side (<b>OSC</b> Logo) to the PCV valve (valve cover)the connections will "click" once fully seated. Route the "C" side hose to the intake manifold connection under the factory air intake.</p> <p><b>**TIP**</b> Lubricate the shafts of the fittings on the engine with oil, you can put a little oil on your finger and spread it around the shaft of the connection. This will allow the J&amp;L fittings to smoothly install and not disturb the two O-rings inside. This is especially important on the intake manifold fitting as it is in a tough location to ensure you are pushing the fitting on straight.</p> <p><b>Note:</b> It is normal to hear a vacuum/air noise through the oil separator after install.</p> |



To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles.

Thank you for your business. If you have any questions, please e-mail [info@JLosc.com](mailto:info@JLosc.com) or call 757-842-6497. Our hours are Monday-Friday. 8:00am – 4:30pm Eastern Time.

**J&L Oil Separator co. Lifetime Satisfaction Guarantee. We want you to be a J&L customer for life!** Your new J&L product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here. [www.JLosc.com/warranty](http://www.JLosc.com/warranty)

We guarantee workmanship and even a pathway to discounted upgrades for substantially improved items.

**Return Policy:** All returns will be subject to a 10%-25% restocking fee. Please visit [www.JLosc.com](http://www.JLosc.com) for complete return policy.

**Disclaimer:** J&L Oil Separator co. makes no warranties whatsoever, expressed, or implied, oral or written to any purchasers, except the warranty above. J&L Oil Separator co. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by J&L Oil Separator co. agree to hold harmless and indemnify J&L Oil Separator co. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to J&L Oil Separator co. for any claims arising out of use of its products.