PROVEN GR::UND

NEOPRENE FRONT AND REAR SEAT COVERS

(2019+ SILVERADO)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Front Backrest Cover
- (1) RH Front Backrest Cover
- (1) LH Front Seat Case Cover
- (1) RH Front Seat Base Cover
- (1) LH Front Headrest Cover
- (1) RH Front Headrest Cover
- (1) Front Center Console Armrest Cover
- (1) Front Jump Seat Backrest Cover
- (1) Front Jump Seat Base Cover
- (1) Rear Seat Backrest Cover
- (1) LH Rear Seat Base Cover
- (1) RH Rear Seat Base Cover
- (1) Rear Center Arm Rest Cover
- (1) LH Rear Headrest Cover
- (1) RH Rear Headrest Cover
- (1) Center Rear Headrest Cover

TOOLS REQUIRED

10mm Socket Ratchet w/ Extension Short Flathead Screwdriver Long Flathead Screwdriver





Remove the headrest from the front seat by pressing the (2) buttons at the base of the headrest. Set headrest aside.



STEP 2

Under the front seat, unclip the (2) straps on the lower kick panel.





Lay the front seat cover base onto the seat, and route the (2) strap buckles in between the seat base and backrest.



STEP 4

Meet the (2) strap buckles to the front strap connector. Connect the (4) elastic straps to the sides of the seat to secure into place. Make final adjustments, then tighten the (2) lower straps.





STEP 5

Place the front seat backrest onto the front seat. Route the attached straps between the seat backrest and seat base. Pull the seat cover downwards, and tuck the headrest base holes in the cover under the headrest base.



STEP 6

Fold the kick panel attached to the seat behind the seat cover, then connect the seat cover straps together. Make final adjustments, then tighten the (2) lower straps.





Install the headrest cover onto the vehicle headrest. Tuck the headrest cover under the tilt button.


Repeat steps 1-7 to the remaining front seat cover.



STEP 8 (CENTER JUMP SEAT/CONSOLE)

Lift the jump seat into the upright position. Drape the cover around the backrest, and secure into place using the (2) attached Velcro straps and (2) elastic bands.



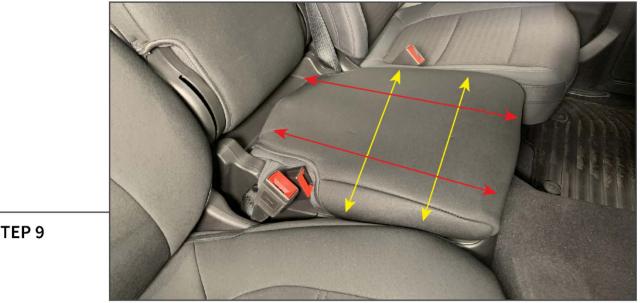

STEP 9

Secure the jump seat base cover using the (2) attached buckle straps and (4) elastic straps. Make final adjustments, and tighten the (2) buckle straps.

Note: Feed the male end of the buckle through the hinging portion of the seat towards the top of the seat. Connect the male and female of the buckle, then pull the strap to relocate the buckle assembly below the seat base.



Secure the center console armrest cover using the (4) Velcro straps. Make final adjustments, and tighten the Velcro to secure into place,





Remove the headrest from the front seat by pressing the (2) buttons at the base of the headrest. Set headrest aside.



STEP 12

Using a small flathead screwdriver, press inwards on the plastic tab holding the headrest base into the seat. While pressing inwards, lift upwards to dislodge the headrest base, a plastic pry tool may assist with removal. Repeat this step for the remaining headrest bases.

This step is required to remove the rear seat backrest.





Under the seat, remove (4) silver 10mm bolts along the rear of the cab.



STEP 14

Locate the (3) straps hanging above the backrest. Using a screwdriver, pry upwards on each the retaining latch **below** the strap.

Note: Once unlatched, place a shop rag in between the latch and the seat to prevent the seat from relatching when moving to the remaining latches.





Lift and remove the rear seat backrest from the vehicle. Place the backrest on a soft surface. Using a panel removal tool, remove the (7) plastic push clips to remove the foam sound deadening from the backrest.



Place the seat covers onto the backrest and route the attached straps towards the back of the seat. Connect the (8) seat cover straps together. Make final adjustments and tighten the (8) straps until secure. Secure the seat cover sides to the backrest using the (6) elastic straps per side. Re-install the foam sound deadening using the original push clips.

Note: Do not install backrest to the vehicle at this time.





Place the seat cover onto the rear seat base, connect the (2) straps together. Make final adjustments, then tighten the straps. Hook the (2) elastic straps together to secure the sides of the seat cover.

Repeat this procedure for the opposite side rear seat base cover.



Install the rear seat backrest to the vehicle following steps 12-14 in reverse order. Pull the center armrest down, and install the armrest cover. Secure the cover using the attached Velcro.





Install the headrest cover onto the rear seat headrests. Tuck the headrest cover under the tilt button. Install the headrests onto the rear seat backrest.



Installation is now complete.