

LED DUAL RING TAIL LIGHTS

(2007-2013 SILVERADO)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) LH Tail Light
(1) RH Tail Light

TOOLS REQUIRED

Phillips Screwdriver

STEP 1



Open the vehicle tailgate. Locate and remove the (2) Phillips screws securing the tail light to the vehicle. Firmly pull the tail light away from the vehicle to dislodge the (2) alignment pins.

STEP 2



Twist each light socket counter-clockwise to remove the light sockets from the housing. Set the original tail light housing aside. Remove each light bulb from the light sockets.

STEP 3



Press each corresponding tail light socket into the new tail light connectors, ensure each connection is fully seated.

Note: Some vehicles have polarized connections, if the tail light does not function properly, remove each socket connection and turn the tail light connector 180*.

STEP 4



Fit each light socket into the new tail light, and twist each socket clockwise to lock into place.

Repeat steps 1-4 to the opposite side of the vehicle. Installation is now complete.