



**FEATURING  
SUPER-GRIP® THE SLIP RESISTANT FASTENING SYSTEM**

**INSTALLATION INSTRUCTIONS  
FOR  
Oe38-32**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**A) BACKREST COVER**

 
- 1) Remove headrests. (see note below)
- 2) Slip cover over backrest and pull down firmly (see airbag warning below)
- 3) Tuck flaps under backrest and attach to hook and loop fastener at back
- 4) Adjust hook and loop fastener to equalize tension
- 5) Replace headrest (see note below)

**B) CUSHION COVER**

- 1) Move seat to most forward and uppermost position
- 2) Place cover on seat cushion ensuring long side strap is on the door side
- 3) Pass back flap of cover with straps through crevice
- 4) Feed straps under seat and buckle to front of cushion cover
- 5) Pass long side strap through the opening between the seat and the molded plastic and under the seat
- 6) Buckle to the other side
- 7) Adjust straps to equalize to equalize tension

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

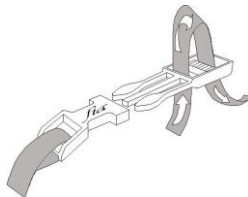


**3) RE-INSTALLATION OF HEADRESTS**

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

**2) HEAD REST REMOVAL:**

 - Push in side release buttons  
- Lift off  
(If unable to remove consult dealership)

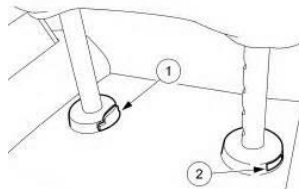

**WARNING: DO NOT BLOCK AIR BAGS**

**WHEN INSTALLING SEAT COVERS:**

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.