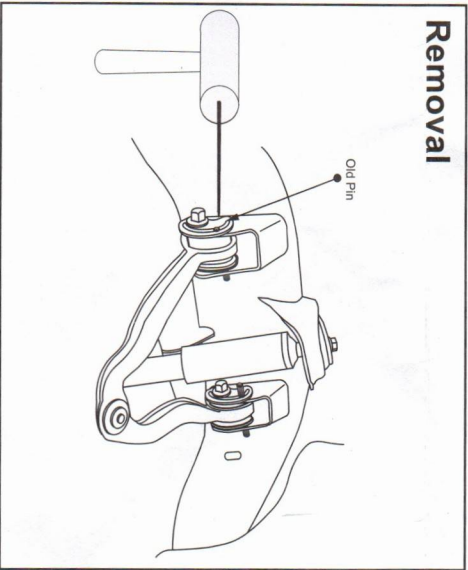


## Installation Instructions

1. To remove old guide pin use hammer and Punch from outside in. (See Fig 1)
- 2 To Install new guide pin using Locking Pliers with a Spacer (Nut) to press in to place from inside out. (See Fig 2)

**Fig 1**

### Removal



**Fig 2**

### Installation

