

FAS-TOP

ORIGINAL



INSTALL INSTRUCTIONS FOR FAS-TOP ORIGINAL TONNEAU




Questions? Call 701-673-3777

Components

- **4 or 6 Clamps (depending on pickup box length)** with mounting hardware (one 3/8" x 1" bolt and one 3/8" washer for each clamp)
- **Driver Side Rail Assembly** with Pre-Installed Auto Latch Assembly, Pre-Inserted 3/8" Square Nuts, Header Bar Bracket, Storage Strap, Weather Seal
- **Passenger Side Rail Assembly** with Pre-Installed Manual Latch Assembly, Header Bar Bracket, Storage Strap, and Weather Seal
- **Tonneau Cover Assembly** with Pre-Installed Tarp Stops, Header Bar & Roll Bar

Tools Required

- 9/16" Wrench or Socket
- Tape Measure
- Protective Eyewear
- Pencil

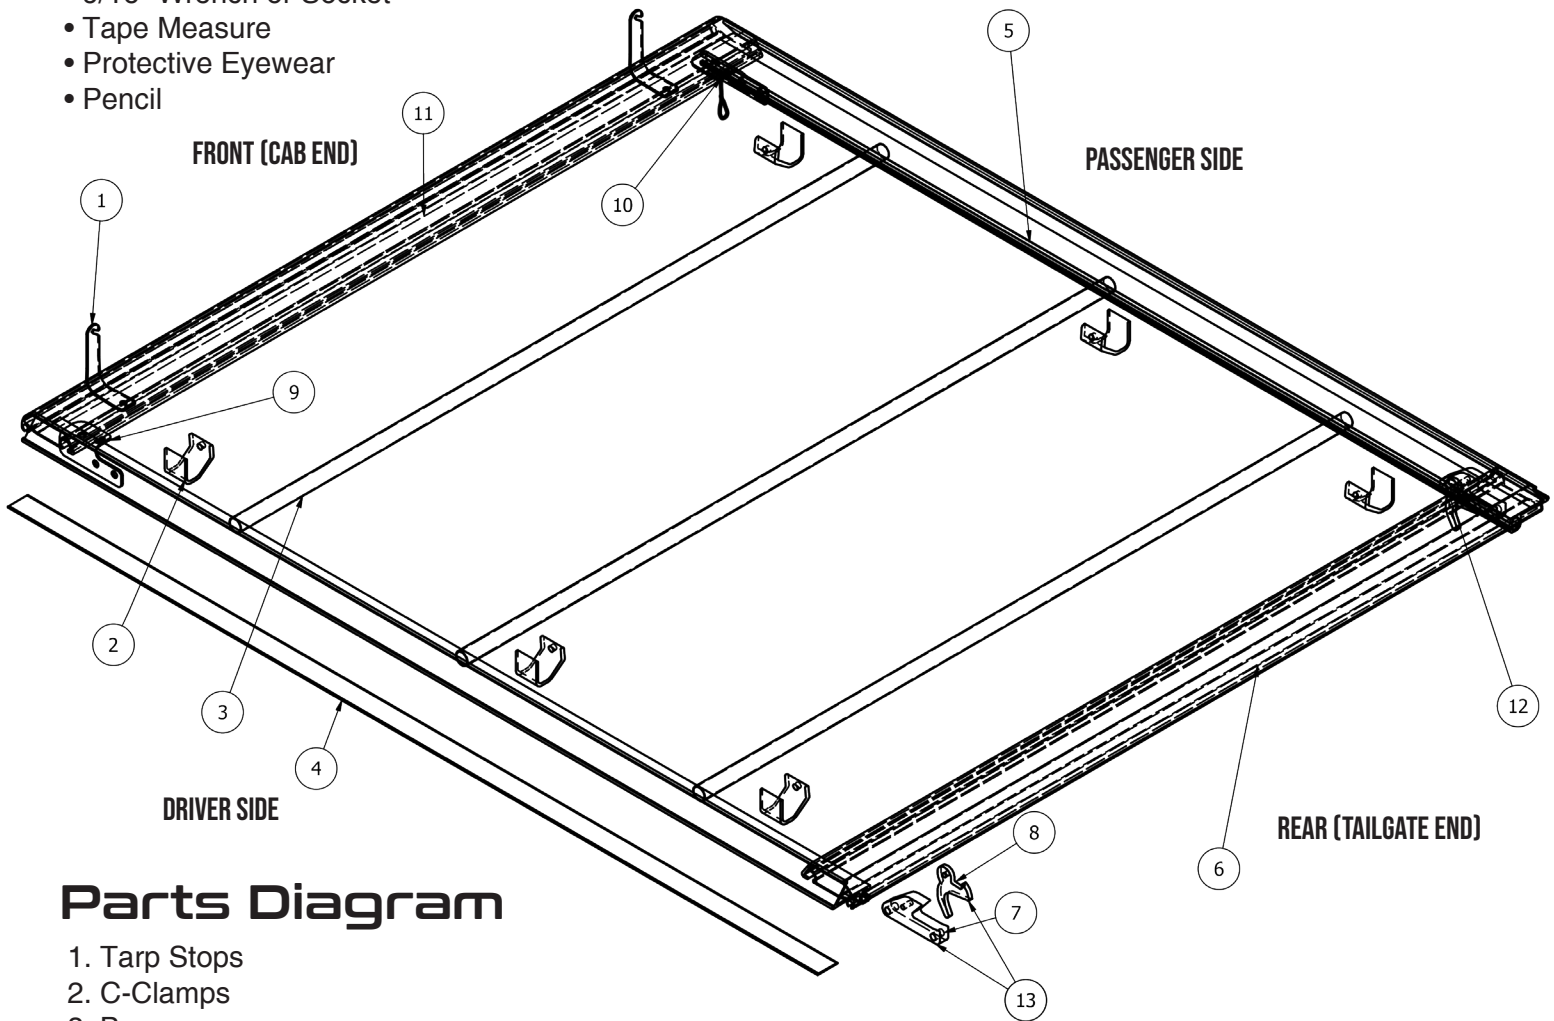

Parts Diagram

1. Tarp Stops
2. C-Clamps
3. Bows
4. Weather Seal
5. Side Rail
6. Roll Bar
7. Strike
8. Trigger
9. Header Bar Bracket
10. Storage Strap
11. Header Bar
12. Manual Latch Assembly
13. Auto Latch Assembly

Mounting Side Rails

1

Set rail on top of truck bed side with the latch assembly toward the rear of the pickup. The rail with the (spring loaded) auto latch goes on the driver side. Push rail against the front inside edge of box.

↻ Repeat on both sides.




2

To install c-clamps, locate the 3/8" square nuts that are pre-inserted in the rail channels.



3


Position the c-clamps on the side rail as close to the front as possible and as close to the rear of the pickup as possible. Make sure to avoid obstructions.

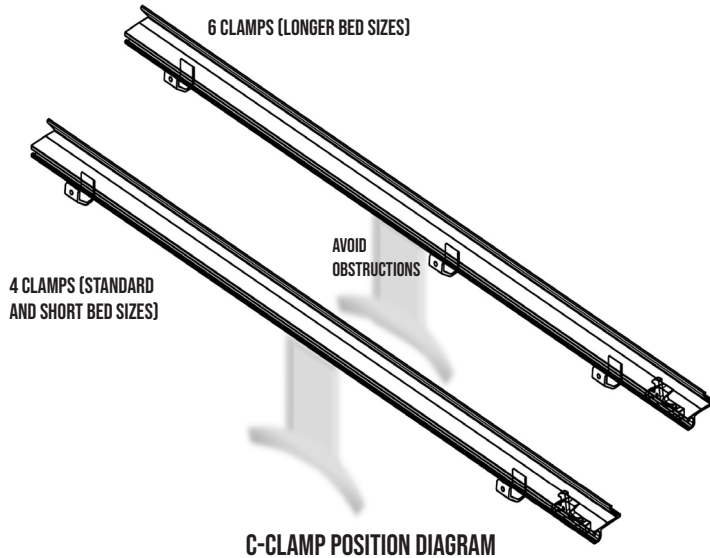

4

Push side rail against inside edge of box before tightening c-clamps. Fasten clamps with $\frac{3}{8}$ " x 1" bolts and washers using a $\frac{9}{16}$ " wrench.

Repeat on all clamps.

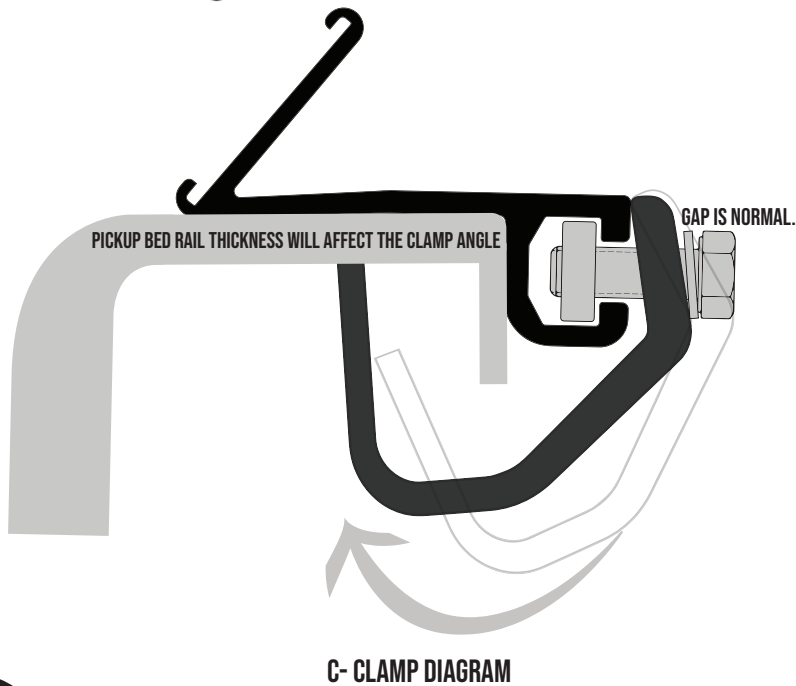

3

Mounting Tonneau to Side Rails

1

Set tonneau cover assembly on the front of the box between side rail. Fold and tuck tarp flap under the header bar.



2

To center tonneau, measure space on both sides of header bar, then reposition until space is equal on both sides.



3

Locate and align pre-inserted 3/8" square nuts on the header bar with the hole on the header bar bracket.



4

Underneath header bar, fasten the header bar to the bracket with a 3/4" x 3/8" bolt and washer using a 9/16" wrench.

↻ Repeat on both sides of the header bar.




5

Closing Tonneau Cover

1

To close tonneau cover, unhook storage straps at the front of the box.

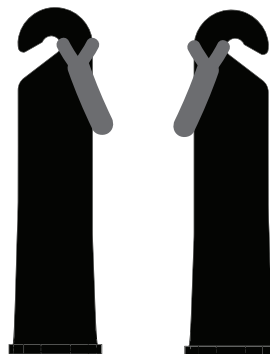

2

With tailgate down, unroll cover to the rear.



3

Position the roll bar into the strikes and press down the roll bar until the spring loaded auto trigger latch engages.




4


Driver side is automatic and passenger side is manual. Engage the manual trigger by pulling rearward into locked position.



UNLOCKED

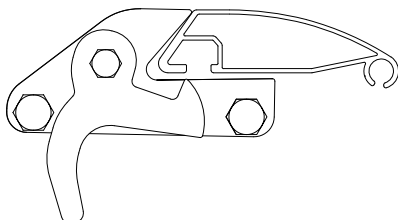



LOCKED

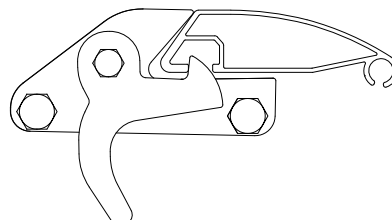

7

5

If tonneau is too tight or too loose, the tonneau can be adjusted by repositioning the latch assemblies on the side rails. With a pencil, mark the original strike position for reference. With a $\frac{9}{16}$ " wrench, loosen the strike bolts. Move strikes forward in small increments to loosen tonneau tension or rearward to tighten tension. Retighten the strike bolts with wrench. Close cover again.

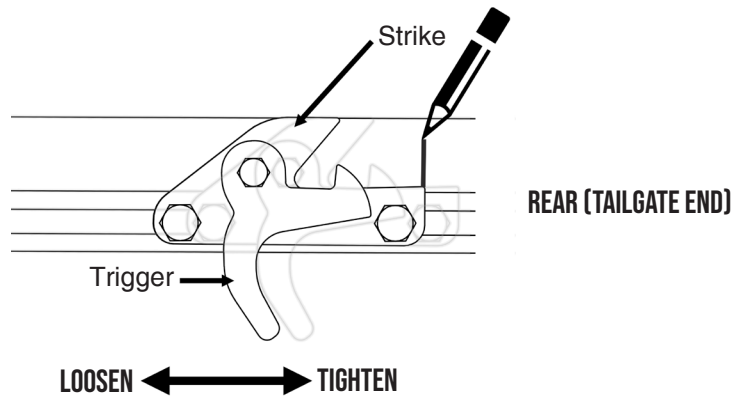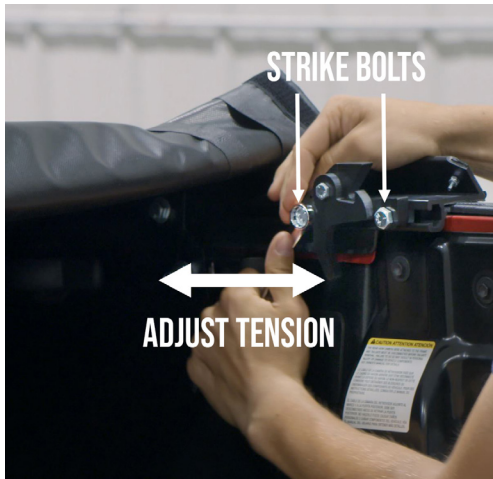

6


To seal the sides, start by pulling the slack outward and pressing firmly down along the length of the side rails.



Opening Tonneau Cover

1

With tailgate down, disengage trigger latches by pushing trigger forward starting with the manual latch side (passenger side) first.

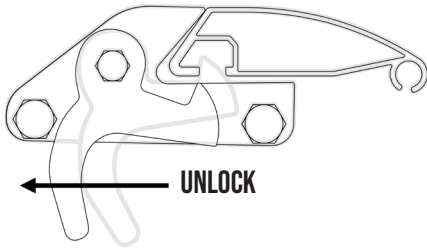

2

Disengage auto latch side (driver side) next by pressing the trigger forward with one hand and holding roll bar firmly with the other hand. Lift the roll bar open.



3

Using both hands, tightly roll cover forward to the front of the box against the tarp stops.



4

Secure the storage straps (located on the header bar bracket) to the top of the tarp stops.



IMPORTANT

SECURE OPEN TONNEAU WITH BOTH STORAGE STRAPS TO PREVENT TONNEAU FROM FLYING OFF.

