





AIRIDE

firestoneairide.com

INSTALLATION INSTRUCTIONS

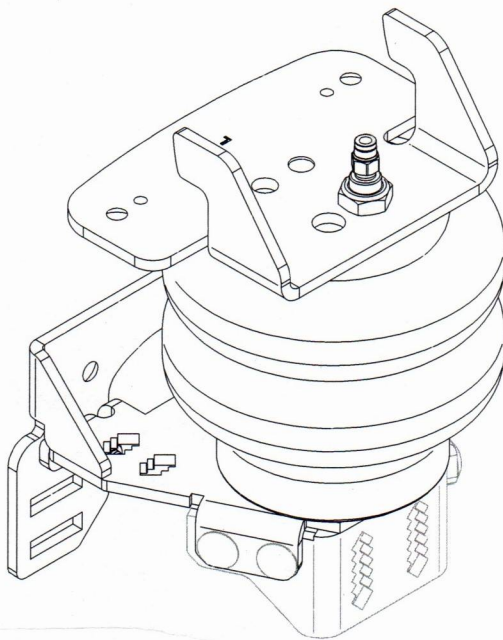

SECTION 1 - AIR SPRING

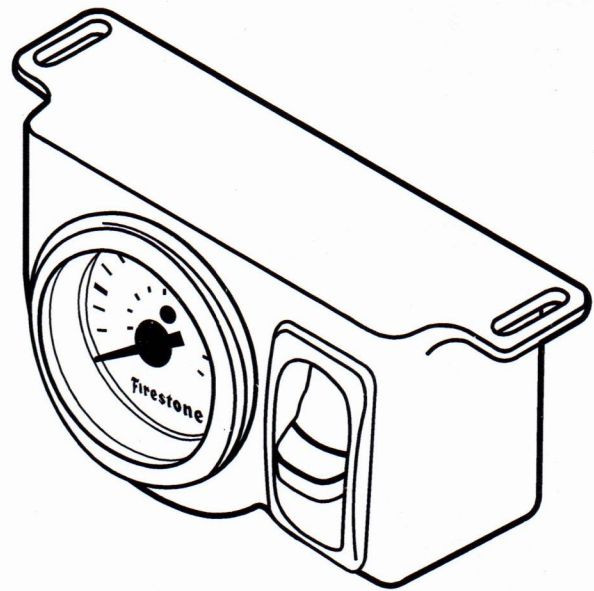


SECTION 2 - AIR ACCESSORY

Firestone

AIRIDE

firestoneairide.com

INSTALLATION INSTRUCTIONS

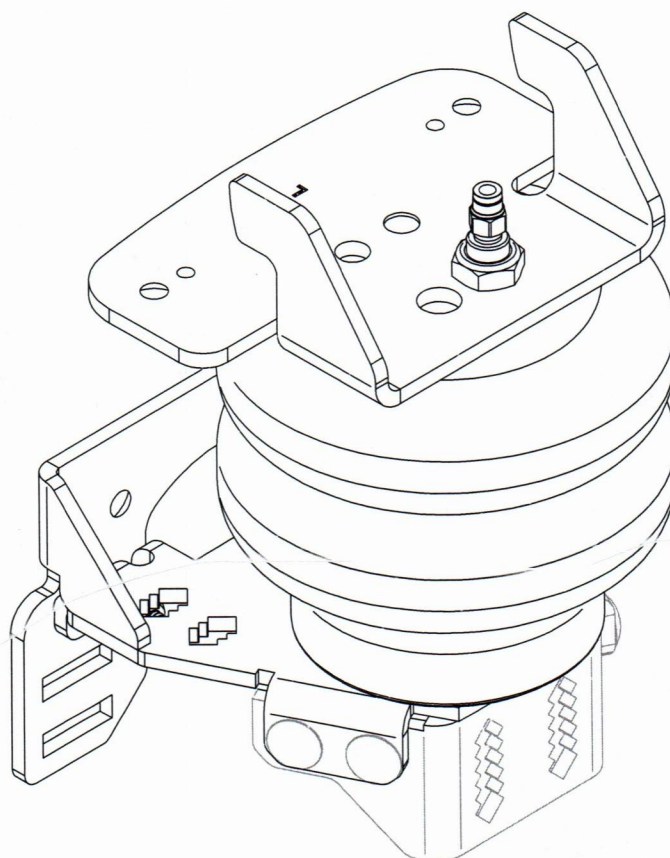

! IMPORTANT

PLEASE DON'T HURT YOURSELF, YOUR KIT OR YOUR VEHICLE. TAKE A MINUTE TO READ THIS IMPORTANT INFORMATION.

DO NOT INSTALL IF THE TRUCK HAS BEEN LIFTED AND THE STOCK JOUNCE BUMPER SPACERS ARE NOT ON THE VEHICLE. *This kit is to be used on a pickup truck only, and DOES NOT INCREASE YOUR VEHICLE'S MAXIMUM LOAD.*

SAFE INSTALLATION

Please take all safety precautions during installation. A hydraulic jack can fail, and if that happens, you can be seriously hurt, or worse, if you are relying on it to hold up the vehicle. If you use a hydraulic jack, secure jack stands in the appropriate locations and chock any tires still touching the ground.

Wear safety glasses or goggles. Your eyes may be lower than some parts and pieces, and you don't want to lose an eye.

Remove the possibility of any electrical issues by disconnecting the negative battery cable.

KIT CLEARANCE

There must be a minimum of 1/2" clearance around all installed components when the air springs are inflated and under a load. The air springs must flex and expand during operation, so the clearance keeps the kit from rubbing against parts of the vehicle.

VEHICLE GVWR

NEVER exceed the maximum load recommended by the vehicle manufacturer (GVWR). The GVWR can be found in your vehicle's owner's manual or on the data plate on the driver's side door. Consult your local dealership for additional GVWR specifications.

INFLATING THE AIR SPRINGS

When inflating air springs, add air pressure in small quantities, checking air pressure frequently. The air springs have much less air volume than a tire, so they inflate much more quickly.

PRESSURE TO LOAD

The air springs will support approximately 50 lbs. of load for each PSI of inflation pressure (per pair). For example, 50 PSI of inflation pressure will support a load of 2500 lbs. per pair of air springs.


APPROPRIATE AIR PRESSURE

For best ride, use only enough air pressure in the air springs to level the vehicle when viewed from the side (front to rear). This will vary, depending on the load, location of the load, condition of the existing suspension, and personal preference.

OPTIONAL T-FITTING

This kit includes inflation valves and air line tube for each air spring, allowing you to compensate for unbalanced loads. If you prefer a single inflation valve system to provide equal pressure to both air springs, your dealer can supply the optional "T" fitting (Part # 3025 or WRI-760-3461 retail pack).








ONCE INSTALLED SUCCESSFULLY, FOLLOW THESE PRESSURE REQUIREMENTS FOR THE AIR SPRINGS:

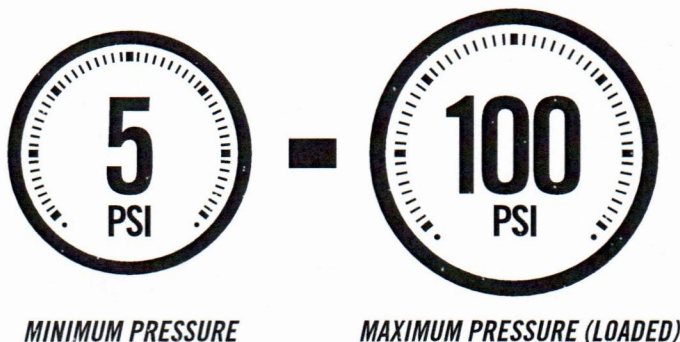

PARTS

Compare the parts below to your kit. Assure you have all pieces, and organize them for an easier installation.

       
MAIN KIT CONTENTS

PT # 6397	 x 2 AIR SPRING	PT # 5939	 x 2 LOWER FRAME BRACKET	PT # 5940	 x 2 THREAD PLATE
PT # 5872	 x 1 UPPER LEFT BRACKET	PT # 5942	 x 2 LEAF SPRING BRACKET	PT # 1004	 x 1 HEAT SHIELD
PT # 5873	 x 1 UPPER RIGHT BRACKET	PT # 5957	 x 2 SUPPORT BRACKET	PT # 9415	 x 1 AIR LINE TUBE (22 FEET)
PT # 5958	 x 2 LOWER BRACKET	PT # 5336	 x 2 AIR SPRING SPACER	PT # 5946	 x 8 UNIVERSAL AXLE BRACKET
PT # 5959	 x 2 SHORT SUPPORT BRACKET	PT # 0045	 x 2 PROTECTOR		



NOT USED FOR VEHICLES WITH
JOUNCE STRIKER

 A21-760-2625 HARDWARE PACK

PT # 3067	 x 26 3/8" - 16 FLANGE LOCK NUT	PT # 3514	 x 6 3/8" - 16 x 1" FLAT HEAD CAP SCREW	PT # 3032	 x 2 INFLATION VALVE AND VALVE CAP ASSEMBLY
PT # 3033	 x 4 5/16" FLAT WASHER	PT # 3430	 x 2 3/8" - 16 x 2" FLAT HEAD CAP SCREW	PT # 3055	 x 2 AIR FITTING
PT # 0899	 x 2 THERMAL SLEEVE	PT # 3481	 x 2 3/8" - 16 x 3" CARRIAGE BOLT	PT # 3502	 x 8 3/8" - 16 x 6" CARRIAGE BOLT
PT # 3020	 x 4 3/8" - 16 X 8" CARRIAGE BOLT	PT # 3332	 x 2 5/8" - 18 NYLON JAM NUT	PT # 9036	 x 10 RED NYLON TIE
PT # 9488	 x 2 LARGE NYLON TIE	PT # 9483	 x 1 NO-DRILL INFLATION VALVE BRACKET	PT # 3072	 x 8 3/8" - 16 x 1" CARRIAGE BOLT
PT # 3515	 x 4 3/8" - 16 x 2.5" FLAT HEAD CAP SCREW				


! NOTICE

This kit includes components that allow multiple build configurations.

Not every part will be used for each configuration.

CONTENTS AND OVERVIEW

JOUNCE STRIKER CONFIGURATION SHOWN - CHECK YOUR VEHICLE FIRST!

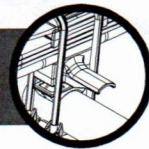

PAGE **6** REMOVE EXISTING JOUNCE BUMPER & INSTALL THREAD PLATE

PAGE **7** INSTALL UPPER BRACKET

PAGE **9** CREATE LOWER BRACKET ASSEMBLY

PAGE **11** DRY FIT AIR SPRING

PAGE **14** DRY FIT AIR SPRING

PAGE **12** MAKE ALIGNMENT MARKS

PAGE **15** MAKE ALIGNMENT MARKS

PAGE **13** DRY FIT LOWER BRACKET ASSEMBLY

PAGE **16** DRY FIT LOWER BRACKET ASSEMBLY

PAGE **17** MEASURE BETWEEN BRACKETS & INSTALL AIR SPRING

PAGE **18** INSTALL AIR SPRING INTO UPPER BRACKET

PAGE **19** INSTALL LOWER BRACKET ASSEMBLY

PAGE **20** INSTALL AXLE STRAP BRACKET

PAGE **21** INSTALL HEAT SHIELD ON RIGHT SIDE

PAGE **22** INSTALL INFLATION VALVES & CUT THE AIR LINE TUBE INTO TWO EQUAL LENGTHS

PAGE **23** ROUTE AND SECURE AIR LINE TUBES & INSTALLING AIR LINE TUBE


PAGE **24** CHECKING THE AIR SYSTEM

PAGE **21** FIXING AN AIR LEAK

PAGE **21** FINISHING THE INSTALLATION




YOUR VEHICLE WILL REQUIRE ADDITIONAL PARTS FROM THIS KIT IF IT DOES NOT HAVE A JOUNCE STRIKER

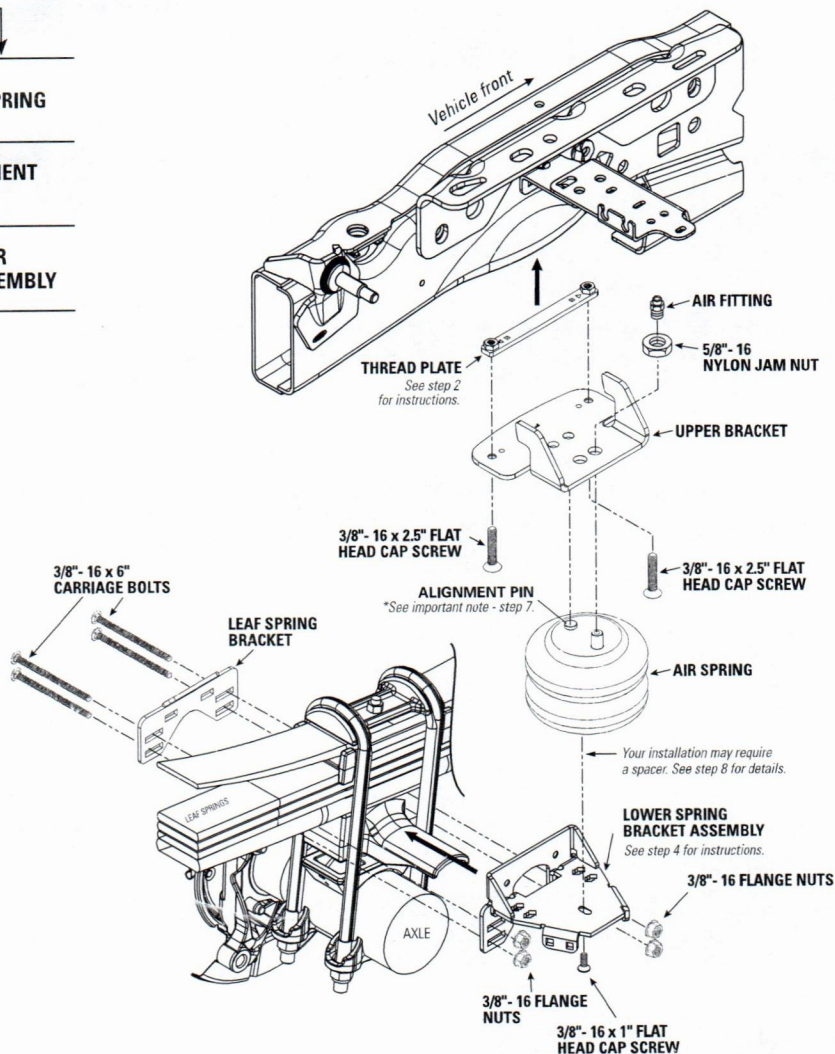

! IMPORTANT NOTE

If necessary for installation clearance, slightly bend the brackets on the left (driver) side which supports the brake line and axle vent tube. After removing the plastic ABS mount from its hole in the axle bracket, use an adjustable wrench or similar tool to bend the bracket approximately 1/8" (3mm). Replace the ABS mount when proper clearance is obtained.

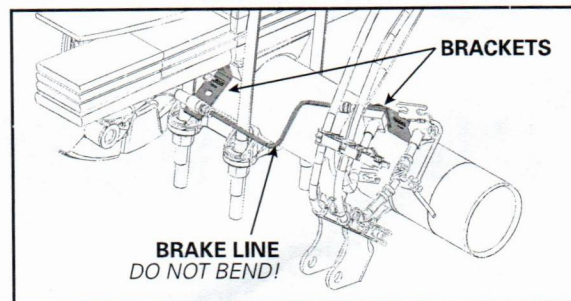


1

REMOVE EXISTING JOUNCE BUMPER




START ON THE LEFT SIDE OF THE
VEHICLE WHILE FACING FORWARD.

Remove the existing jounce bumper and
fastener clips from the vehicle frame.

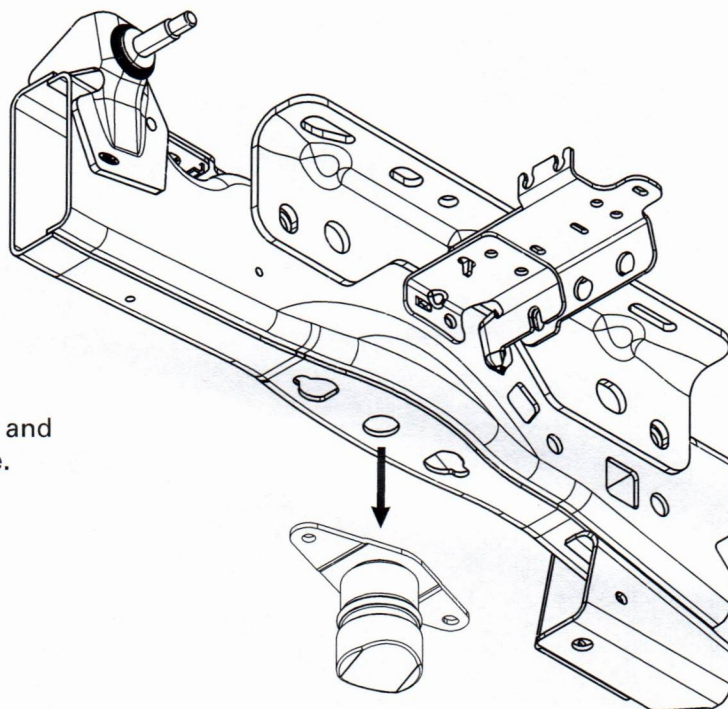



2


INSTALL THREAD PLATE

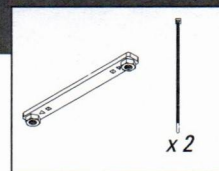


Attach nylon ties to the thread plate, as shown.
These act as installation guides for the thread
plate and upper bracket. They will be removed
in a later step.

Insert the thread plate into the vehicle frame, as shown.
Use nylon ties as handles to position thread plate.

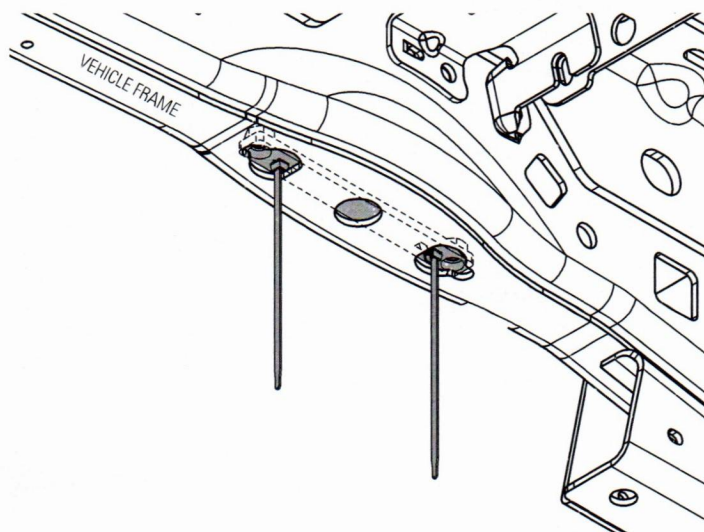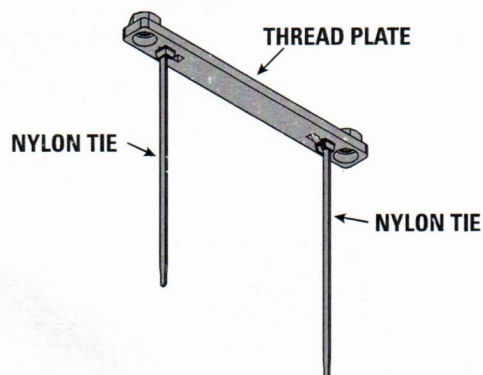

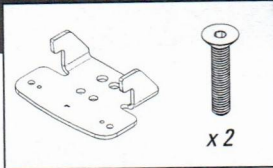

- 1** Guide the two nylon ties into the inner holes in the upper bracket.
- 2** While holding the thread plate in place with the nylon ties, **hand-thread** the fasteners in place.
- 3** Once the fasteners have begun engaging the threads, use snips or a knife to trim the nylon ties flush with the frame.
- 4** Fully-tighten the fasteners.


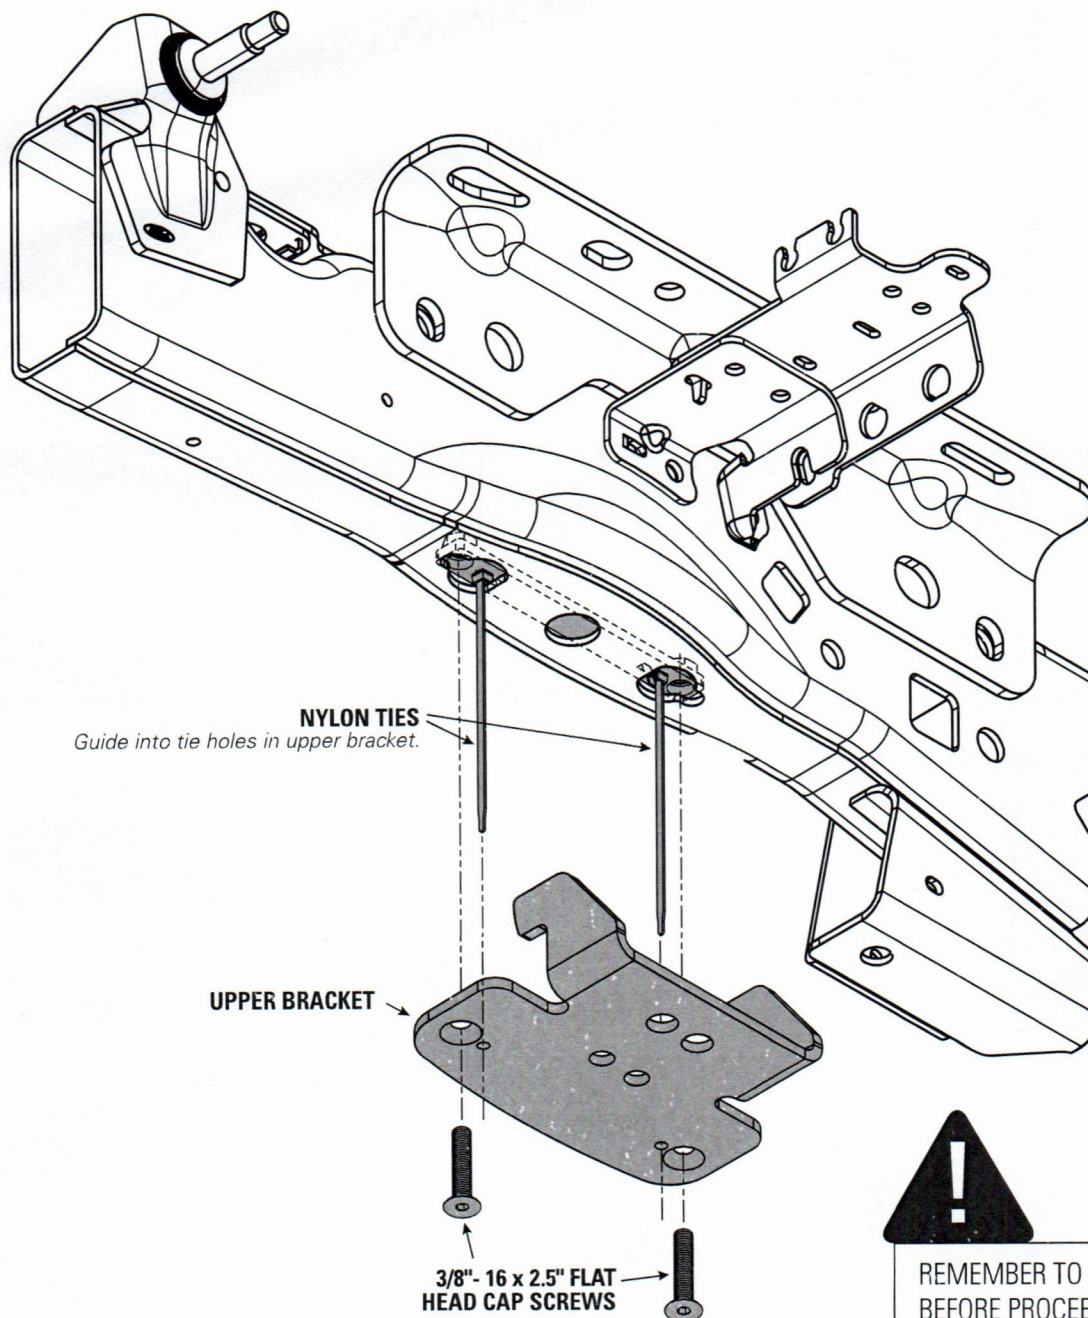


REMEMBER TO TRIM THE NYLON TIES BEFORE PROCEEDING TO THE NEXT STEP.

! WARNING


The lower bracket must be supported by the factory jounce striker (if present) or by the installation of the appropriate support bracket.

Failure to support the lower bracket will cause mounting system failure and void all warranty.

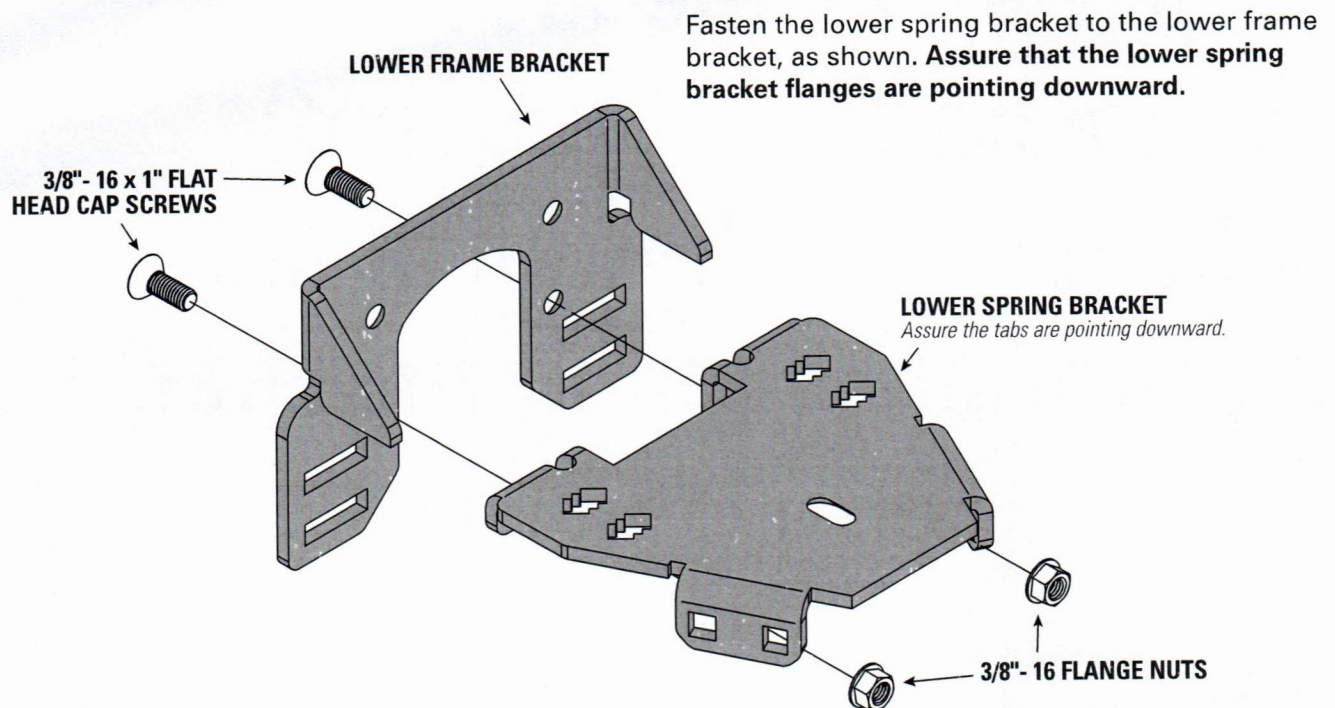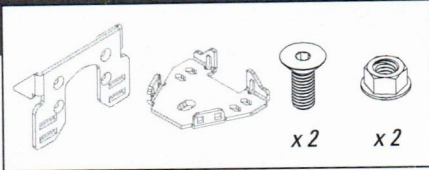


! NOTICE

**If your truck has a jounce
striker plate as shown
below, continue to the
next step.**

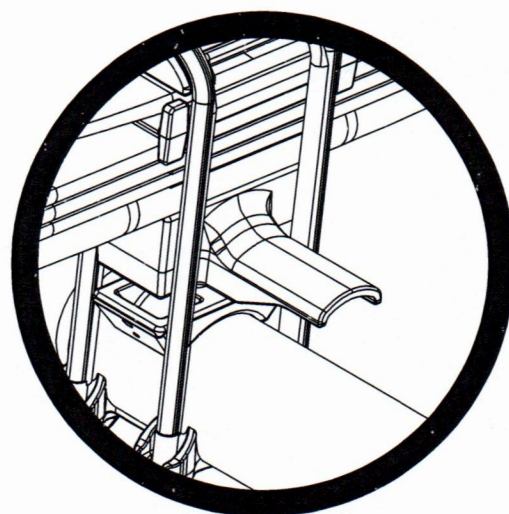


**If it does not, skip to step 5
on page 14.**

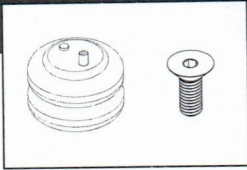

Jounce striker plate version only



Fasten the air spring to the lower spring bracket.
DO NOT FULLY TIGHTEN AT THIS STAGE.

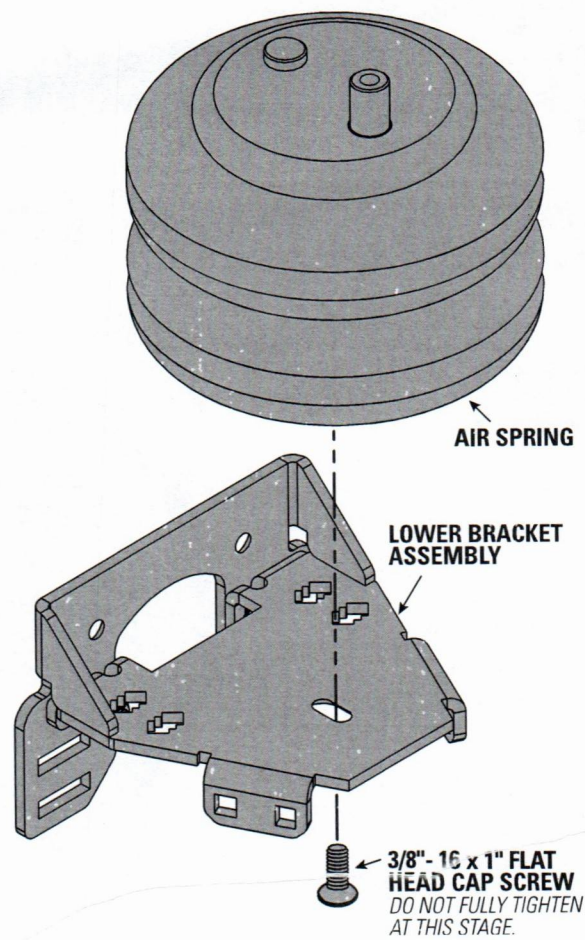


Jounce striker plate version only




1 Insert the alignment pin and combo stud into the front alignment holes, as shown.


2 Position the lower bracket assembly tight to the u-bolts and assure the combo stud and alignment pin are fully seated.

3 Make alignment marks, as shown.

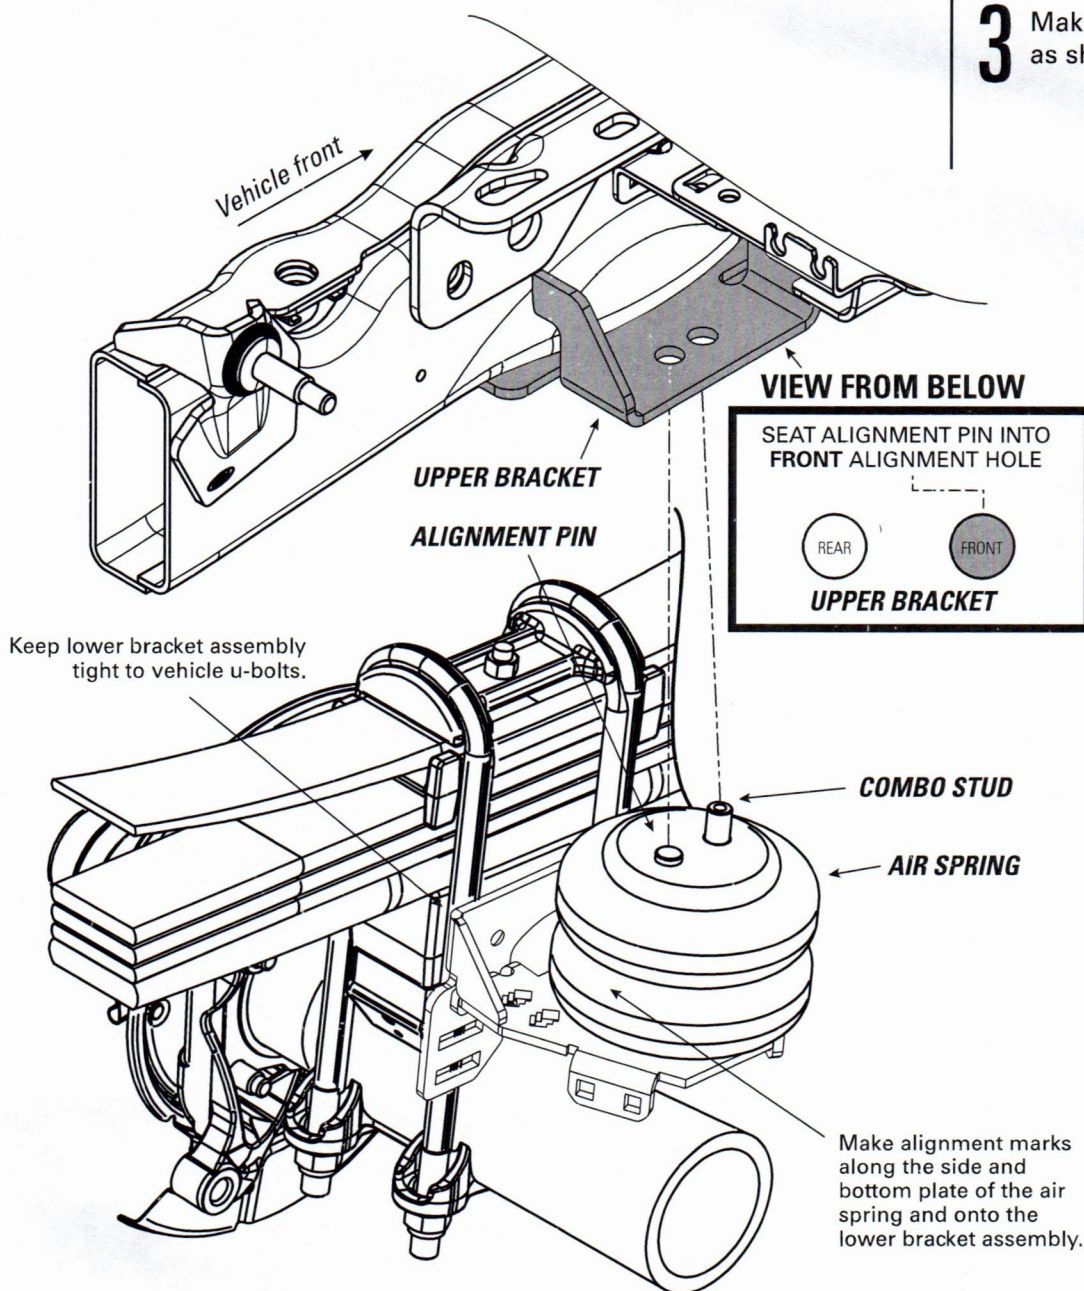

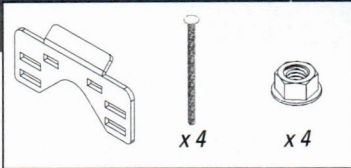

Jounce striker plate version only

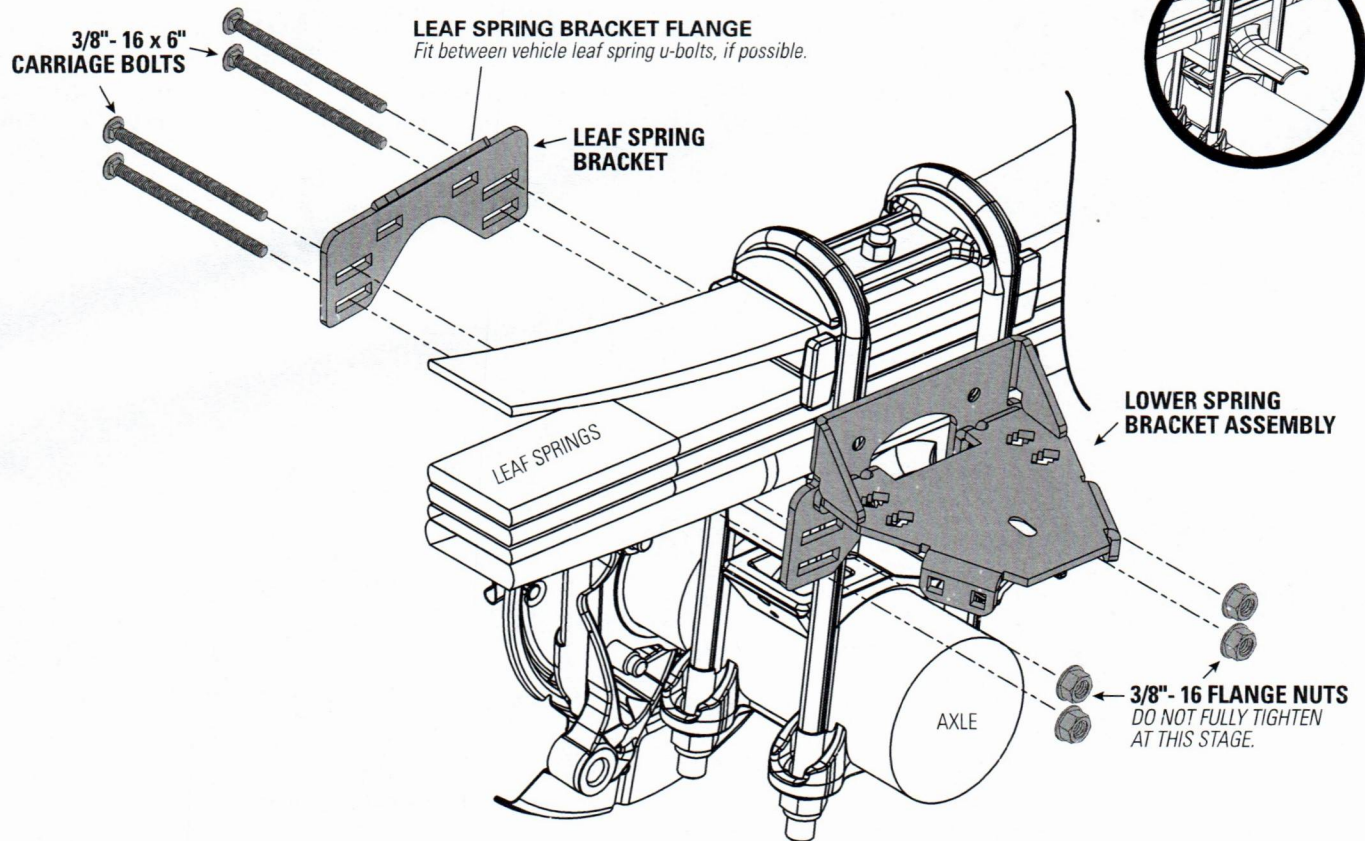



- 1** Remove air spring and fastener from lower bracket assembly.
- 2** Install the lower bracket assembly so that it is tight against the vehicle jounce tongue and leaf spring stack.
- 3** Do not fully tighten at this stage. You will remove the assembly after the next step.

Continue to bracket measuring instructions step 8 on page 17.



5b

DRY FIT AIR SPRING

Support bracket version only

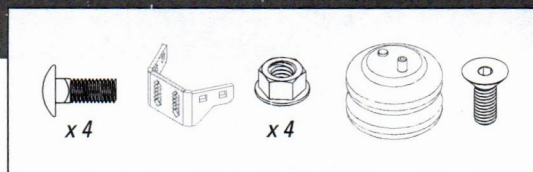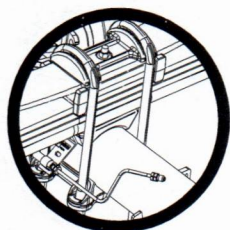

IF CARRIAGE BOLTS IN STEP 7B INTERFERE WITH LEAF SPRING, 5959 SHORT SUPPORT BRACKET MAY BE ATTACHED TO EITHER SIDE OF 5958 LOWER BRACKET INSTEAD OF 5957

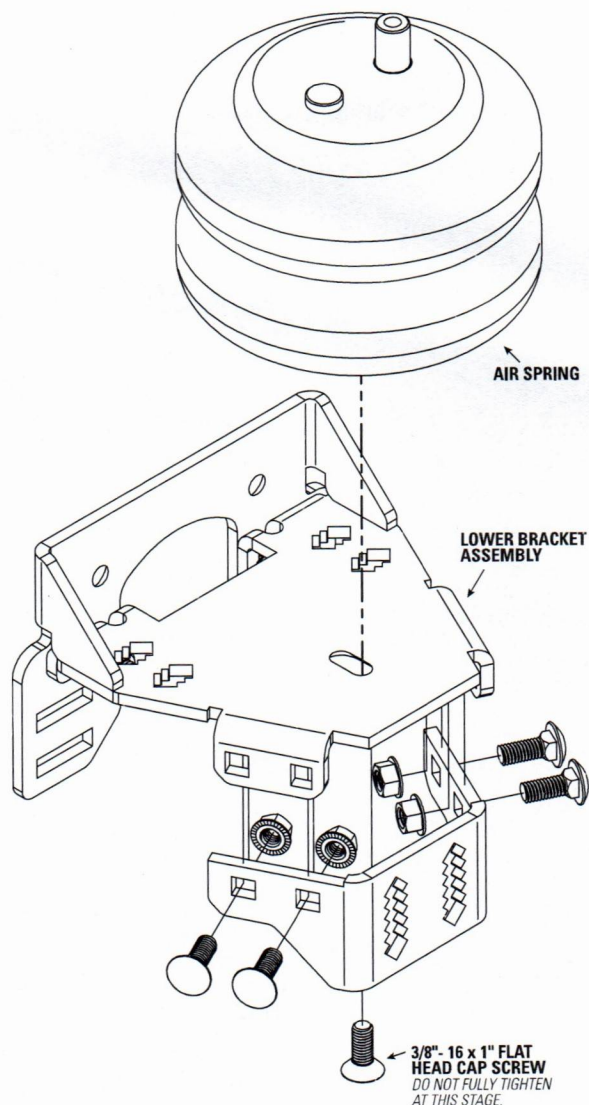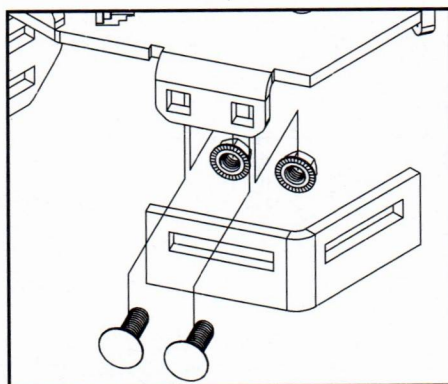



Fasten the air spring to the lower spring bracket.
DO NOT FULLY TIGHTEN AT THIS STAGE.

Support bracket version only

1 Insert the alignment pin and combo stud into the front alignment holes, as shown.

2 Position the lower bracket assembly tight to the u-bolts and assure the combo stud and alignment pin are fully seated.




3 Make alignment marks, as shown.

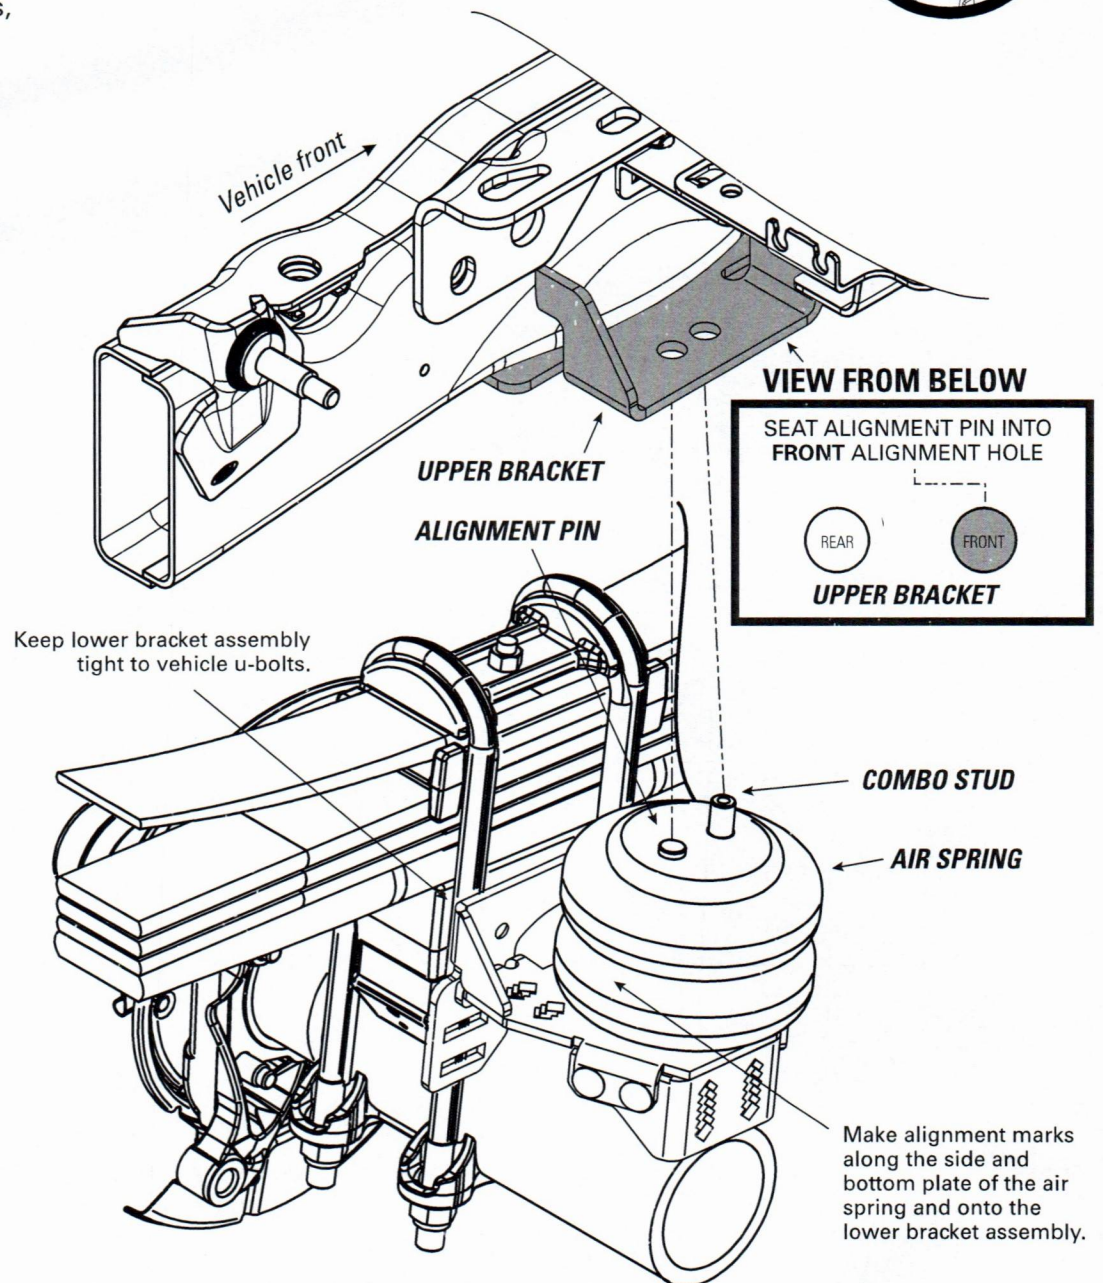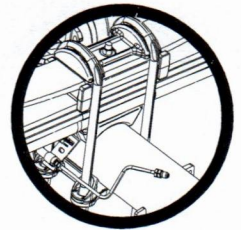


7b

DRY FIT LOWER BRACKET ASSEMBLY

Support bracket version only

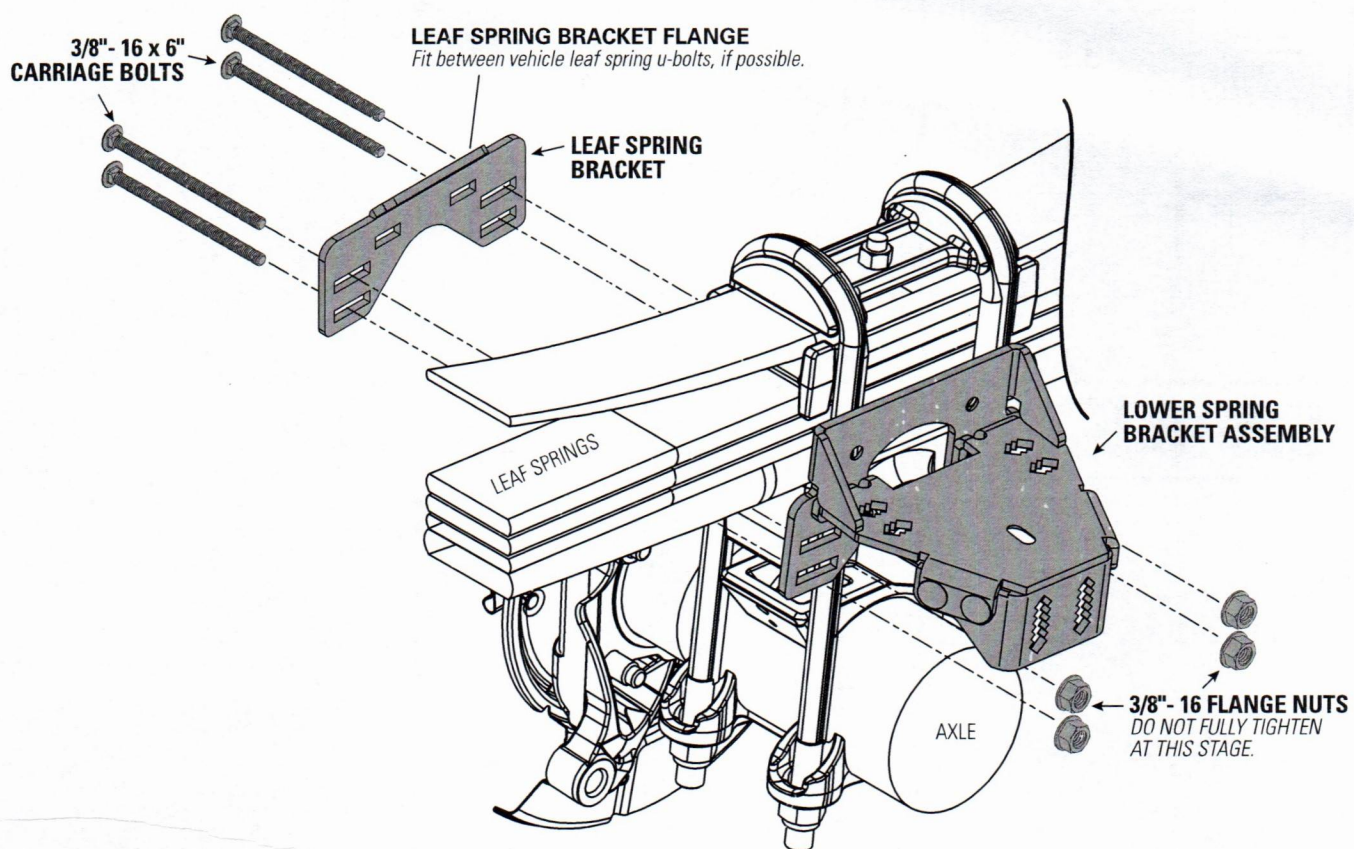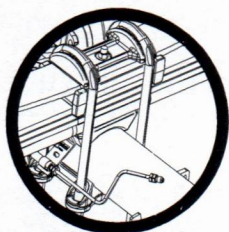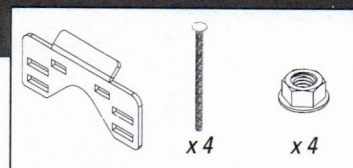


- 1** Remove air spring and fastener from lower bracket assembly.
- 2** Install the lower bracket assembly so that it is tight against the vehicle jounce tongue and leaf spring stack.
- 3** Do not fully tighten at this stage. You will remove the assembly after the next step.

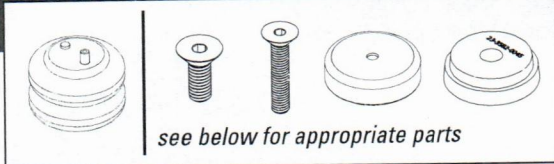


With vehicle unloaded on level ground and supporting its own weight, measure the distance between the bottom of the upper bracket and the top of the lower bracket. Use your measurement to follow the appropriate steps below.


STANDARD INSTALLATION

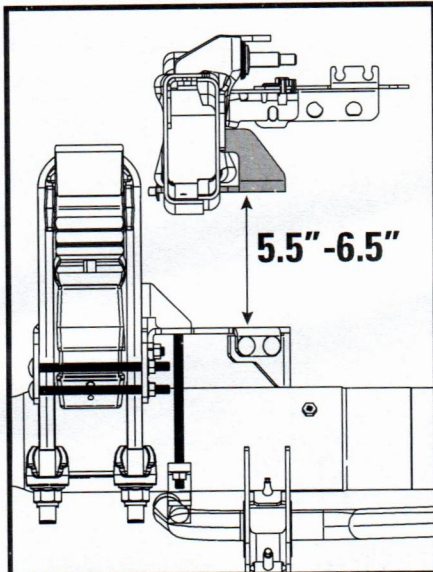


5.5"-6.5"

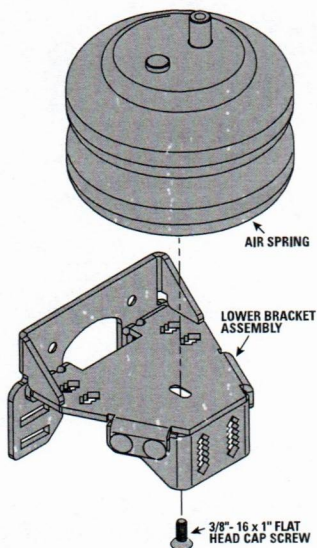


INSTALLATION WITH SPACER

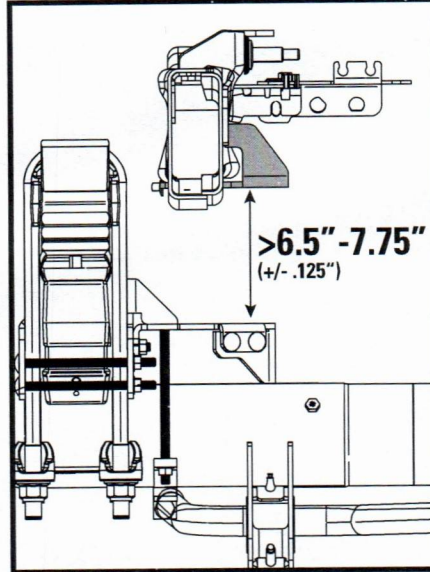

> 6.5"-7.75"

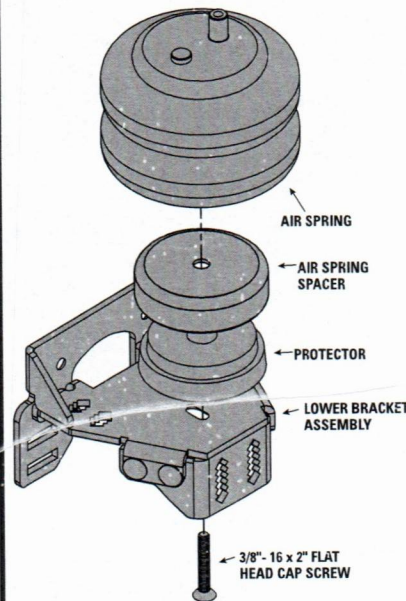

LARGER SPACER REQUIRED

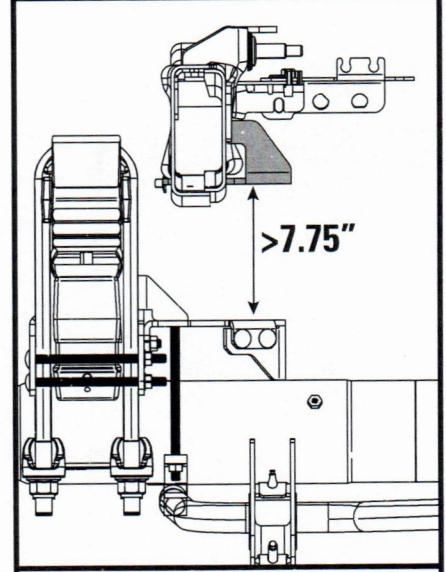

> 7.75"

See Firestone catalog to order correct spacer to achieve the proper 5.5"-6.5" distance.

! THE SUPPORT BRACKET VERSION IS SHOWN. MEASUREMENT PROCEDURE IS SAME FOR EITHER CONFIGURATION.

! YOUR ALIGNMENT MARKS MUST LINE UP BEFORE FULLY TIGHTENING THE CAP SCREW.

9


INSTALL AIR SPRING TO UPPER BRACKET



INSTALLING THE RIGHT SIDE? REMEMBER TO INSTALL THE HEAT SHIELD IN STEP 11 FIRST!

1 Install the air spring combo stud into the **front** alignment hole in the upper bracket. Fully-seat the air spring alignment pin into the **front** alignment hole.


2 Fully tighten the top of the air spring to the upper bracket.

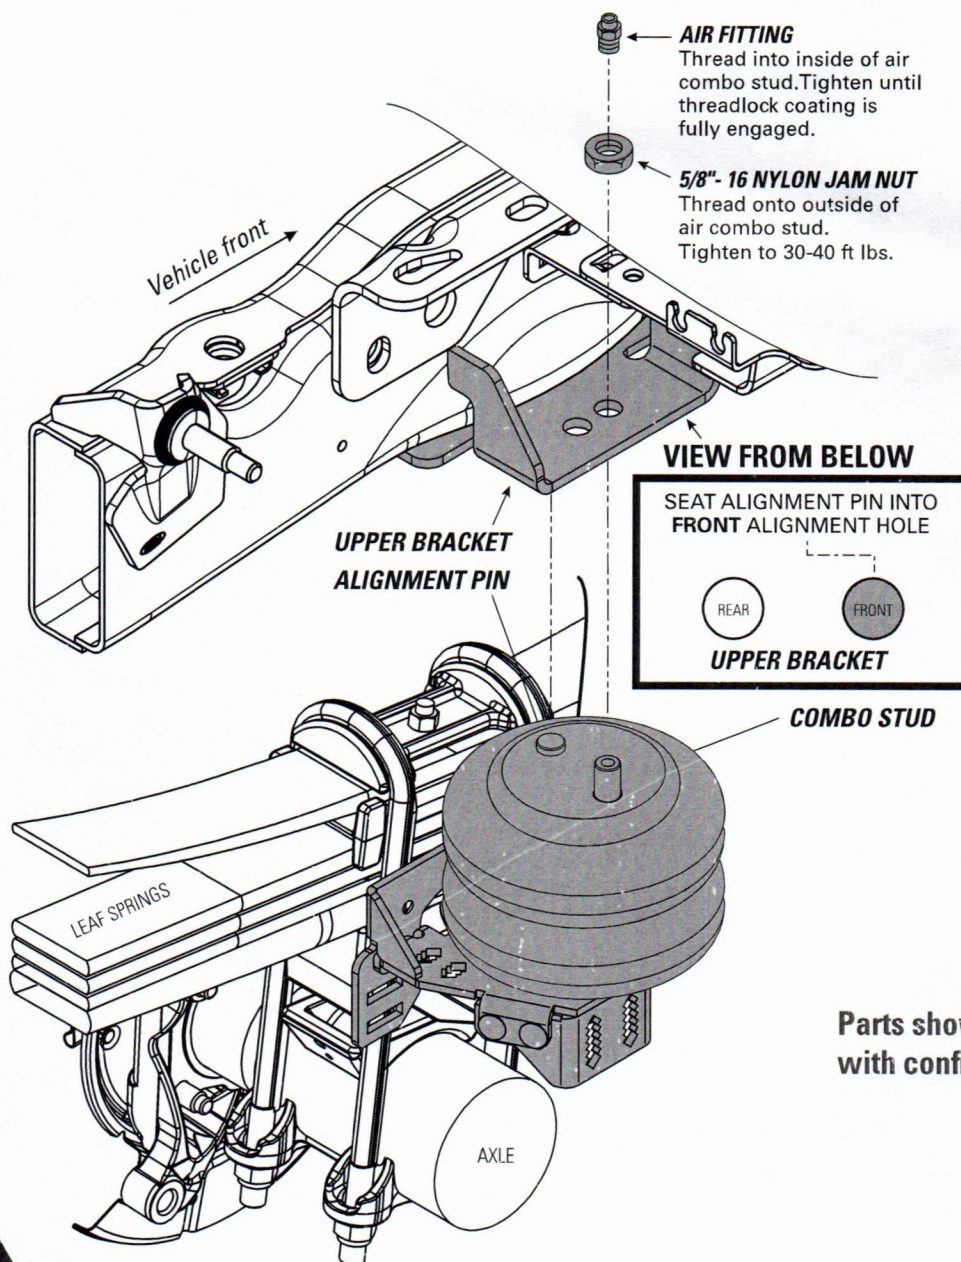

Parts shown will vary
with configuration




ALIGNMENT PIN ON AIR SPRINGS MUST BE INSTALLED TO FULLY SEAT INTO THE FRONT ALIGNMENT HOLE IN THE UPPER BRACKET. FAILURE TO DO SO WILL CAUSE IT TO BE PUSHED INTO THE BEAD PLATE, CREATING AN AIR LEAK, AND RESULTING IN AN AIR SPRING FAILURE THAT IS **NOT WARRANTABLE**. **THE ALIGNMENT PIN CANNOT HOLD 2,500 LBS! IT IS USED FOR ALIGNMENT ONLY!**

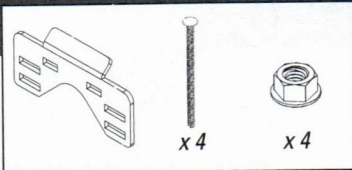

1 Place the lower bracket assembly on top of the jounce bumper tongue and against the inboard side of the vehicle leaf spring stack.

2 Place the leaf spring bracket on the outboard side of the leaf spring stack. If possible, fit the leaf spring bracket flange between the vehicle leaf spring u-bolts.

3 Install the fasteners as shown.

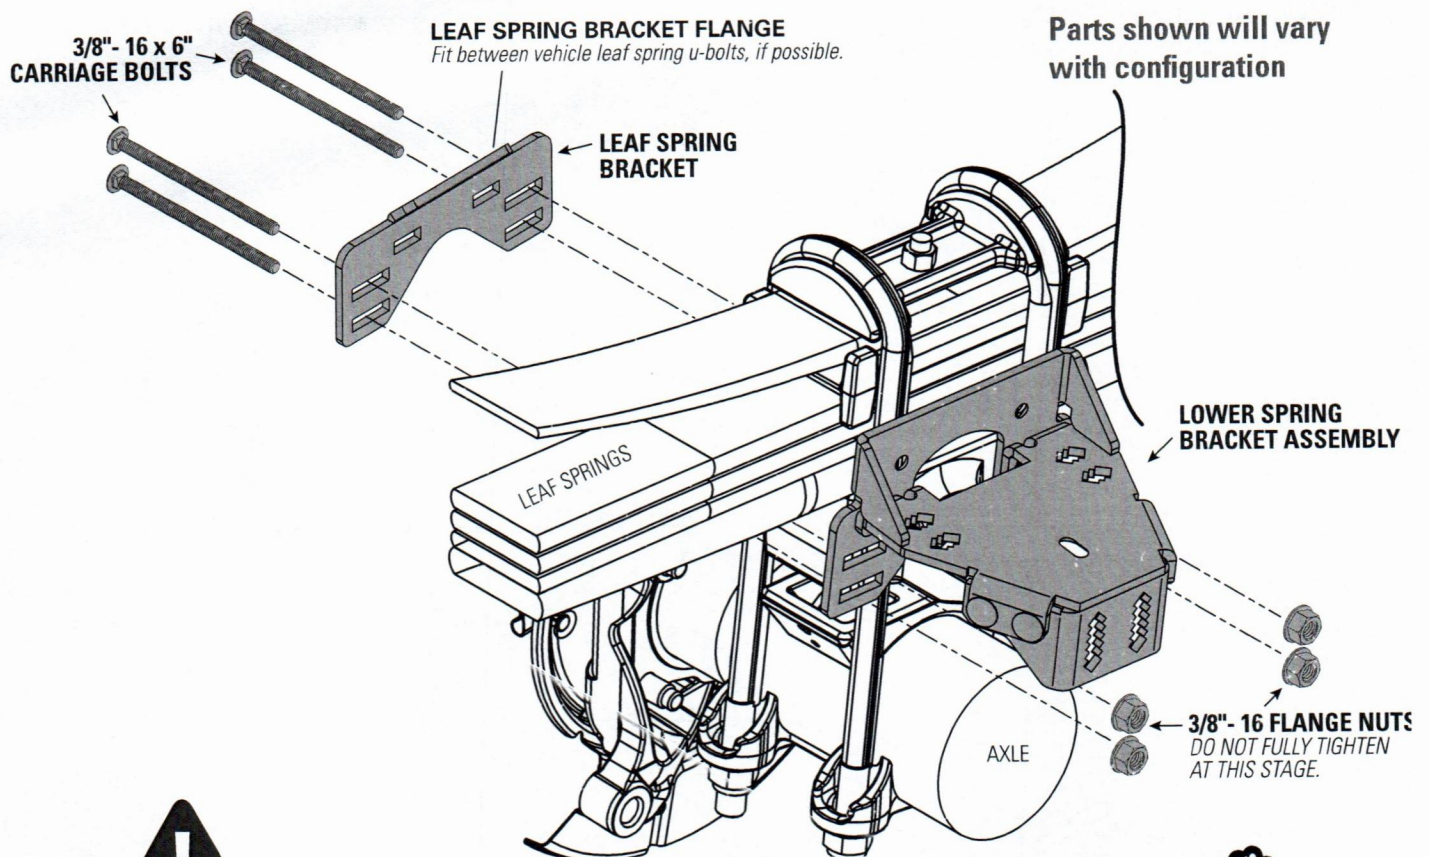


USE YOUR HAND TO CHECK FOR THE PROPER CLEARANCE AROUND THE AIR SPRING. IF YOUR HAND DOES NOT FIT BETWEEN THE AIR SPRING AND OTHER COMPONENTS, IT WILL RUB!



AWESOME! You're done with the left side. The right side is the same, with the addition of the heat shield. See step 8, then complete the steps for the right side installation.

11

INSTALL AXLE STRAP BRACKET

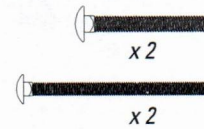

1 Link two pairs of universal axle brackets together to form an "M" as shown below.

2 Insert large carriage bolt into the hole of the lower bracket closest to the leaf spring and axle tube with the bolt as upright as possible.

3 Loosely attach one pair of universal axle brackets across the bottom with a small carriage bolt with a flange lock nut.


4 Connect both pairs of universal axle brackets across the bottom with a small carriage bolt and a flange lock nut.

5 Completely tighten all fasteners to 23 ft-lb.




THE SUPPORT BRACKET VERSION IS SHOWN. THE INSTALLATION IS THE SAME FOR EITHER CONFIGURATION.

LARGE CARRIAGE BOLT

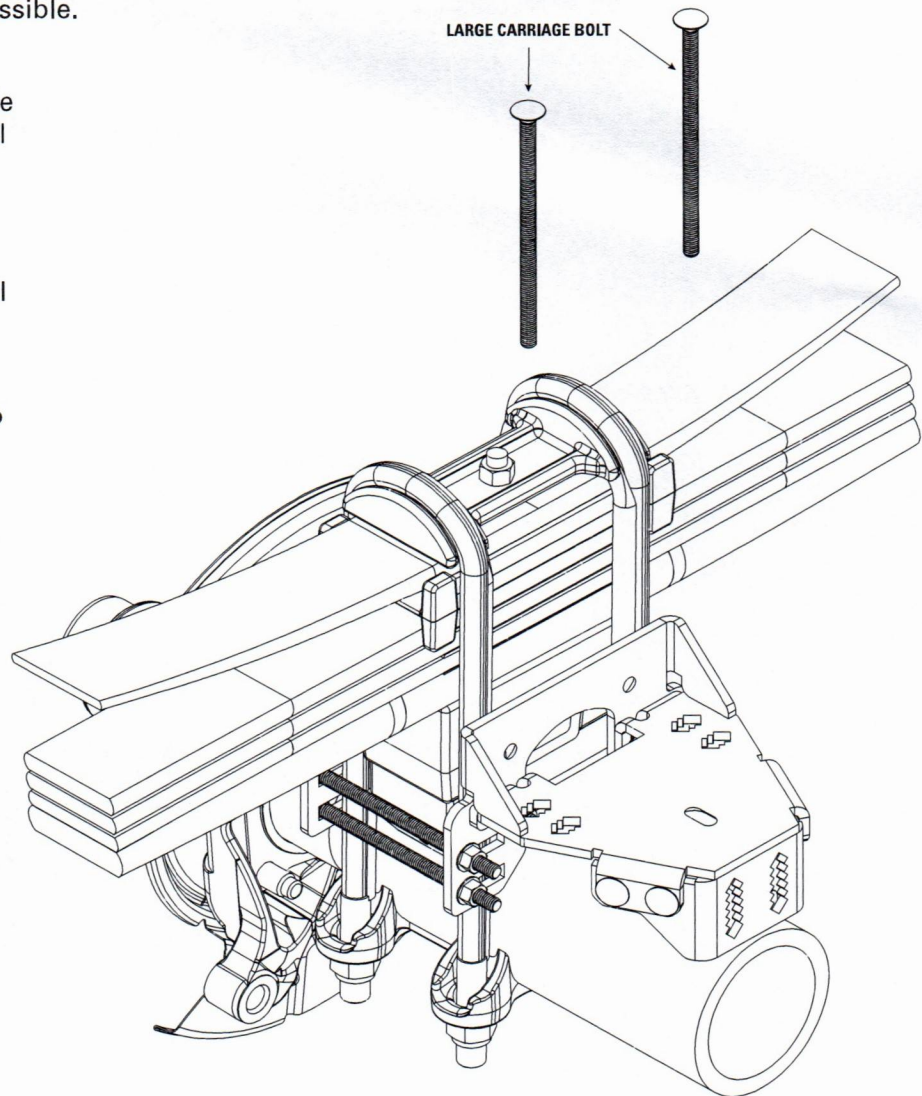

INSERT 5942 LEAF SPRING BRACKET TAB BETWEEN U-BOLTS IF POSSIBLE

5958 LOWER BRACKET **MUST** BE IN FULL CONTACT WITH AND SUPPORTED BY JOUNCE STRIKER

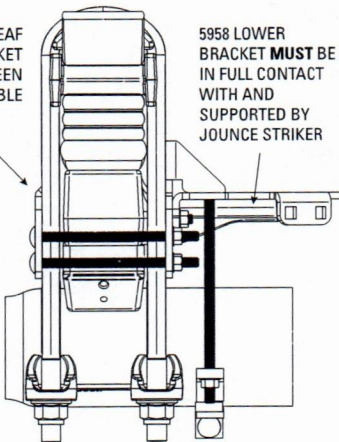

THE JOUNCE STRIKER VERSION IS SHOWN BUT THE INSTALLATION IS THE SAME FOR EITHER CONFIGURATION


LINKED UNIVERSAL AXLE BRACKETS

SMALL CARRIAGE BOLT

3/8" FLANGE LOCK NUT




RIGHT SIDE INSTALLATION MUST INCLUDE HEAT SHIELD!

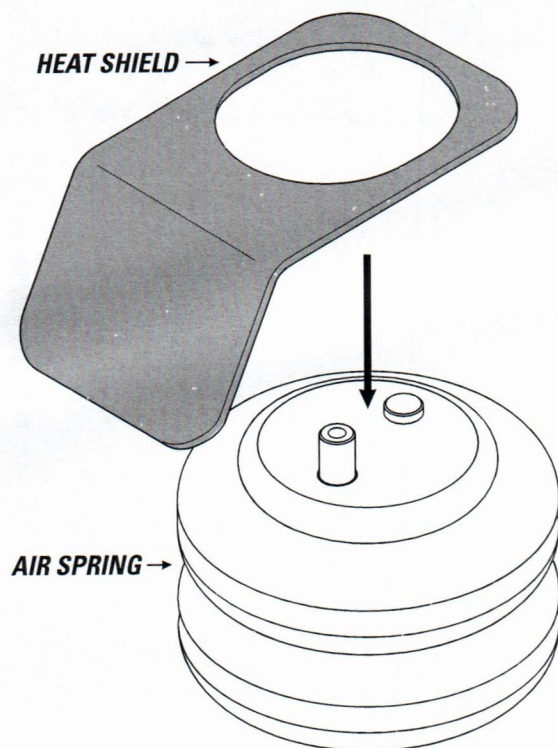

Parts shown will vary
with configuration

Position heat shield to
closest point of exhaust.
DO NOT PLACE
DIRECTLY ABOVE AXLE.

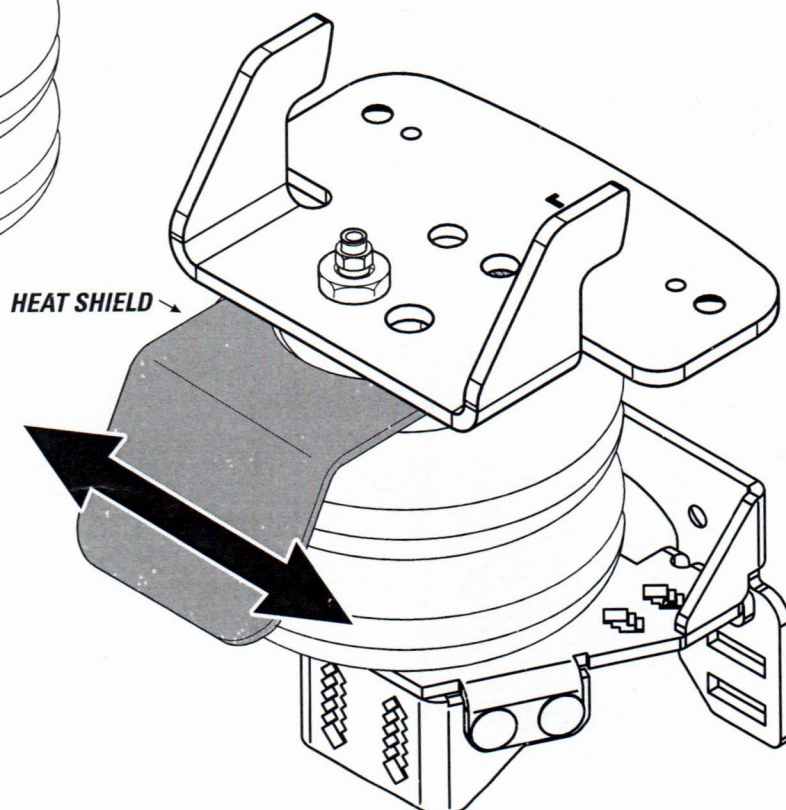

13

INSTALL INFLATION VALVES



x 2



x 4



x 2




x 2




IF USING THE OPTIONAL NO-DRILL INFLATION VALVE BRACKET, CHOOSE OPTION 1. IF DRILLING, CHOOSE OPTION 2. **INFLATION VALVES MUST BE ACCESSIBLE BY AN AIR CHUCK.**

- 1 Secure the air inflation valve bracket to a protected, secure location.

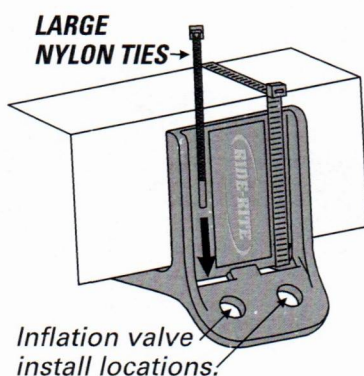


- 2 Select a protected location to install the inflation valves, such as the bumper or the body of the vehicle.

Drill two 5/16" holes for inflation valve install locations.

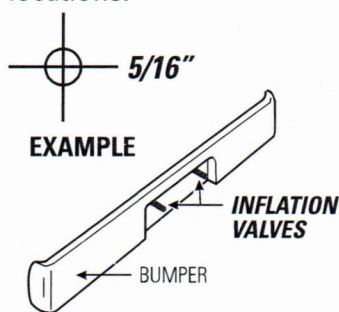


INFLATION VALVE ASSEMBLY

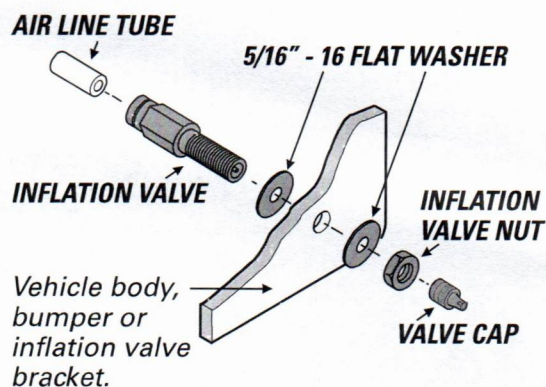

14

CUT THE AIR LINE TUBE INTO TWO EQUAL LENGTHS

- 1 Match air line tube ends.

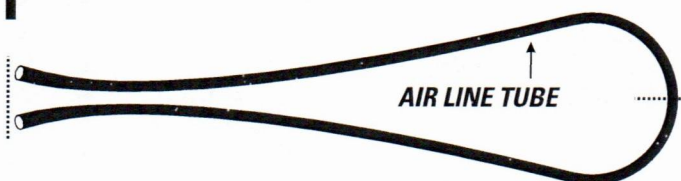

- 2 Find center of air line tube, make a square cut with tube cutter or sharp utility knife.




DO


Make sure the cut is as square as possible. Use a tube cutter or sharp utility knife.

DON'T

Fold or kink the air line tube. Cut the air line tube at an angle. Use pliers, scissors, snips, Saws, or side cutters.

PROPER AND IMPROPER CUTS IN THE AIR LINE TUBE

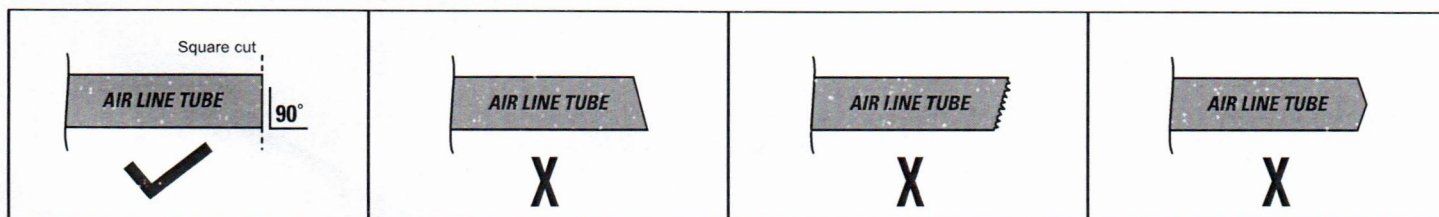

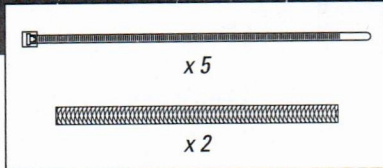


Air line tube routes will vary, depending on your truck, and requires you to choose the best path from the air springs to the inflation valves. Use the instructions below to help you choose.

DO


Select routes protected from heat, Debris, and sharp edges.
Use thermal shields near heat sources.
Use nylon ties to secure the air line tube.

DON'T

Bend or sharply curve air line tubes.
Leave air line tube exposed to sharp edges.
Use unnecessary lengths of air line tube.
Route air line tube near moving parts.
Let air line tube hang unsecured from vehicle.
Scar air line tube while routing.

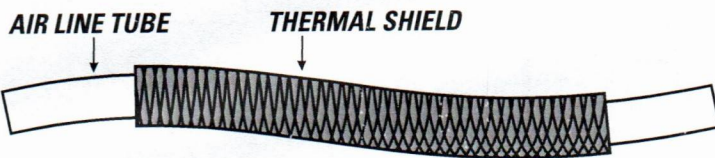


USE SUPPLIED THERMAL SHIELDS WHEN AIR LINE TUBE RUNS **WITHIN 6 INCHES** OF HEAT SOURCES.

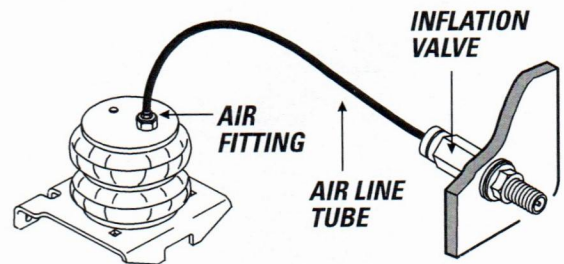


INSTALLING AIR LINE TUBE INTO AIR FITTINGS AND INFLATION VALVE


1 Insert end of air line tube into air fitting.

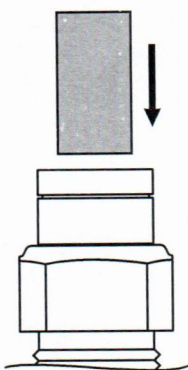

2 Push air line tube into air fitting as far as possible.

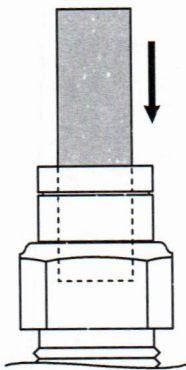


3 Gently pull on the air line tube to check for a secure fit.

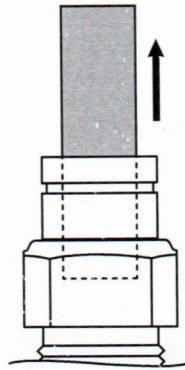



AIR LINE REMOVAL

To remove, push down collar and gently pull air line tube away.

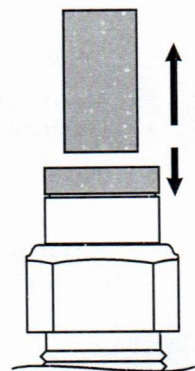


Removal Tip: Use a 1/4", 5/16", or 6mm open-ended wrench to push the collar down.

- 1** Place an air chuck onto the inflation valve and fill the system to **70 PSI**.

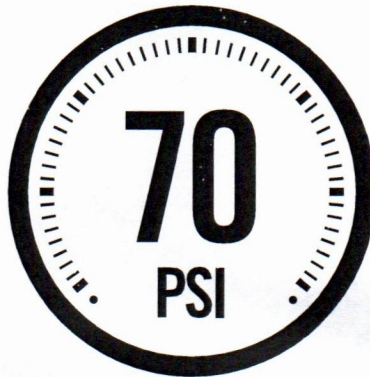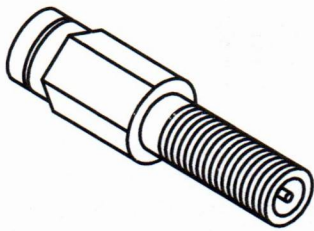


AIR SPRINGS INFLATE QUICKLY. CHECK AIR PRESSURE WHILE INFLATING.


- 2** Spray fittings with soap and water mixture or glass cleaner.

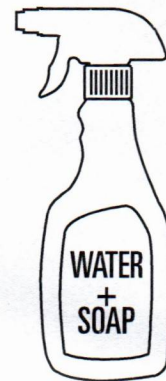

- 3** Observe bubbles.

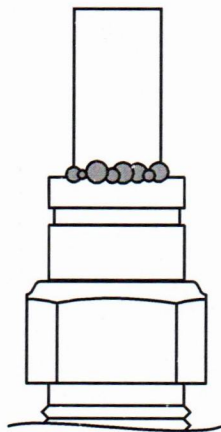

**SMALL SOAP BUBBLES
THAT DO NOT EXPAND**

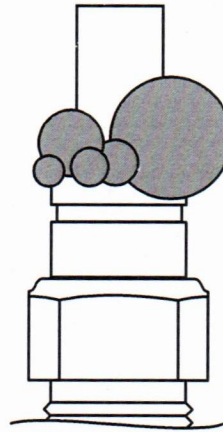

**SOAP BUBBLES
THAT EXPAND**




NO LEAKS?

Congratulations! Continue to step 18 to finish installation. Review the Operating Instructions.

LEAK?


Bummer. Continue to step 17 to fix the leak.

- 1** Press the air valve on end of inflation valve to release all air pressure.

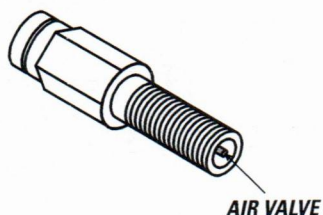


EXHAUST ALL AIR FROM THE SYSTEM PRIOR TO RELEASING AIR LINE TUBES FROM AIR FITTINGS.

LEAK AT AIR LINE TUBE AND AIR FITTING

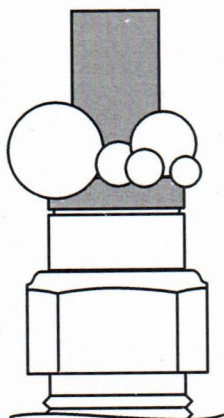

Release air line tube (see page 15). Review proper cuts and procedures in step 13. Repeat steps 15 and 16.

LEAK AT BASE OF AIR FITTING ON AIR SPRING

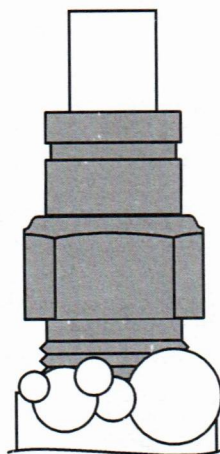

Tighten air fitting one turn or until leak stops.

LEAK OUT OF THE VALVE CORE ON INFLATION VALVE



Tighten valve core with valve core wrench on inflation valve cap.

STILL HAVE A LEAK?

Refer to the Troubleshooting section of the Instruction Manual.