

SEAT COVERS

BY

fia

FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

**INSTALLATION INSTRUCTIONS
FOR
Oe37-26**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A) BACKREST COVER – BUCKETS / “40” PORTION X 2:

- | | |
|---|--------------------------------------|
| 1) Remove head rest (see note) | 5) Adjust Velcro to equalize tension |
| 3) Slip cover over backrest. (see air bag warning below) | 6) Replace headrests (see note) |
| 4) Tuck flaps under backrest and attach to Velcro at back | |

B) CUSHION COVER - BUCKETS / “40” PORTION X 2:

- | | |
|---|--|
| 1) Align cover on seat and position seat belt buckle through opening provided | 4) Pass side straps through the opening between the molded plastic and the seat. Buckle to back flap |
| 2) Pass the back flap on the cover through the crevice | 5) Adjust straps and buckles to equalize tension |
| 3) Pass the front strap under seat. Buckle to back flap | |

C) CUSHION COVER – “20” PORTION (TR47-24, Oe37-24, SP87-24, TR47-25, Oe37-25, SP87-25):

- | | |
|---|---|
| 1) Center cover on the seat | 4) Adhere velcro on the sides and back of cover to carpeting under the seat cushion |
| 2) Open cushion lid to up position | |
| 3) Tuck the back part of cushion cover through seat crevice | |

D) BACKREST COVER – “20” PORTION (TR47-25, Oe37-25, SP87-25):

- 1) Slip cover over backrest and attach velcro

E) BACKREST COVER – “20” PORTION (TR47-24, Oe37-24, SP87-24):

 
- | | |
|---|--|
| 1) Open armrest / storage compartment | 4) Snug cover at back of console so the velcro on the cover is positioned through the crevice where lid and armrest / console are hinged |
| 2) Center cover under armrest | 5) Secure the adhesive velcro on the inside back of console |
| 3) Position adhesive backed velcro (supplied) to align with the velcro on cover | |

F) ARMREST / STORAGE COMPARTMENT LID COVER (TR47-24, Oe37-24, SP87-24):

- | | |
|---|---|
| 1) Open armrest / storage compartment | 4) Position adhesive backed velcro (supplied) on underside of lid to align with the velcro tabs on cover and attach |
| 2) Slip cover over lid | |
| 3) Position velcro tabs on cover on both sides of the hinge | |

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

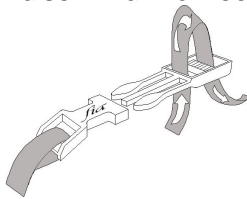

3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
B) Replace headrests

 
2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)

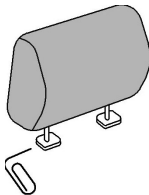

WARNING: DO NOT BLOCK AIR BAGS

WHEN INSTALLING SEAT COVERS:

- 1) Make sure that the openings in the sides of the seat covers are positioned so that seat covers DO NOT block or interfere with the deployment of the air bag.
- 2) Constantly check your seat covers to assure they haven't moved and the air bag is properly positioned in the opening.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.