



FEATURING
SUPER-GRIP®
 THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
 FOR
 SL67-26

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A) BACKREST COVER – BUCKETS / “40” PORTION X 2:

- | | |
|---|--|
| 1) Remove head rest (see note) | 5) Adjust hook and loop fastener to equalize tension |
| 3) Slip cover over backrest. (see air bag warning below) | 6) Replace headrests (see note) |
| 4) Tuck flaps under backrest and attach to hook and loop fastener at back | |

B) CUSHION COVER - BUCKETS / “40” PORTION X 2:

- | | |
|---|--|
| 1) Align cover on seat and position seat belt buckle through opening provided | 4) Pass side straps through the opening between the molded plastic and the seat. Buckle to back flap |
| 2) Pass the back flap on the cover through the crevice | 5) Adjust straps and buckles to equalize tension |
| 3) Pass the front strap under seat. Buckle to back flap | |

C) CUSHION COVER – “20” PORTION (TR47-24, Oe37-24, SP87-24, TR47-25, Oe37-25, SP87-25):

- | | |
|---|---|
| 1) Center cover on the seat | 4) Adhere hook and loop fastener on the sides and back of cover to carpeting under the seat cushion |
| 2) Open cushion lid to up position | |
| 3) Tuck the back part of cushion cover through seat crevice | |

D) BACKREST COVER – “20” PORTION (TR47-25, Oe37-25, SP87-25):

- 1) Slip cover over backrest and attach hook and loop fastener

E) BACKREST COVER – “20” PORTION (TR47-24, Oe37-24, SP87-24):


- | | |
|---|--|
| 1) Open armrest / storage compartment | 4) Snug cover at back of console so the hook and loop fastener on the cover is positioned through the crevice where lid and armrest / console are hinged |
| 2) Center cover under armrest | 5) Secure the adhesive hook and loop fastener on the inside back of console |
| 3) Position adhesive backed hook and loop fastener | |
| 4) (supplied) to align with the hook and loop fastener on cover | |

F) ARMREST / STORAGE COMPARTMENT LID COVER (TR47-24, Oe37-24, SP87-24):

- | | |
|---|---|
| 1) Open armrest / storage compartment | 4) Position adhesive backed hook and loop fastener (supplied) on underside of lid to align with the hook and loop fastener tabs on cover and attach |
| 5) Slip cover over lid | |
| 6) Position hook and loop fastener tabs on cover on both sides of the hinge | |

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

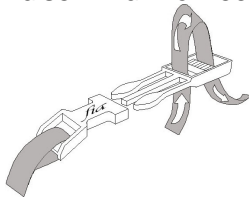


2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
 - Lift off

OR

- B) - Push in side release buttons
 - Lift off

(If unable to remove consult dealership)

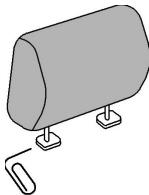

3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
 B) Replace headrests

WARNING: DO NOT BLOCK AIR BAGS

WHEN INSTALLING SEAT COVERS:

- 1) Make sure that the openings in the sides of the seat covers are positioned so that seat covers DO NOT block or interfere with the deployment of the air bag.
- 2) Constantly check your seat covers to assure they haven't moved and the air bag is properly positioned in the opening.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.

Fia provides the best in custom seat covers equipment.