



WHEEL SPACERS

(6-LUG)

INSTALLATION INSTRUCTIONS

CONTENTS

- (2) Wheel Spacers
- (1) Red Thread Locker
- (12) Lug Nuts

TOOLS REQUIRED

- Jack
- Jack Stands
- Lug Wrench
- Torque Wrench
- Wire Brush

SKU # T573993

STEP 1



Raise the vehicle so that the tires are just off the ground. Support the vehicle with jack stands.

STEP 2



Using a lug wrench, remove the wheel.



STEP 3

Using a wire brush, clean any loose rust from the axle hub.



STEP 4

Apply a drop of the supplied thread locker on each wheel stud.

STEP 5

Install the wheel spacer using the supplied lug nuts. Tighten all lug nuts by hand in a star pattern. Then, torque the lug nuts as follows:

F-150: 150 ft. lbs

STEP 6

Reinstall the original wheel on the new studs. Then, torque the lug nuts as follows:

F-150: 150 ft. lbs