



FUEL DOOR

(2015-2023+ F-150 RAPTOR)

INSTALLATION INSTRUCTIONS


CONTENTS

(1) Fuel Door

TOOLS REQUIRED


Flathead Screwdriver

STEP 1

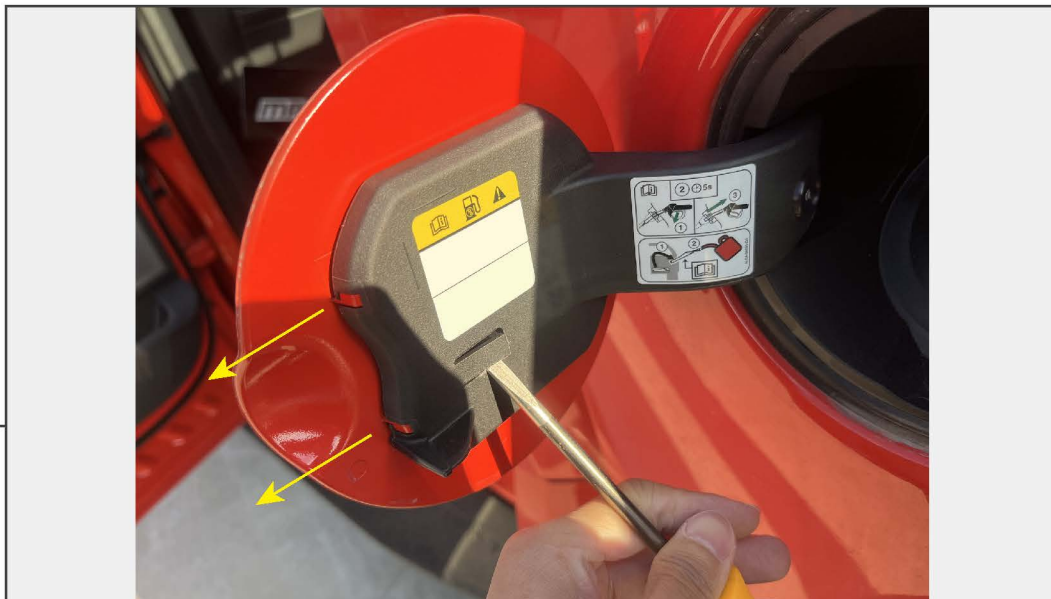


Using a flathead screwdriver, lift the plastic retaining tab on the fuel door. With the retaining tab lifted, slide the fuel door away from the vehicle.

STEP 2

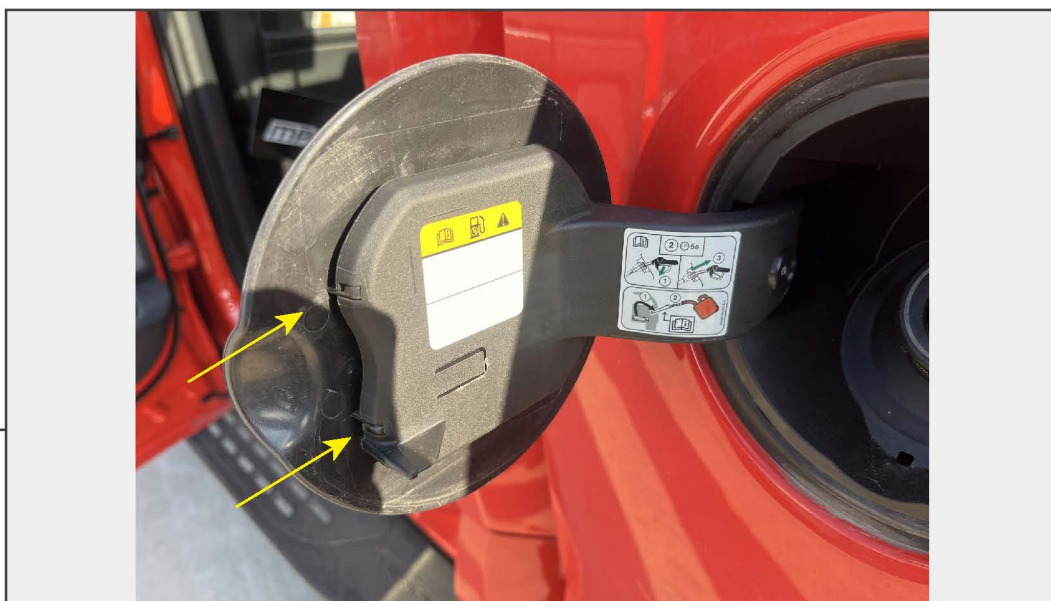

Slide the new fuel door onto the fuel door arm, the retaining arm will audibly click when the door is secure.

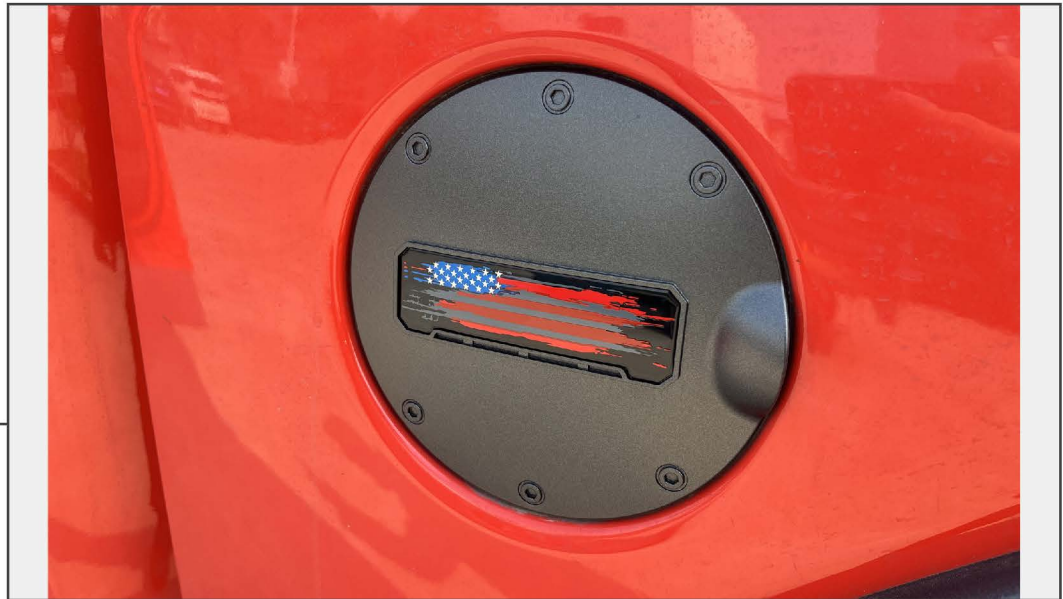

STEP 3

Installation is now complete.