



# SPYDER™

## SKU# 5084583



SCAN THE QR CODE TO  
VIEW THE INSTALL VIDEO

### PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

### FITMENT:

• 2015-2020 CHEVY TAHOE / SUBURBAN



FACEBOOK.COM/SPYDERAUTO

LINKEDIN.COM/COMPANY/SPYDER-AUTO

INSTAGRAM.COM/SPYDERAUTO

TWITTER.COM/SPYDERAUTO

TIKTOK.COM/@SPYDERAUTO



SCAN THE QR CODE  
TO VISIT OUR WEBSITE

**WARNING:** BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM [TECHSUPPORT@SPYDERAUTO.COM](mailto:TECHSUPPORT@SPYDERAUTO.COM). IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO [WWW.P65WARNING.CA.GOV](http://WWW.P65WARNING.CA.GOV)




**TOOLS REQUIRED:**

- RATCHET
- T-15 TORX SOCKET
- PANEL POPPER


**STEP 1:**
**DISCONNECT THE NEGATIVE BATTERY TERMINAL**



**STEP 2:**  
OPEN THE TRUNK

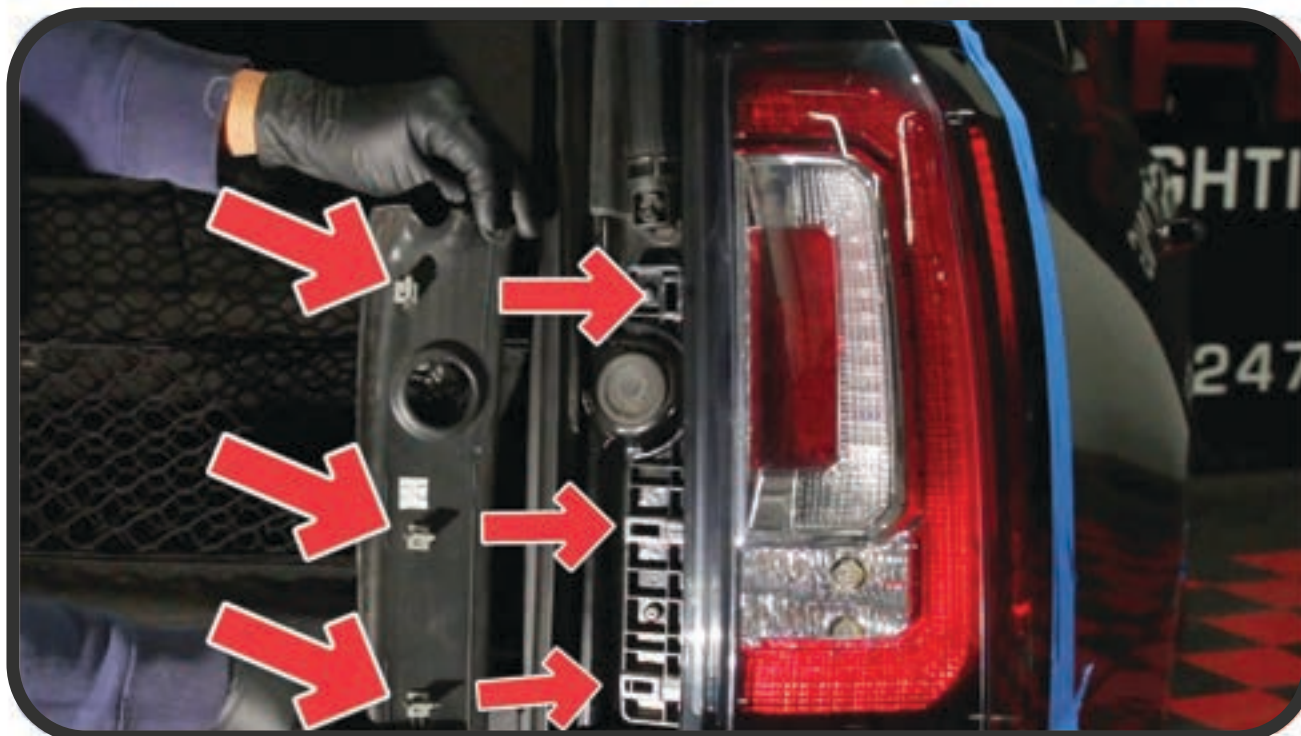

**STEP 3:**  
REMOVE THE TRIM PANEL (HELD ON BY THREE PUSH CLIPS)





**STEP 4:**  
REMOVE TWO T15 TORX BOLTS



**STEP 5:**  
LAY ON THE FLOOR, LOOK FOR THE TAIL LIGHT HARNESS

**STEP 6:**

**PUSH THE RED TAB DOWN TO UNLOCK THE CLIP**


**STEP 7:**

**UNCLIP THE PLUG**




**STEP 8:**

**REMOVE TAIL LIGHT. (PULL TOWARDS REAR OF CAR)**

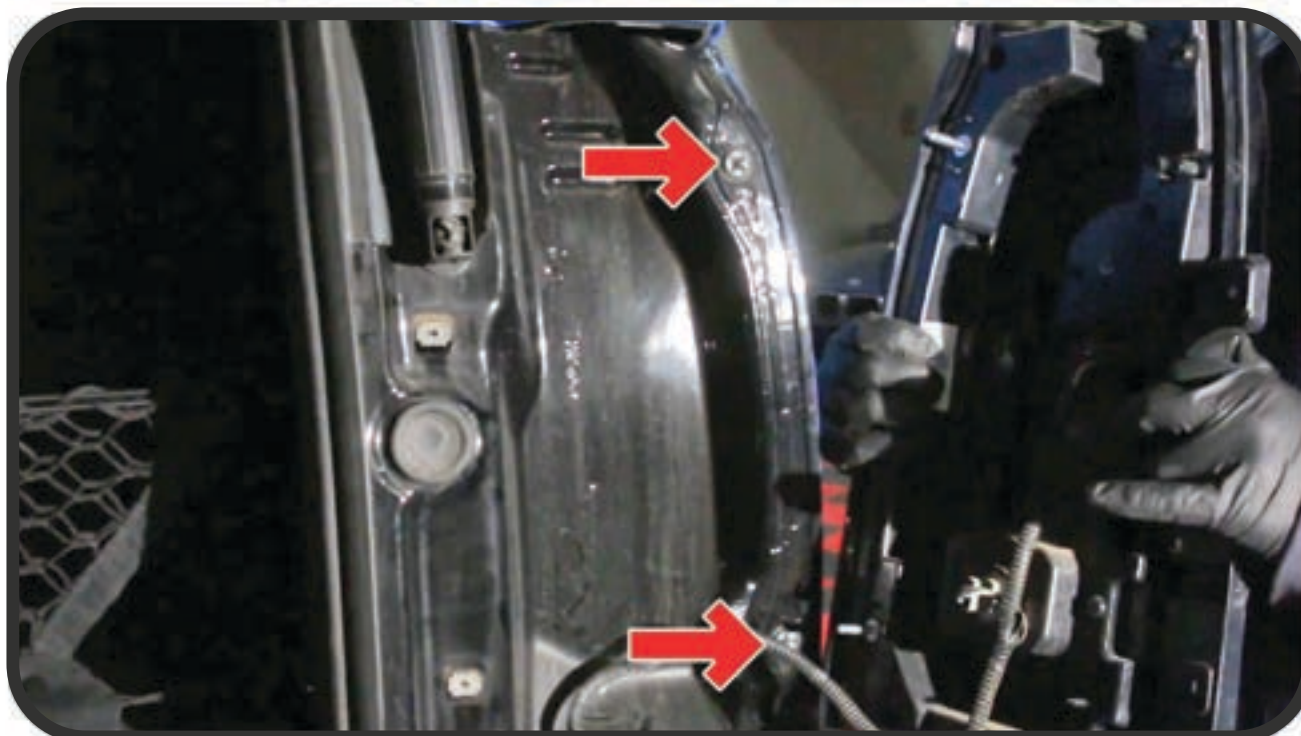
**STEP 9:**

**TAIL LIGHT IS HELD ON BY THESE PUSH CLIPS**



**STEP 10:**

**GENTLY PULL UP/OUT WIRING HARNESS WITH LIGHT**



**STEP 11:**

**BRING NEW LIGHT OVER, FEED THE WIRING HARNESS DOWN**



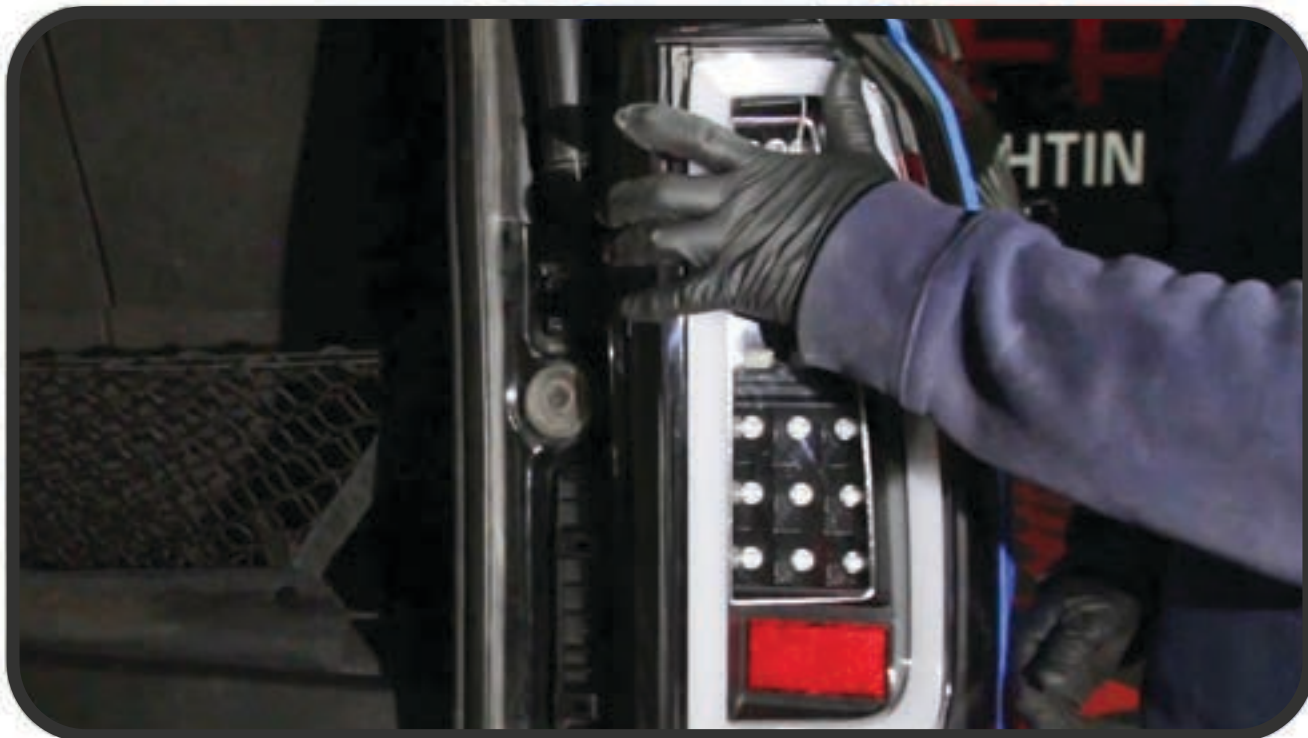

**STEP 12:**  
SEAT THE NEW LIGHT

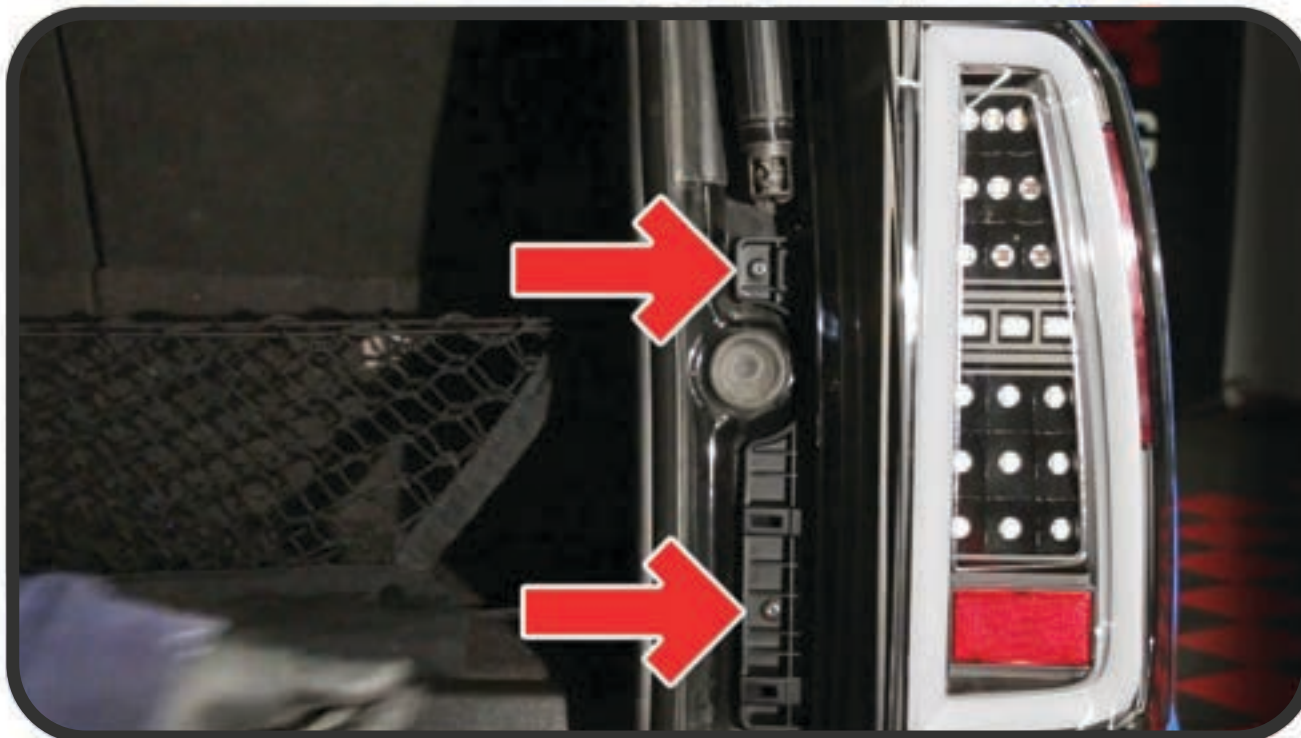

**STEP 13:**  
REINSTALL THE TWO T15 BOLTS






**STEP 14:**  
REINSTALL THE TRIM PANEL



**STEP 15:**  
GO UNDER THE CAR AND PLUG IN THE HARNESS

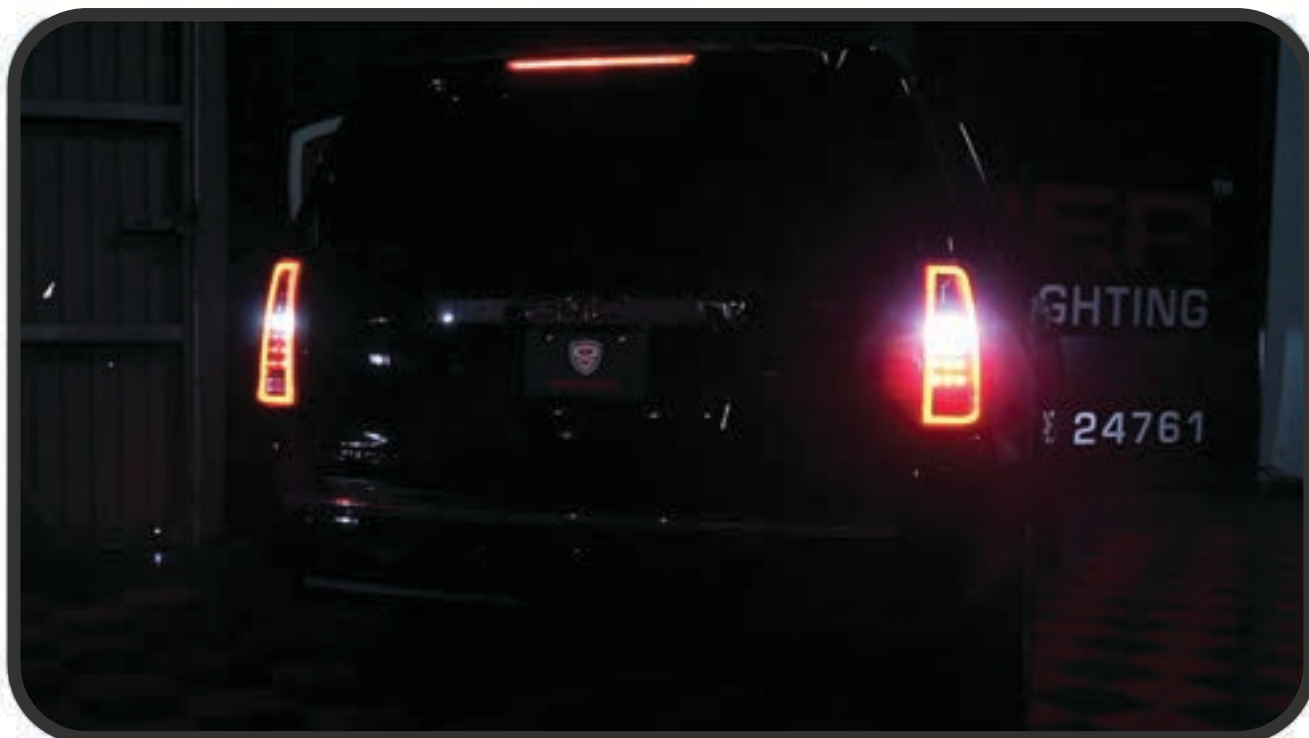
**STEP 16:**

**RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY**