


# UNIVERSAL FASCIA FITTING INSTRUCTIONS

## Step 1

- Select a suitable location for mounting the Remote Head.


**NOTE:** Ensure that there is enough space behind the mounting location to fit the Tow-Pro control head, switch insert and remote head cable before drilling any holes.

- Cut out the template (1) from the bottom of these instructions.
- (check template scale is printed correct full size)
- Position and place the template with masking tape, ensuring that both axis are vertical and horizontal in the vehicle as shown.

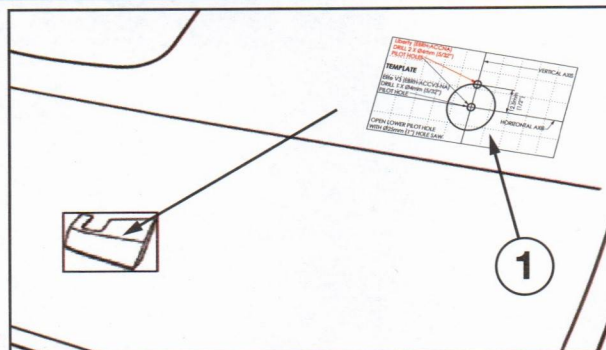

## Step 2

- It is recommended that the Trim Panel is removed from the vehicle for the drilling process, OR
- Ensure that the area underneath the drill area is clear of any wiring or other parts that may be damaged.
- For a Tow-Pro Liberty (EBRH-ACCNA) drill two 4mm (5/32") Diameter pilot holes shown on the template.
- For a Tow-Pro Elite V3 (EBRH-ACCV3-NA) only drill the lower pilot hole shown on the template.
- Open up the lower large hole with a 25mm (1") Diameter Hole Saw (1) as shown.

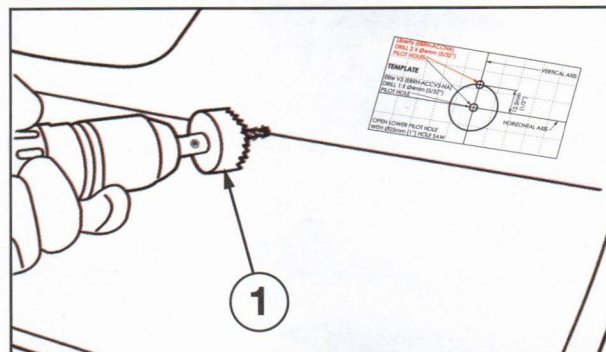


## Step 3

- Remove any burrs or other material from around the hole to ensure that the Remote Head can clip into place correctly.
- Discard/Do not fit the grey plastic Bezel/Spacer.
- Install Remote Head (1) into Fascia (2).
- Torque Nut (3) to 7.1 in-lb (0.8Nm)

**Caution: do not overtighten the Nut.**

- Fit Knob(4) (alignment info is in the Tow-Pro Elite Trailer Brake Controller User Manual).

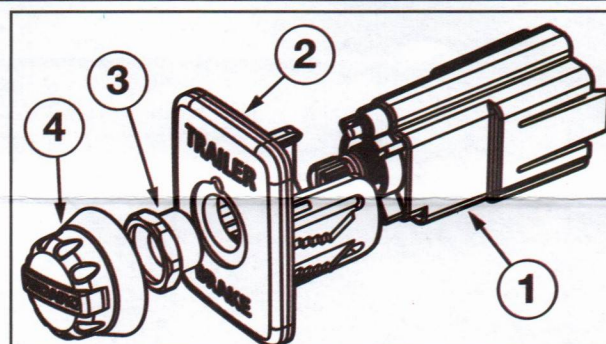

## Step 4

- Remove template.
- Pass the Data Cable (1) through the hole.
- Plug in the Data Cable Connector (1) to Remote Head (2).
- Push & Fit Fascia firmly into the hole.
- The supplied Neoprene Gaskets, may be applied behind the Fascia, to improve the fit to the mounting surface.

