



# Silver Bullet

Throttle Body Spacer

46-34010

## INSTALLATION INSTRUCTIONS

### Important!


Please verify the Parts List below and read all instruction steps before you begin installation.

(2011 Camaro V6-3.6L shown in photo)


Make	Model	Year	Engine
CADILLAC	CTS	2008-2019	V6-3.6L
CADILLAC	ATS	2013-2019	V6-3.6L
CADILLAC	XT5	2017-2024	V6-3.6L
CHEVROLET	CAMARO	2010-2024	V6-3.6L
CHEVROLET	COLORADO	2015-2020	V6-3.6L
CHEVROLET	BLAZER	2019-2024	V6-3.6L
GMC	CANYON	2015-2020	V6-3.6L
GMC	Acadia	2019-2023	V6-3.6L
PONTIAC	G8	2008-2009	V6-3.6L

1. Remove the oil cap, then lift up on front of the engine cover to remove it. Re-install the oil cap to prevent unwanted debris from falling into the engine during the installation.
2. Disconnect the crankcase hose from the air intake tube. Loosen the two hose clamps then remove the air intake tube from the throttle body and the air cleaner assembly.
3. Remove the throttle body by removing the four bolts and the bracket (on the passenger side lower corner which secures the wire connector).
4. Slide the **Silver Bullet** Spacer with a gasket on each side between the throttle body and the manifold. Make sure the engraved side is toward the throttle body. Secure it with the supplied bolts and washers. Be sure to attach the wire connector bracket to the same corner it was removed from. Tighten bolts to manufacturer's specification.
5. Reinstall the intake tube and tighten the two clamps. Reconnect the crankcase hose. Remove the oil cap, reinstall the engine cover and then reinstall the oil cap.

**Your install is now complete!** Make sure to retighten all bolts and clamps after 100 miles of driving.

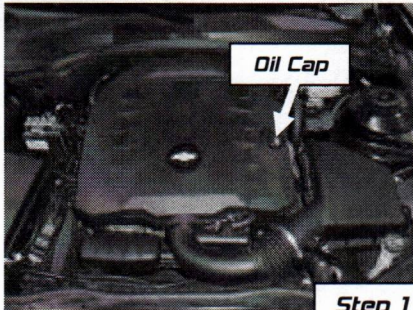


Step 1

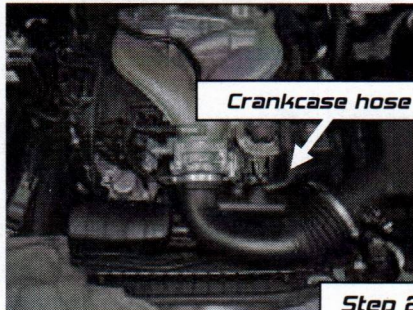


Step 2



Step 3

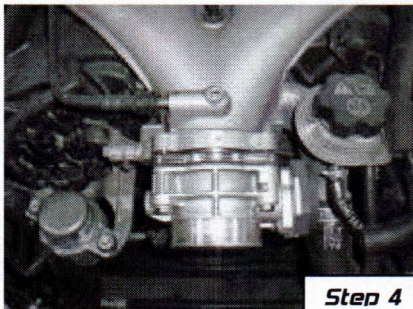

Step 4

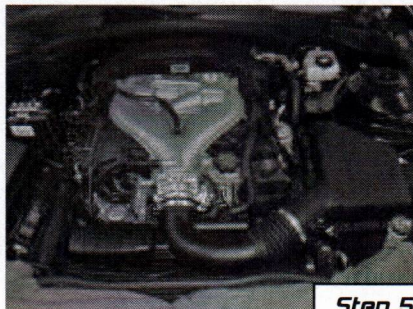

Step 5

### Parts List

- 1 **Silver Bullet** Spacer
- 2 Gaskets
- 4 M6 x 50mm Hex Cap screws
- 4 M6 flat washers

**advanced FLOW engineering**

Corona, CA

[www.aFepower.com](http://www.aFepower.com)