
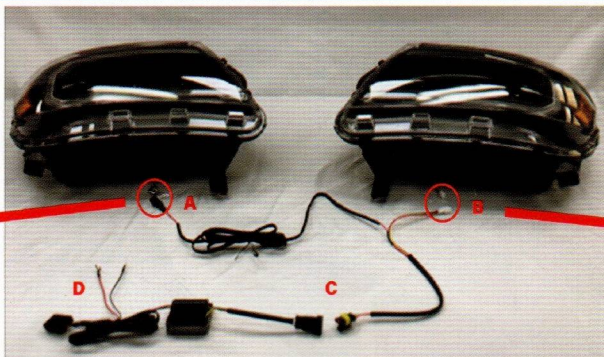



STEP 1

CONNECT A TO RIGHT HEADLIGHT CONNECTOR, AND B TO LEFT HEADLIGHT CONNECTOR AS SHOWN. THEN USE DOUBLE-SIDED TAPE ON PRE-INSTALLED RESISTORS TO TAPE THEM ONTO THE EMPTY SPACE OF SHEET METAL BEHIND HEADLIGHT SET.

RIGHT (PASSENGER) HEADLIGHT

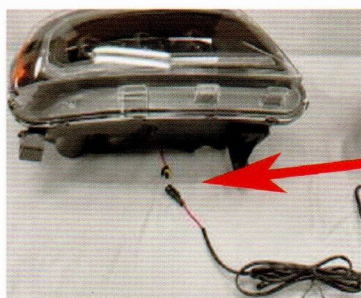


LEFT (DRIVER) HEADLIGHT

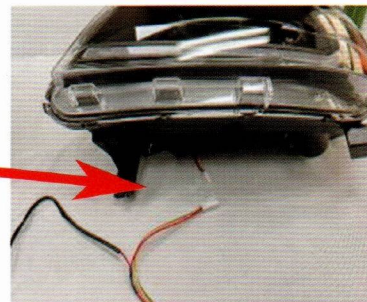


STEP 2

CONNECT C IN STEP 1 AS SHOWN.

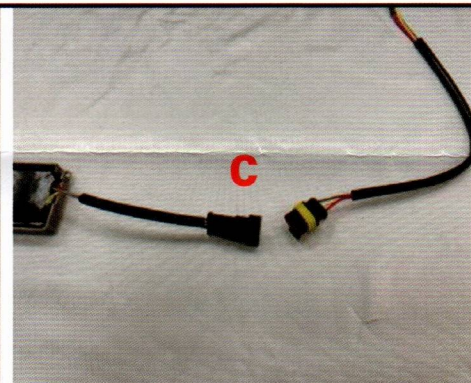

POSITIVE (+) NEGATIVE (-)

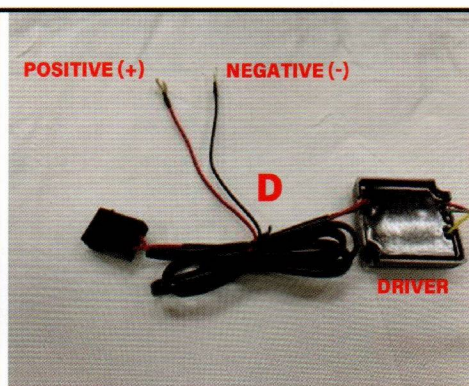

STEP 3

CONNECT FORK CONNECTORS OF D TO BATTERY. RED WIRE TO POSITIVE(+), AND BLACK WIRE TO NEGATIVE(-). THEN USE PROVIDED ZIP TIES TO ROUTE AND SECURE THE DRIVER SHOWN AWAY FROM HEAT SOURCES IN THE ENGINE BAY.

STEP 4

FINISH HEADLIGHT INSTALLATION AND TEST ALL FUNCTIONS BEFORE DRIVING ON THE ROAD.

REFER TO ANZOUSA'S YOUTUBE CHANNEL FOR DETAILED INSTALLATION VIDEO.

