



**BLACK HORSE  
OFF ROAD®**

TEL: 1-866-XANATOS

# **INSTALLATION INSTRUCTIONS**

**TRAVELER OVERLAND UTILITY BED RACK**

**FITS ALL MODERN TRUCKS**

# INSTRUCTION MANUAL


**MODEL NO.: TR01B**

**PRODUCT DESCRIPTION:** TRAVELER OVERLAND UTILITY BED RACK

## 1、 Notes:

- ①All pictures in the instruction manual are for reference only. The pictures may be different from the real products, but the installation method is the same.
- ②For security, please check regularly whether all accessories connected well with the car before driving.

## 2、 Parts List : (The following parts do not include standard car installation parts)






SN.	NAME	QTY.	SPEC.	GRAPHIC
1	HEXAGON BOLT	16	M10*35	
2	SPRING WASHER	80	D10	
3	BIG FLAT WASHER	140	D10	
4	FLAT HEAD RIVET NUT	8	M10*18	
5	HEXAGON NUT	60	M10	
6	HEXAGON SOCKET BUTTON HEAD SCREWS	64	M10*30	
7	SPRING WASHER	12	D8	
8	BIG FLAT WASHER	12	D8	
9	HEXAGON BOLT	12	M8*25	
10	SIDE BAR	4		
11	MIDDLE BAR	4		
12	UPPER CONNECTING PLATE	1		
13	LAMP PLATE	1		
14	MIDDLE CONNECTING PLATE	2		
15	SIDE CONNECTING PLATE	4		
16	SIDE FIXED PLATE	4		
17	SLIDING PLATE	4		
18	CLAMPING PLATE	4		
19	SOCKET HEAD WRENCH	1	S=6	


## 3、 Installation Procedure:

**Step 1:** Check whether the accessories are complete by referring to the accessory list and installation drawing.


**Step 2:** As shown in the drawing, tighten the bar with bolts.

**Step 3:** Check whether the bolts are miss and all bolts are tightened.

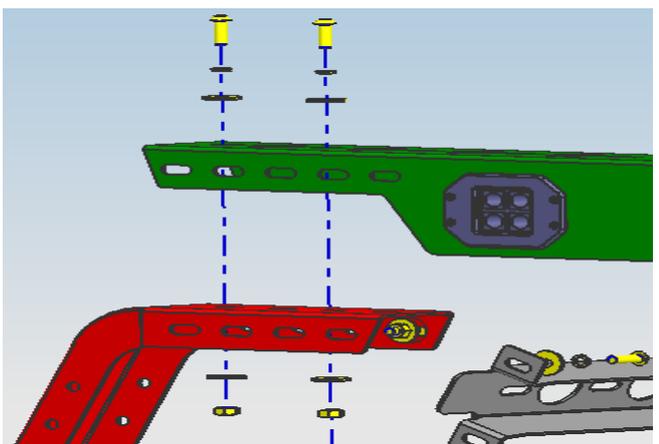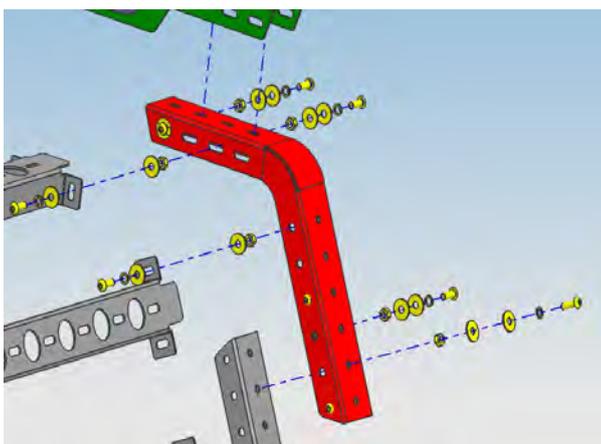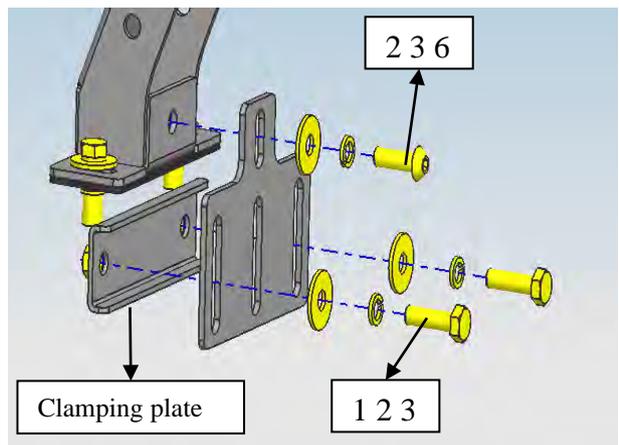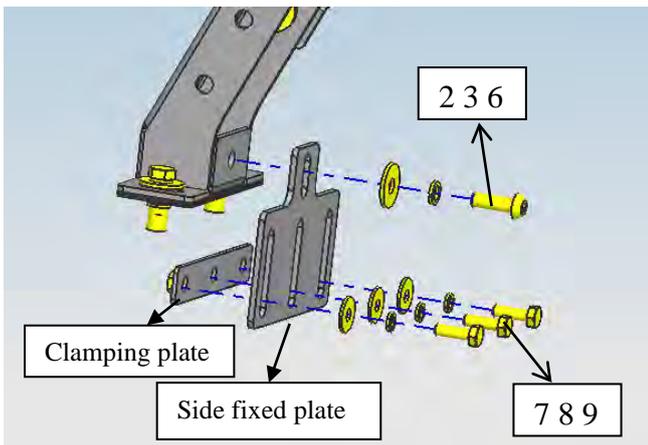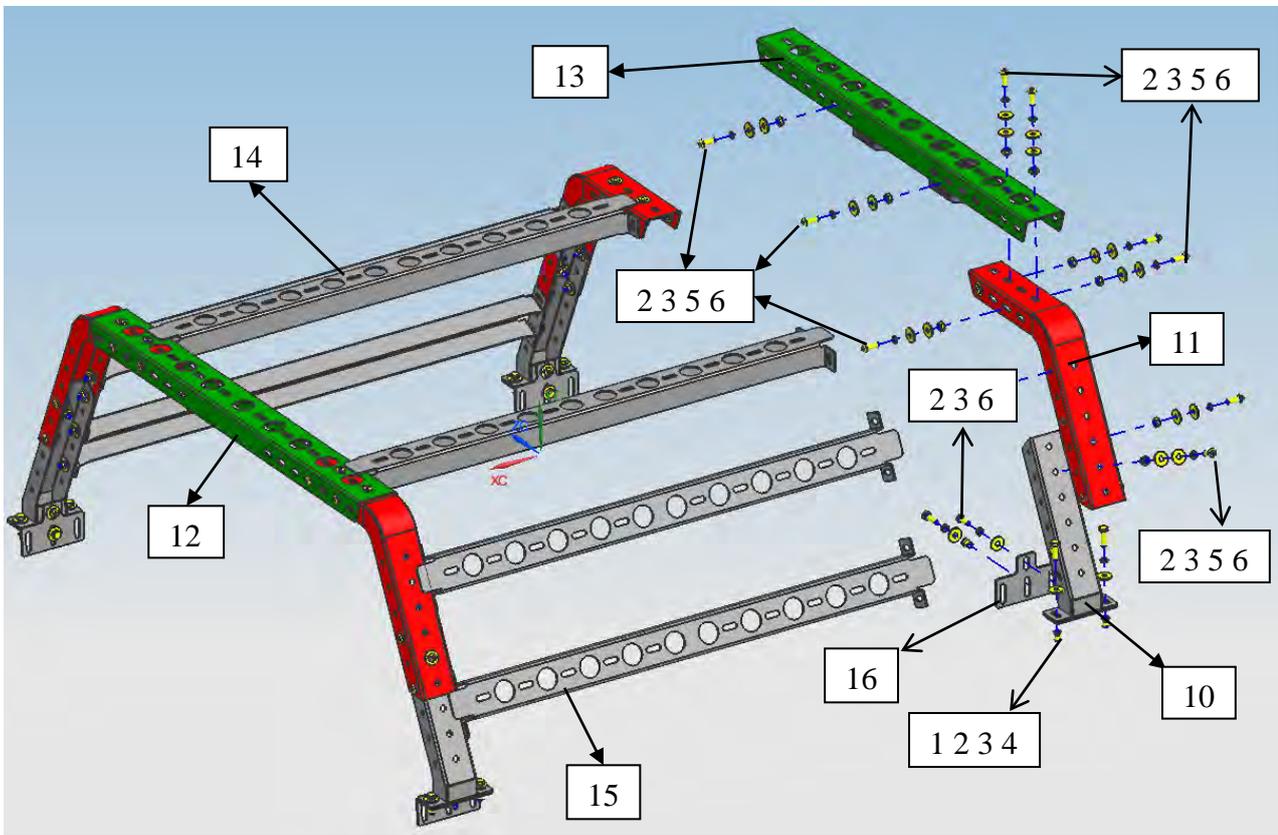

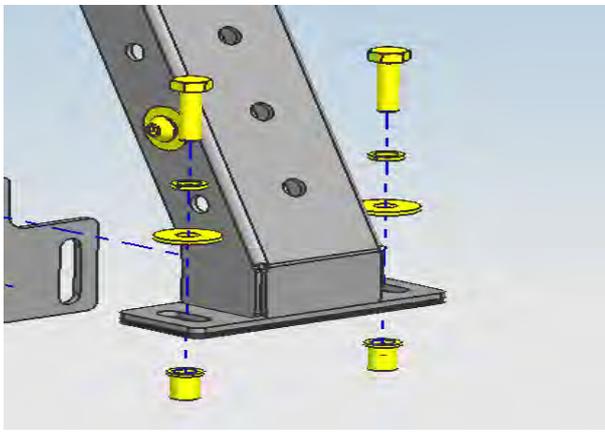

Install the installed parts to the body mounting position with clamping plate, M10\*35 hexagon bolts, D10 spring washers and D10 big flat washers. (Model without guide rail)

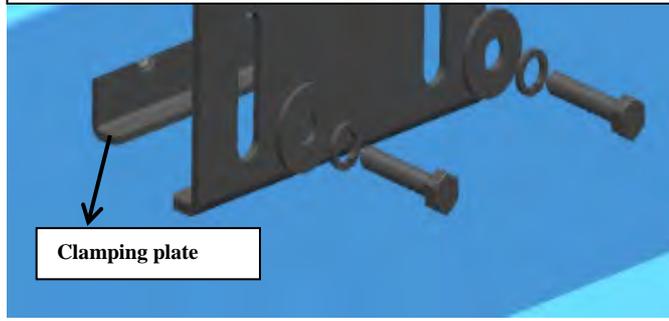

Clamping plate

Complete the installation. (Model without guide rail)




Slide the sliding plate into the body mounting slot. (Model with guide rail)





Sliding plate

Install the installed parts to the body mounting position with 8mm hexagon bolts, 8mm spring washers and 8mm big flat washers. (Model with guide rail)

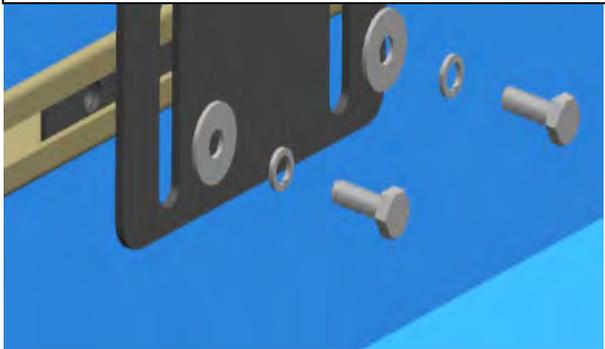

Complete the installation. (Model with guide rail)

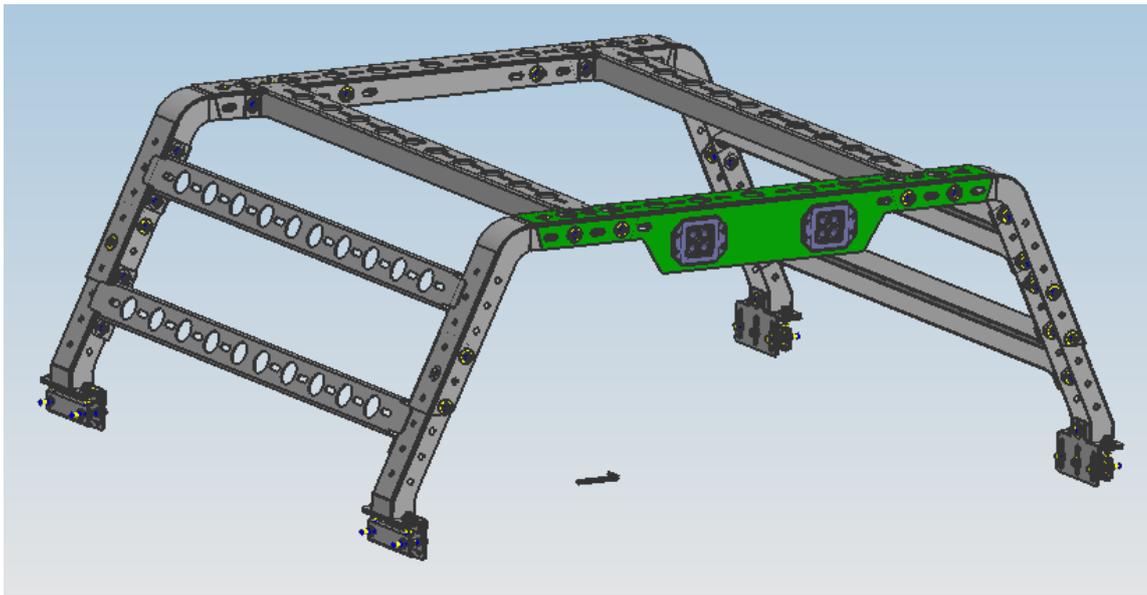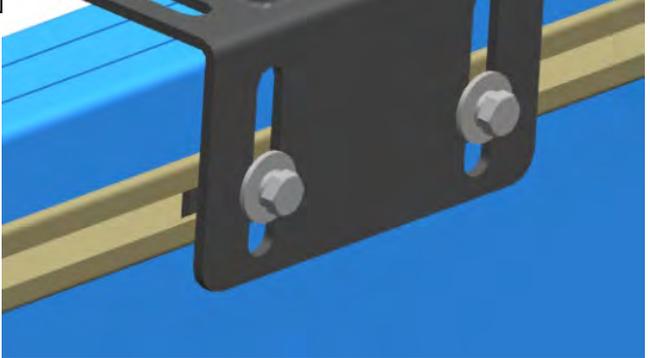

**4、Disclaimer:** The related problems and losses caused by improper installation and use are not covered by our warranty.