



SOFT TRI-FOLD TONNEAU COVER

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Tonneau Cover
- (1) Bulkhead Seal (10mm Thick)
- (1) Tailgate Seal (6mm Thick)
- (1) Bed Rail Gap Seal


TOOLS REQUIRED

- Isopropyl Alcohol
- Exterior Detailer
- Microfiber Cloth
- Scissors



STEP 1

Clean the vehicle side bed rail using exterior detailer and a microfiber cloth to remove any dirt. Clean the top of the tailgate and the vehicle bulkhead using isopropyl alcohol and a microfiber cloth, allow to fully dry. The alcohol will encourage weather seal adhesion.

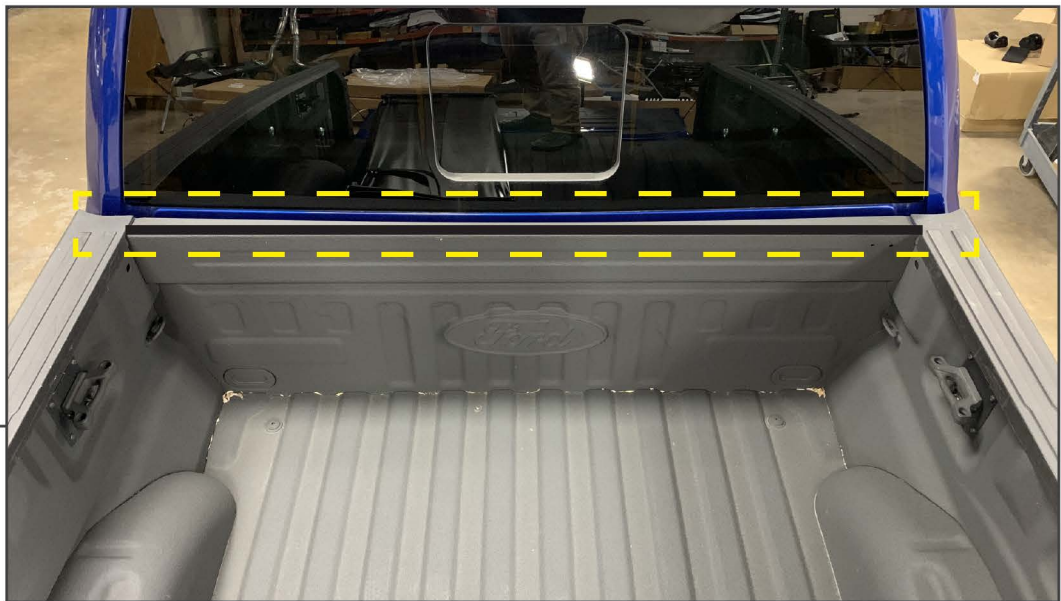

STEP 2

Install the bulkhead seal to the vehicle bulkhead by peeling the attached tape backing, firmly press to ensure proper adhesion and trim to size.



STEP 3


Install the tailgate seal to the top of the vehicle tailgate by peeling the attached tape backing, firmly press to ensure proper adhesion and trim to size.



STEP 4

Lift the tonneau cover to the vehicle, and ensure the strap securing the tonneau assembly is closest to the vehicle rear window.

Note: Ensure the bulkhead flap gasket attached to the tonneau is over the vehicle bulkhead, this will increase water resistance.

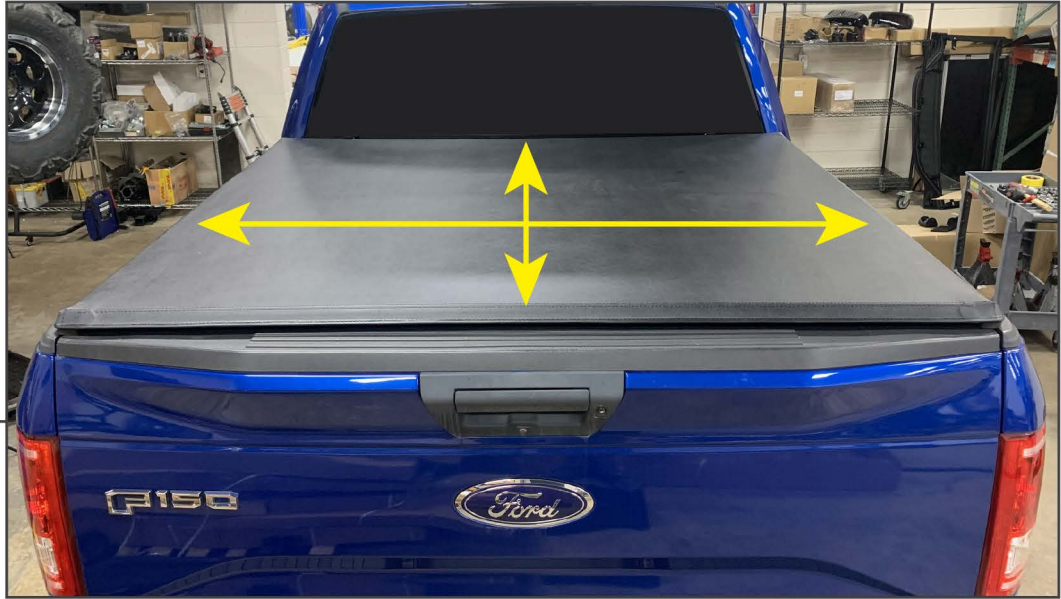

STEP 5

Un-fold the tonneau cover towards the rear of the vehicle, and center the tonneau cover to the vehicle. Carefully close the tailgate to ensure proper tonneau cover adjustment.

Once centered, carefully re-fold the tonneau cover towards the vehicle cab.




STEP 6

Under the tonneau cover, locate the attached front clamps. Unthread the clamp knob to loosen the mounting bracket, and hook the bracket to the metal bed rail. Once hooked into place, tighten the threaded clamp knob until the tonneau is secure to the bed rail. ****Note: The clamp MUST attach to the metal on the vehicle bed rail. Attaching the bracket to a plastic liner will not secure the tonneau cover.**


Note: If vehicle is equipped with OEM Utility Rails, reference Step 7.

STEP 7 (UTILITY RAIL VEHICLES)

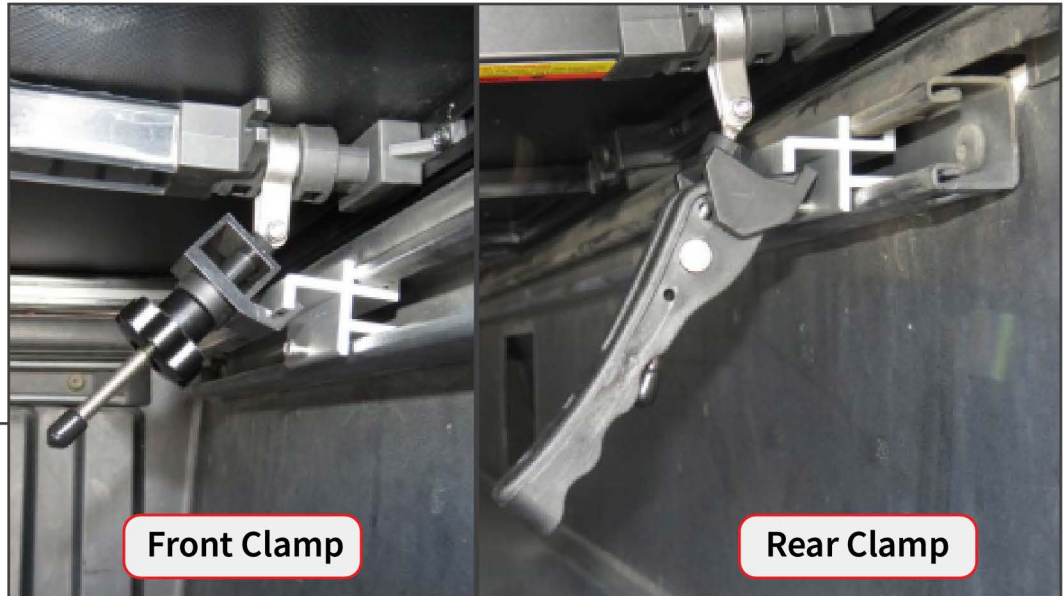

Utility Rail Vehicles: Slide (2) included mounting brackets onto each side rail. Once fitted, secure the tonneau cover clamps to the mounting brackets, and tighten until secure.

STEP 8

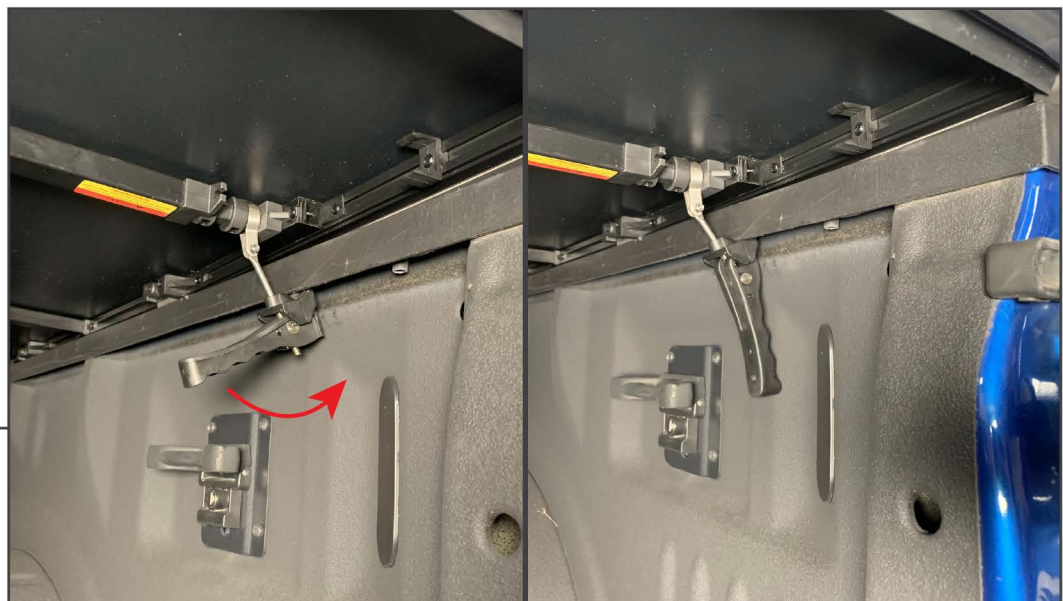

Unfold the tonneau cover towards the rear of the vehicle, and locate the rear mounting clamps. Loosen the mounting bracket/handle assembly, and hook the bracket to the vehicle metal bed rail. Once hooked, begin to tighten the handle, and then fold the handle over to fully secure the tonneau into place.



STEP 9

To store the tonneau cover on the vehicle, release the rear latches by flipping the handles. Fold the tonneau towards the front of the vehicle, and secure the tonneau using the (2) nylon straps attached to the tonneau cover. Tighten the straps to ensure tonneau placement. Place the front clamps into the tonneau cover retainers.



STEP 10

Installation is now complete.