



## Installation



This installation uses 4 brackets per side, (Photo 1).

Photo 1





**Step-1** Begin the installation on the driver side. Starting at the front of the vehicle, locate and remove the plastic plugs in the back side and bottom of rocker panel to expose the holes used for placement of the M8 Clip- Nuts, (Photo 2).


**Step-2** Install M8 Clip-Nuts in the rocker panel with the threaded end centered over the smaller hole, (Photo 3).

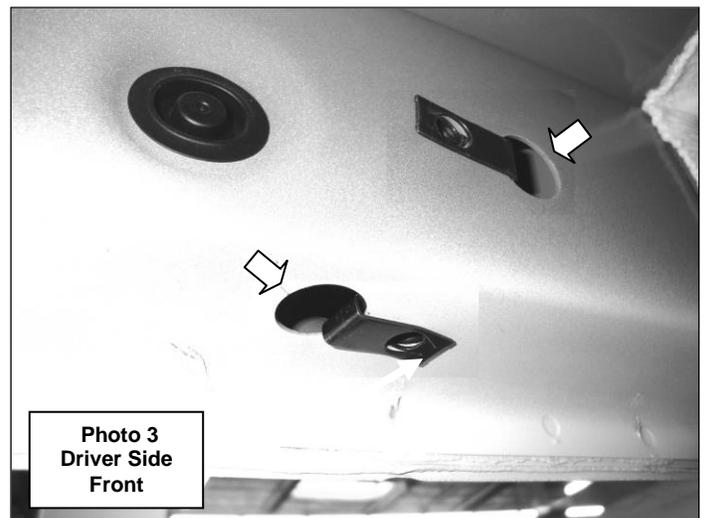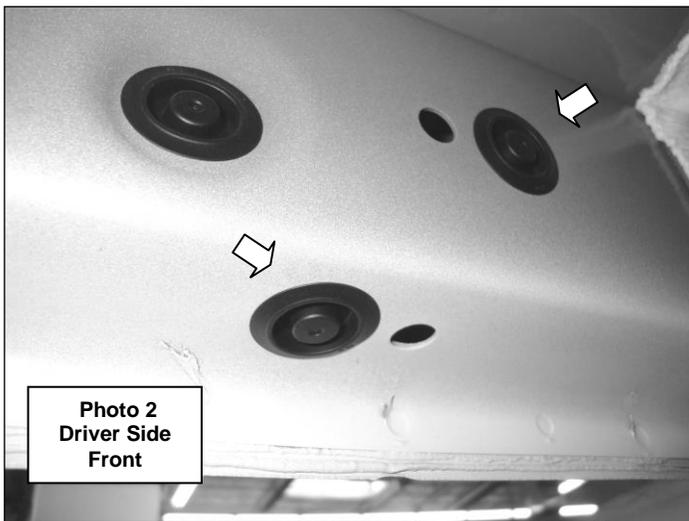




**Step-3** Attach one of the brackets to the rocker panel using (2) M8 hex bolts, (Photo 4 & 5). Leave the bolts loose for final adjustment.

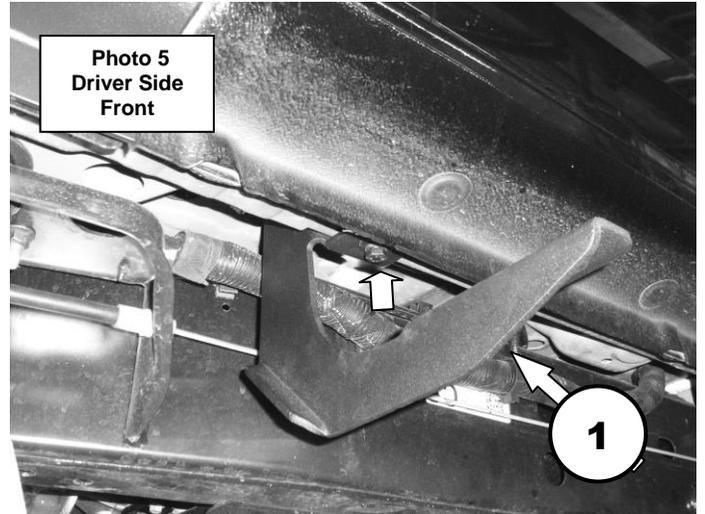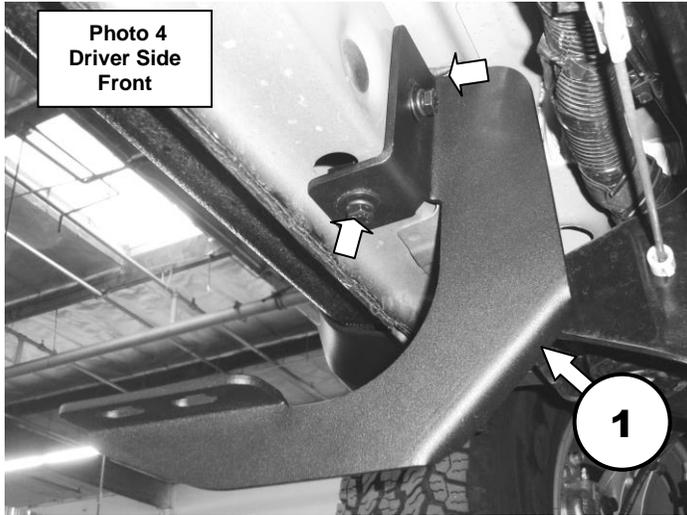

**Step-4** Locate the plastic plugs and holes in the rocker panel at the center and rear of the cab, and repeat steps 1-3 to install the 3 additional brackets, (Photo 6 & 7). Leave the bolts loose for final adjustment.

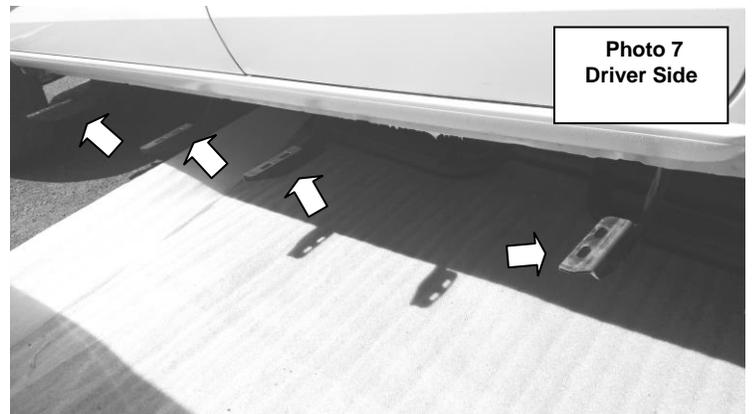

**Step-5** Place the passenger side running board on top of the mounting brackets. Position (4) of the U-brackets inside the running board body, and align the U-brackets with the holes in the brackets. Attach the running board to each mounting bracket using the U-bracket, (2) M8 hex head bolts (Photo 8 & 9).

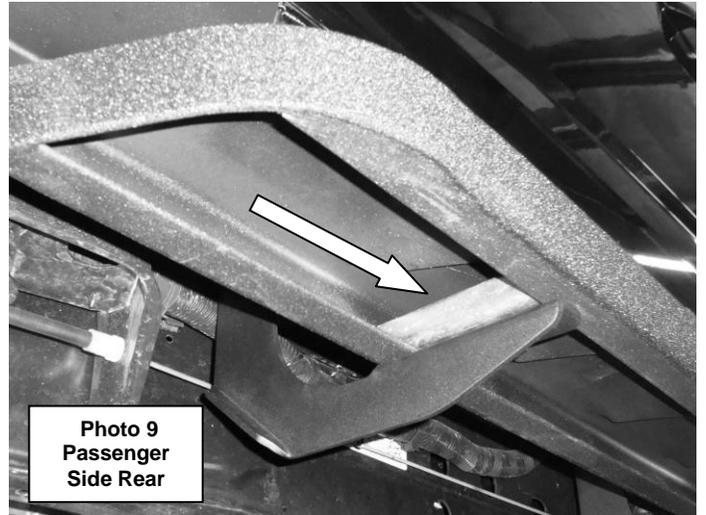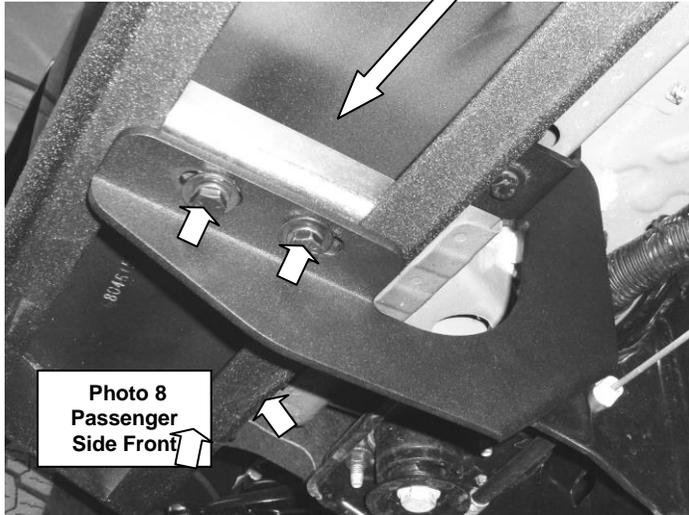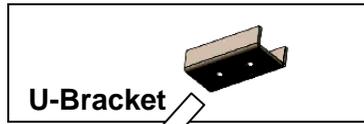

**Step-7** Align the running board with the vehicle and tighten all supplied nuts and bolts securing the running board and bracket assembly. Repeat the installation steps to install the driver side brackets and running board. Remember to check and retighten all bolts periodically.

