

INSTALLATION INSTRUCTIONS



OUTLAW RUNNING BOARDS

APPLICATION:


2015-2022 Chevrolet/GMC Colorado/Canyon Crew Cab

PART NUMBER:

28-31015

CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1, 2	2	OUTLAW RUNNING BOARDS (1 DRIVER, 1 PASSENGER)	13MM SOCKET
3	1	DRIVER FRONT MOUNTING BRACKET	13MM WRENCH
4	1	PASSENGER FRONT MOUNTING BRACKET	15MM SOCKET
5	2	DRIVER CENTER MOUNTING BRACKET	15MM WRENCH
6	2	PASSENGER CENTER MOUNTING BRACKET	RATCHET
7	1	DRIVER REAR MOUNTING BRACKET	TORQUE WRENCH
8	1	PASSENGER REAR MOUNTING BRACKET	SOCKET EXT.
9	16	M8 U-NUT CLIP	
10	16	M8 HEX HEAD BOLT	
11	16	M8 SPLIT LOCK WASHER	
12	16	M8 FLAT WASHER	
13	12	M10 SERRATED FLANGE BOLT (<i>YELLOW ZINC</i>)	
14	12	M10 SERRATED FLANGE HEX NUT (<i>YELLOW ZINC</i>)	
15	4	M10 SERRATED FLANGE BOLT (<i>BLACK ZINC</i>)	
16	4	M10 BELLVILLE WASHER (<i>BLACK ZINC</i>)	

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING




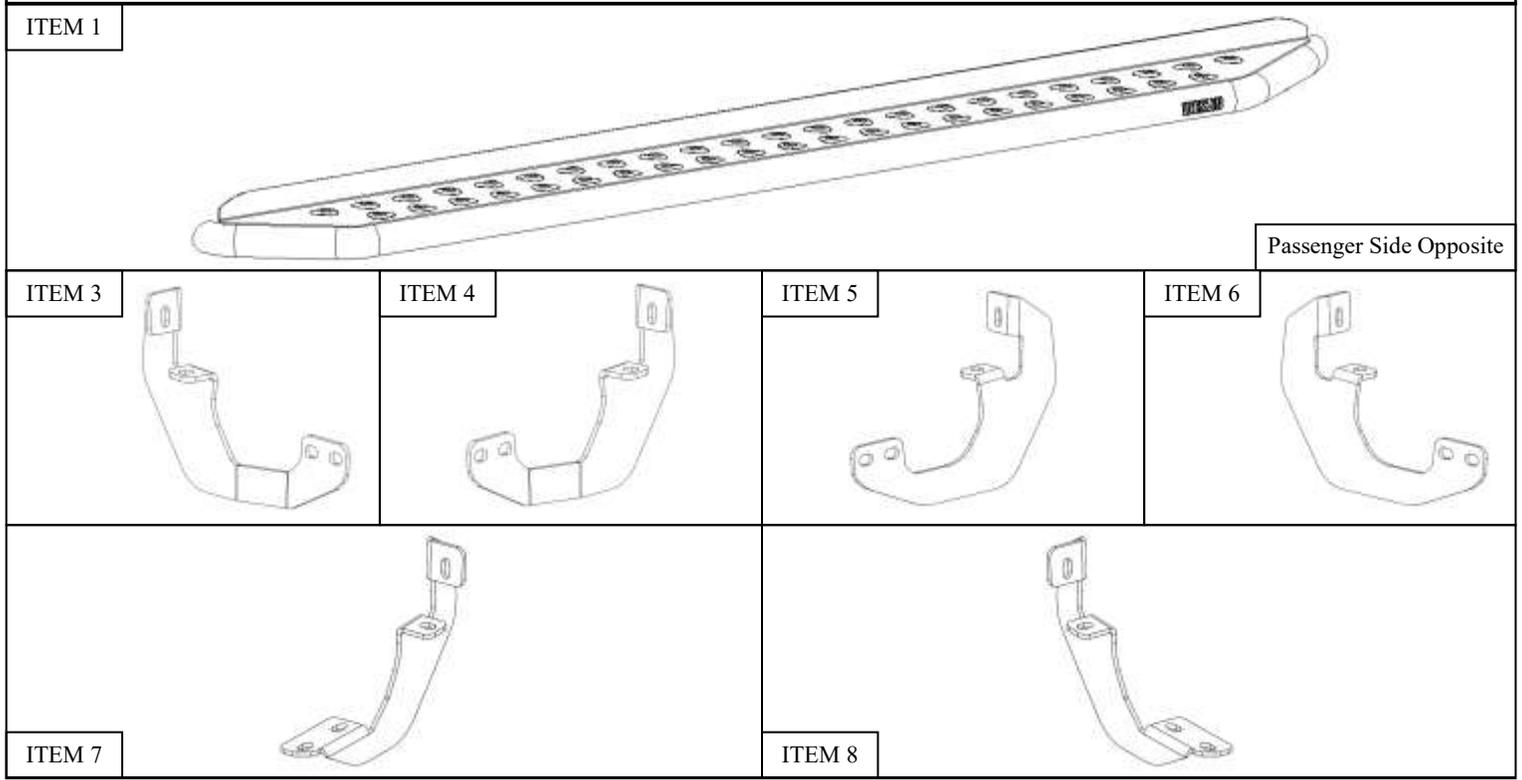


WESTIN Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773



Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com

PROCEDURE

1. Remove contents from box, verify if all parts listed are present and free from damage.
Carefully read and understand all instructions before attempting installation.
Failure to identify damage before installation could lead to a rejection of any claim.
2. Locate and remove the rubber plugs on the rocker panel at each mounting location. See **Figure 1** for reference.
3. Locate the Driver Front Mounting Bracket (Item 3) and loosely secure it to the rocker panel using the provided M8 hardware. See **Figure 2** for reference. *Note: If threaded holes are not on the vehicles' rocker panel, remove the rubber plugs at each mounting location and insert M8 nut clips into the opening.*
4. Repeat **Step 3** for every other bracket mounting location. See **Figures 3 & 4** for bracket orientation and locations.

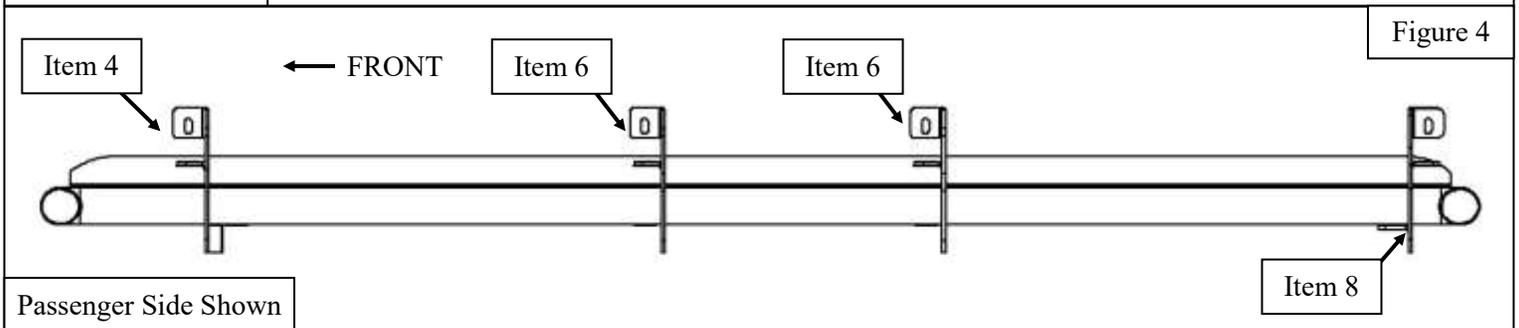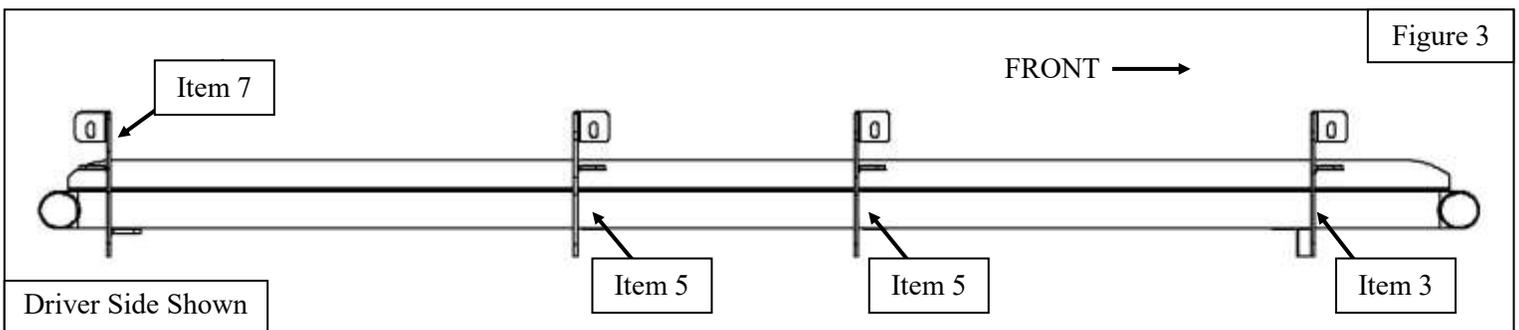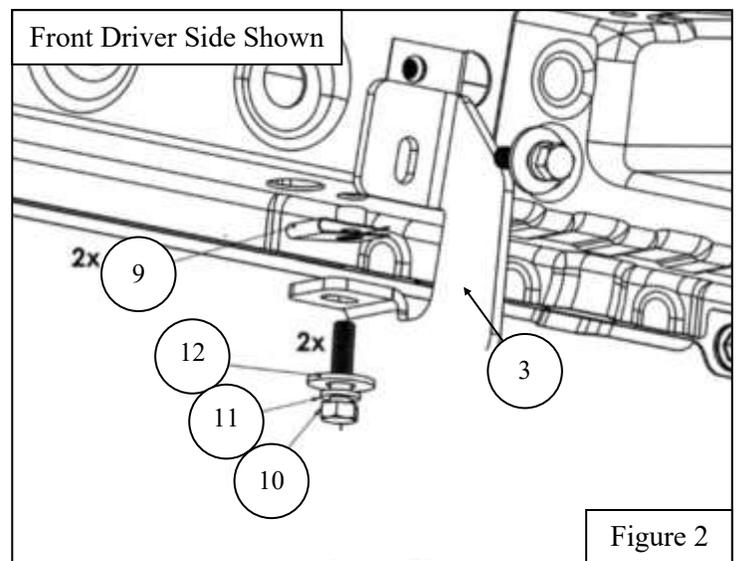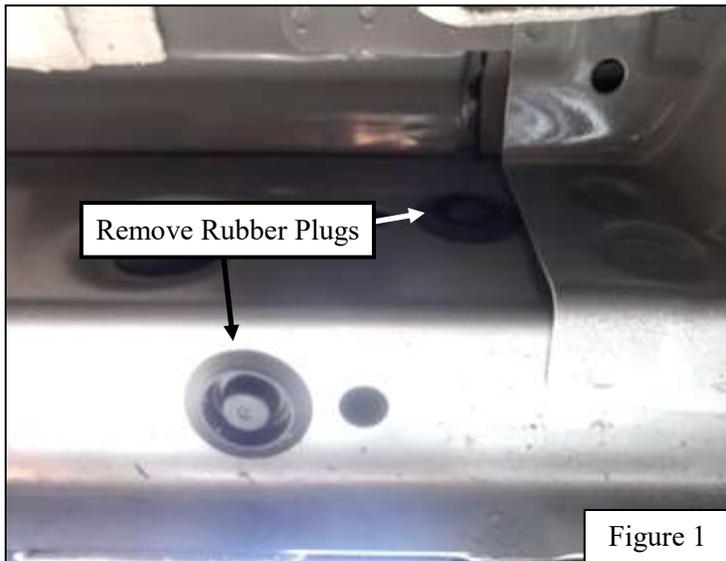

5. Use the supplied M10 hardware to mount and secure the Outlaw Running Board (Item 1) to the previously installed mounting brackets. See **Figures 5 & 6** for reference.
6. Repeat **Step 5** for the passenger side of the vehicle with the passenger side Outlaw Running Board (Item 2).
7. Align and adjust the running board assemblies and mounting brackets as necessary. Fully tighten and torque all hardware as specified: M8 hardware to 15-18 ft-lbs., M10 hardware to 35-38 ft-lbs.

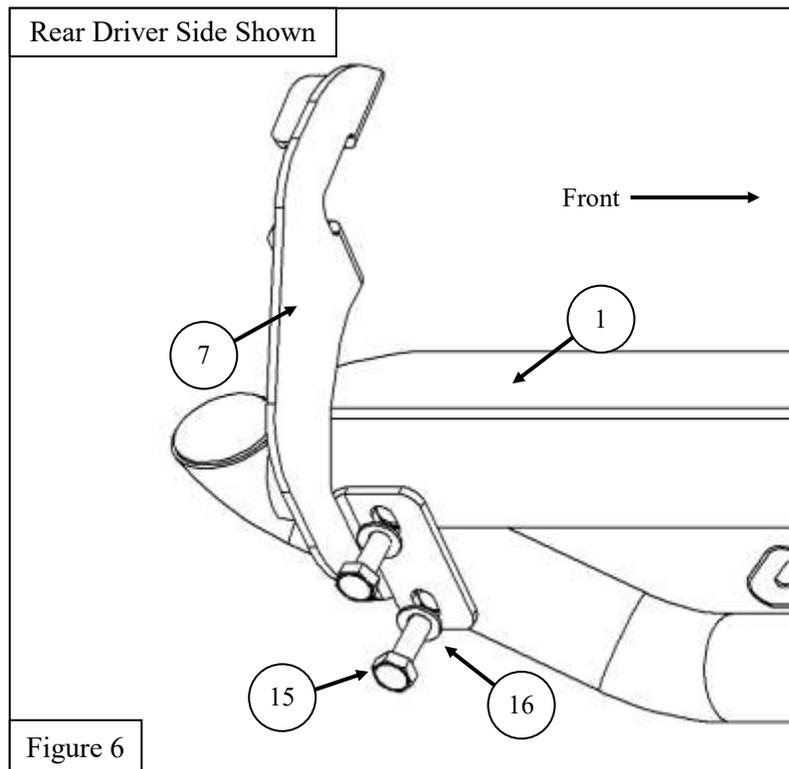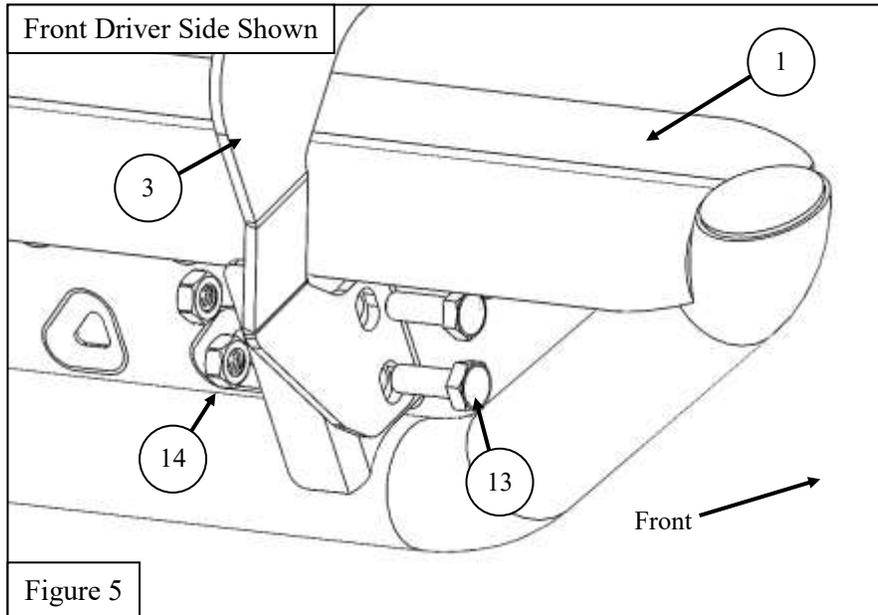

INSTALLATION COMPLETE



Care Instructions

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES..
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to www.p65warnings.ca.gov



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773