

SKU# 5002136



SCAN THE QR CODE TO VIEW THE INSTALL VIDEO

PACKAGE CONTENTS:





2X TAIL LIGHT ASSEMBLIES

FITMENT:

- 2007-2014 CHEVROLET SUBURBAN/TAHOE
- 2007-2014 GMC YUKON/YUKON DENALI (2008-2013 EXCLUDING HYBRID MODELS)

FACEBOOK.COM/SPYDERAUTO

INKEDIN.COM/COMPANY/SPYDER-AUTO

MINSTAGRAM.COM/SPYDERAUTO

TWITTER.COM/SPYDERAUTO

TIKTOK.COM/@SPYDERAUTO



SCAN THE QR CODE TO VISIT OUR WEBSITE

WARNING: BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GU
WARD RANTESS ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELP RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE
UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED.
FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM TECHSUPPORT@SPYDERAUTO.COM

THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFETS OR OTHER REPODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNING.CA.GOV









STEP 1:
DISCONNECT THE NEGATIVE BATTERY TERMINAL





STEP 2:
DISCONNECT THE MAIN TAIL LIGHT HARNESS HIDDEN IN THE BUMPER UNDER THE VEHICLE



STEP 3:
OPEN THE TAILGATE AND REMOVE (2) PHILLIPS SCREWS SECURING
THE TAIL LIGHT






STEP 4: UNSEAT THE TAIL LIGHT



STEP 5:
REMOVE THE FACTORY HARNESS



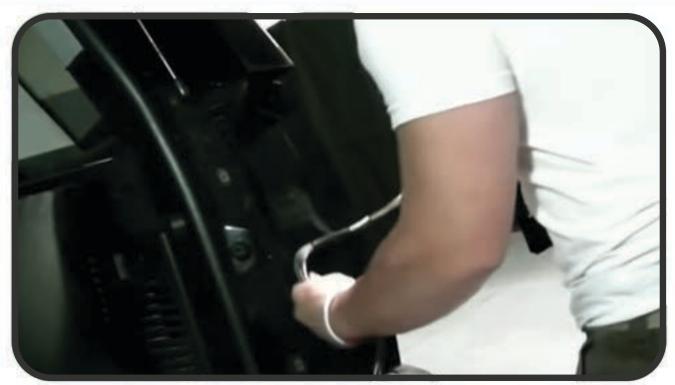

STEP 6: FEED IN THE SPYDER TAIL LIGHT HARNESS



STEP 7: SEAT THE SPYDER TAIL LIGHT AND REINSTALL THE (2) PHILLIPS SCREWS TO SECURE IT IN PLACE





STEP 8:
CONNECT THE SPYDER TAIL LIGHT HARNESS



STEP 9:
RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY