

PLEASE place this warning in your owner's manual

# WeatherTech®

**Quality** - WeatherTech® FloorLiner® HP has undergone the most rigorous testing and quality control measures, ensuring you superior quality and the longest lasting, highest performing product of its type.

**Recyclable** - WeatherTech® FloorLiner HP is manufactured from an engineered resin called Thermoplastic Rubber. Our FloorLiner HP is 100% recyclable and free of any cadmium, lead, latex or PVC. All of our packaging is recyclable as well.

**Care** - Regular cleaning extends the life of your FloorLiner HP. The FloorLiner HP should be removed and shaken regularly to remove loose debris. Clean FloorLiner HP using only a mild detergent soap and water. For best results, use our WeatherTech® TechCare® FloorLiner® & FloorMat Cleaner and Protectors.


## Installation Instructions -

- 1) REMOVE ALL OTHER FLOOR MATS FROM THE VEHICLE.
- 2) Select the correct WeatherTech® FloorLiner HP for the appropriate floor location of the vehicle. Front - Left (left hand side) or Front - Right (right hand side) is molded into the underside of the FloorLiner HP. The FloorLiner HP will only fit the correct side of the vehicle. The retention hook bosses, hook holes or retention grommets (if equipped) are located towards the rear or bottom portion of the FloorLiner HP near the seat rails.
- 3) Please ensure that you have either the factory supplied retention hooks installed in the floor (where applicable), or install the specific supplied hooks that came with the WeatherTech® FloorLiner HP, or if equipped, utilize the supplied retention grommets or anchors.

- 4) Install the Front - Left (left hand side) FloorLiner HP on the driver's side of the vehicle. Insert the retention hooks or engage the retention grommets (if applicable). Pull the FloorLiner HP forward to make sure that the retention hooks or retention grommets are engaged and that the mat is securely fastened to the floor. If you are unable to fully insert the retention hooks into and through the hook holes, or unable to engage the retention grommets (where applicable), do not use the FloorLiner HP in the vehicle. Once the Front - Left (left hand side) FloorLiner HP is properly and securely installed, install the Front - Right (right hand side) FloorLiner HP in the passenger side of the vehicle.
- 5) Move the accelerator, brake and clutch pedals (if applicable) through their full range of motion to confirm there is no interference with the FloorLiner HP.

**FAILURE TO CORRECTLY INSTALL OR RE-INSTALL FLOORLINER HP ACCORDING TO THE ABOVE INSTRUCTIONS COULD RESULT IN THE LOSS OF CONTROL OF THE VEHICLE AND DEATH OR SERIOUS INJURY.**

In some applications, an optional trim line has been provided. Follow the score line with scissors to remove the desired area.

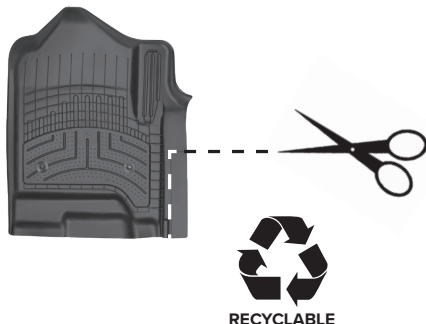

Proudly Designed,  
Engineered and  
Manufactured  
in the USA

**WeatherTech®.com**

1 MacNeil Court • Bolingbrook, IL 60440  
800-441-6287 • 630-769-1500 • fax 630-769-0300



# WARNING



## **FLOORLINER™ HP SAFETY INFORMATION READ BEFORE INSTALLING**

**NOTICE: THIS WARNING TO BE REMOVED ONLY BY THE END USER OF THE FLOORLINER HP!**

**PLEASE PLACE THIS WARNING IN THE VEHICLE'S OWNER'S MANUAL.**

If selling this vehicle with FloorLiner HP installed, please make the next owner aware of this warning. Please inform all drivers of this vehicle of these warnings before allowing them to drive this vehicle.

**IT IS IMPERATIVE TO REMOVE ANY EXISTING CARPET MATS OR OTHER FLOOR MATS PRIOR TO INSTALLING FLOORLINER HP!**

FloorLiner HP is designed to be placed on the floor of the vehicle only – not on top of any other floor mat.  
**DO NOT STACK FLOORLINER HP.**

**FLOORLINER HP IS DESIGNED TO FIT ONLY THE INTENDED VEHICLE APPLICATION MODEL(S) AND YEAR(S) AS SOLD. DO NOT USE IN ANY OTHER MAKE, MODEL OR YEAR OF VEHICLE.**

### **When installing FloorLiner HP:**

- Install directly on the floor and not over other floor mats.
- Do not mix up the sides. Install the driver's side or Front - Left (left hand side) FloorLiner HP on the driver's side floor area. Install the passenger side or Front - Right (right hand side) FloorLiner HP on the passenger side floor area.
- Make sure FloorLiner HP fits the contours of the vehicle floor space.
- Install FloorLiner HP right side up, not upside down.
- Insert a respective retention hook into and through each hook hole in FloorLiner HP, or be certain any other retention device or grommet is properly and securely engaged.

After installing FloorLiner HP and before starting the vehicle, check the operation of the accelerator (gas) pedal, brake pedal and (if the vehicle has one) clutch pedal to ensure that the FloorLiner HP does not interfere with their movement through their full range of motion. Before starting the vehicle and every time before use, ensure FloorLiner HP is installed correctly and secured by the retention hooks and/or grommets (where applicable) and that the FloorLiner HP does not interfere with the accelerator, brake or (if equipped) clutch pedals.

Furthermore, check to ensure that there are no loose objects in the vehicle that have, or could possibly become, lodged in a position that interferes with the operation of the accelerator, brake or (if equipped) clutch pedal.

If the vehicle is serviced, detailed or cleaned, re-inspect the installation of FloorLiner HP to make sure that they have been re-installed according to these instructions and that they are secured by the FloorLiner HP retention hooks, grommets (where applicable) or any other supplied anchoring system.

**FAILURE TO CORRECTLY INSTALL OR RE-INSTALL FLOORLINER HP ACCORDING TO THE ABOVE INSTRUCTIONS COULD RESULT IN THE LOSS OF CONTROL OF THE VEHICLE AND DEATH OR SERIOUS INJURY.**

If, while driving the vehicle, FloorLiner HP becomes loose or able to move forward, stop the vehicle at the next safe location and re-install the FloorLiner HP properly and securely. If this is not possible, remove the FloorLiner HP.

FloorLiner HP is not to be used in stunt cars or cars driven in competitive events, timed events or performance driving schools.

Do not drive barefoot. Do not leave footwear in or near the driver's side foot well.

**IF YOU ARE UNSURE OR UNCLEAR FOR ANY REASON AS TO THE PROPER INSTALLATION AND/OR FIT OF THE FLOORLINER HP, OR REQUIRE ADDITIONAL RETENTION HOOKS, PLEASE CONTACT WEATHERTECH® AT (630) 769-1500.**

