
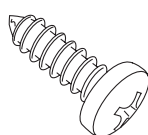


QUICK LATCH MOUNTING BRACKET INSTALLATION

Part # 74605-01A

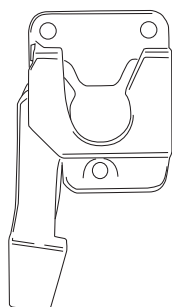


1 x2

Quick Latch Mounting bracket


2 x6

Phillips head screw, self tapping

Cut out supplied template and tape on the D-pillar as shown. Using a center punch, mark holes as specified by the template.

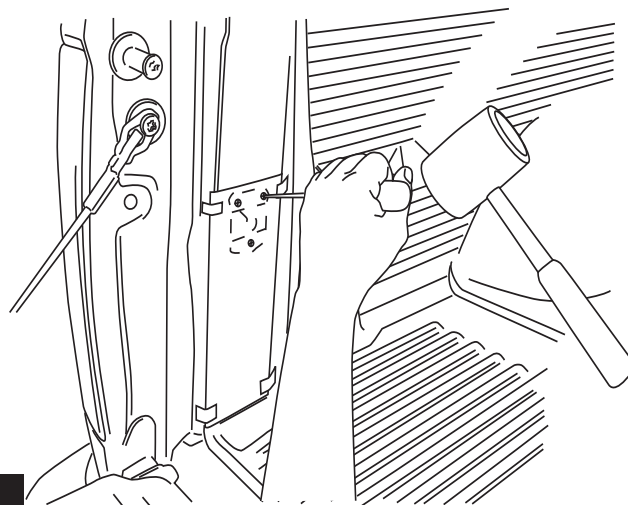

1

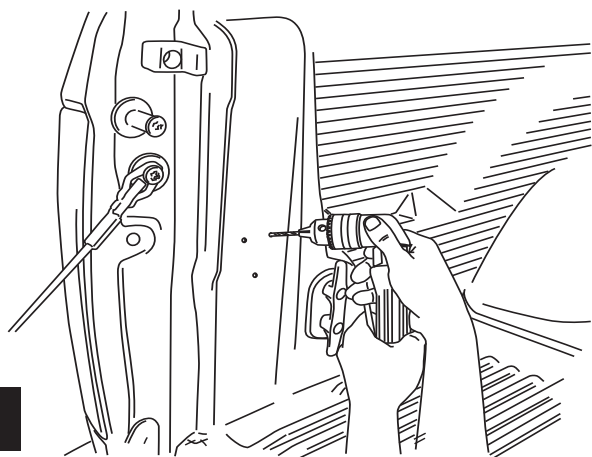

2

Using a power drill and 9/64" drill bit, drill through the sheet metal. If equipped with a bedliner, drill through bedliner.




3

Fasten quick latch mounting brackets using the Phillips head screws and torque to 30 in. lbs. If equipped with bedliner, install quick latch mounting brackets over bedliner.

NOTE: If bedliner has contours that may prohibit a flat, solid mounting surface, cut out a rectangular section to clear the bracket and mount the bracket directly to the metal D-pillar.

Drill template for Bed X-Tender™ mounting brackets

NOTE: FOR TRUCKS WITH BEDLINERS, USE THIS TEMPLATE ON TOP OF BEDLINER. **DO NOT CUT BEDLINER!**

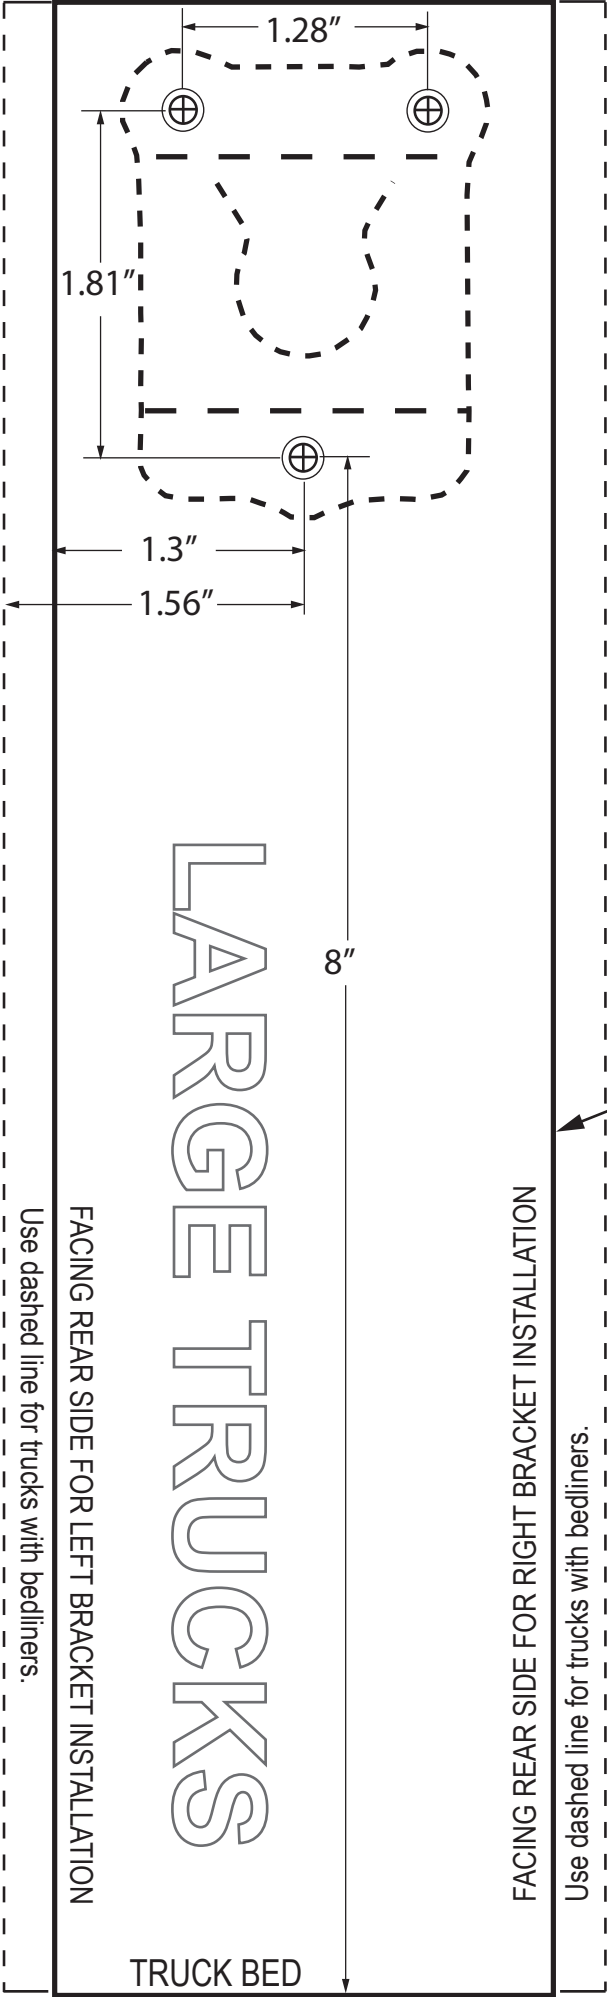

Drill template for Bed X-Tender™ mounting brackets

Cut or fold along solid lines.
(Dashed lines for trucks with bedliners.)

