



Installation Guide

Armor Grille
For 2013-2018 Dodge Ram 2500

SKU # AMDEBA00143 & AMDEBA00149

STEP 1




Open the hood,remove 4 plastic clips to remove shroud cover from vehicle.

STEP 2



Remove 4 bolts on the top and then pop the 2 clips at the bottom they come right up.Then grab your grille right between the bumper to pop it out.

STEP 3

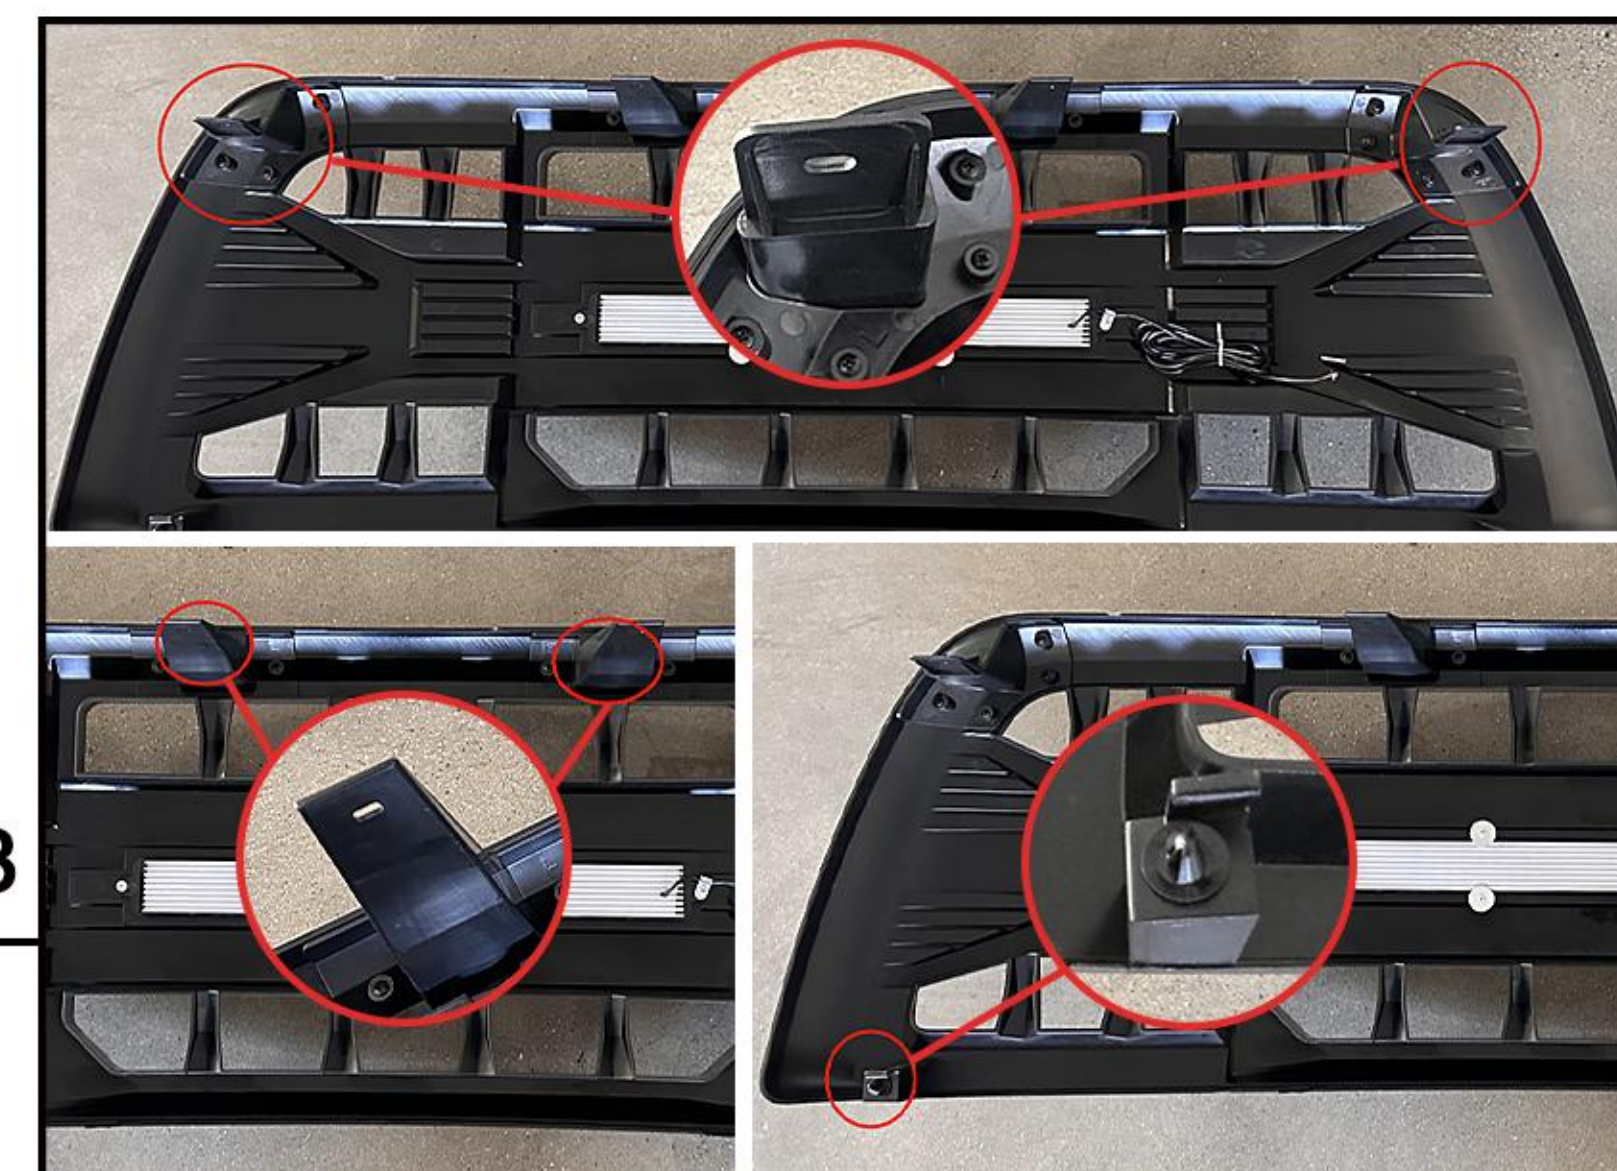

Install 4 mounting brackets.(2 on each end and 2 in the middle).Install 2 metal clips on each end.

STEP 4



DRL Wiring:
Wire to fuse box,the red wire connects to the ACC,the black wire connects to the negative of battery.

STEP 5



Line up the brackets on top.Press the bottom in place and start installing your hardware(follow the step 1-2 in reverse order.) to complete the grille installation.