




Installation Guide

Armor Grille
For 2006-2008 Dodge Ram 1500


SKU # AMDEBA00148 & AMDEBA00152

STEP 1

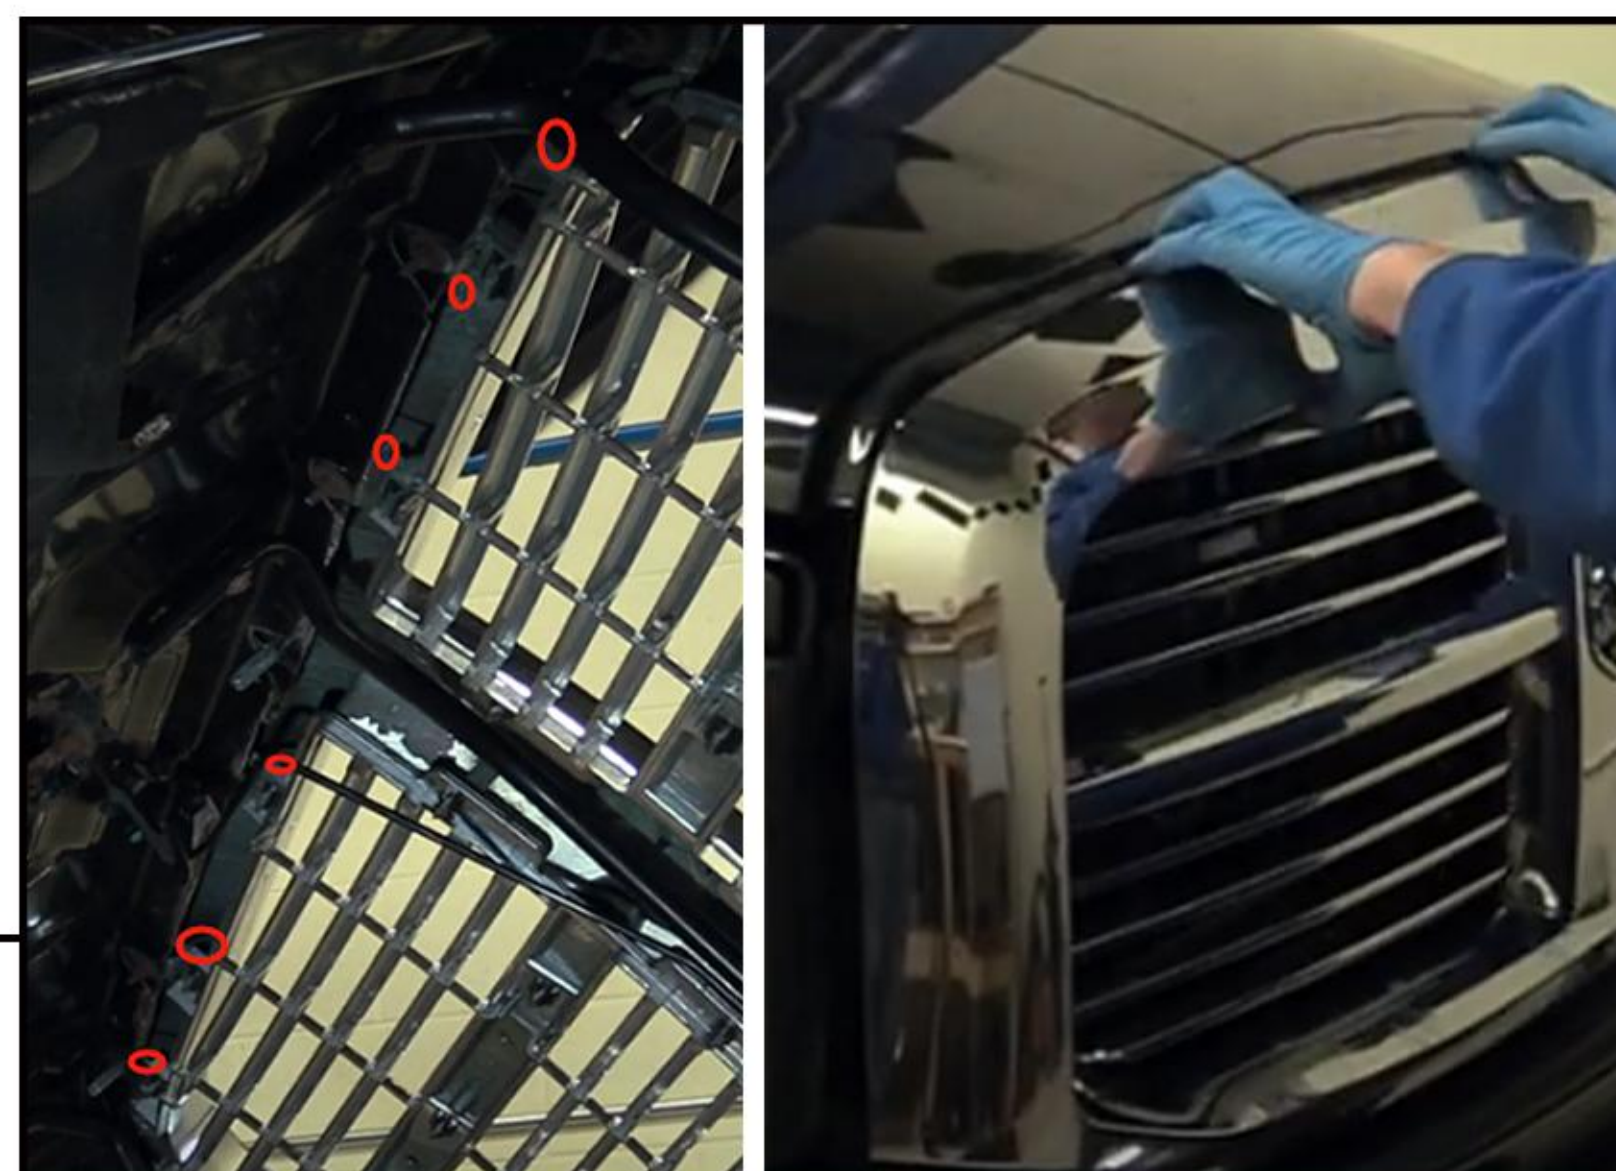


Open the hood,remove the six nuts on top,then put down the hood to pull the grille out of the car.

STEP 2

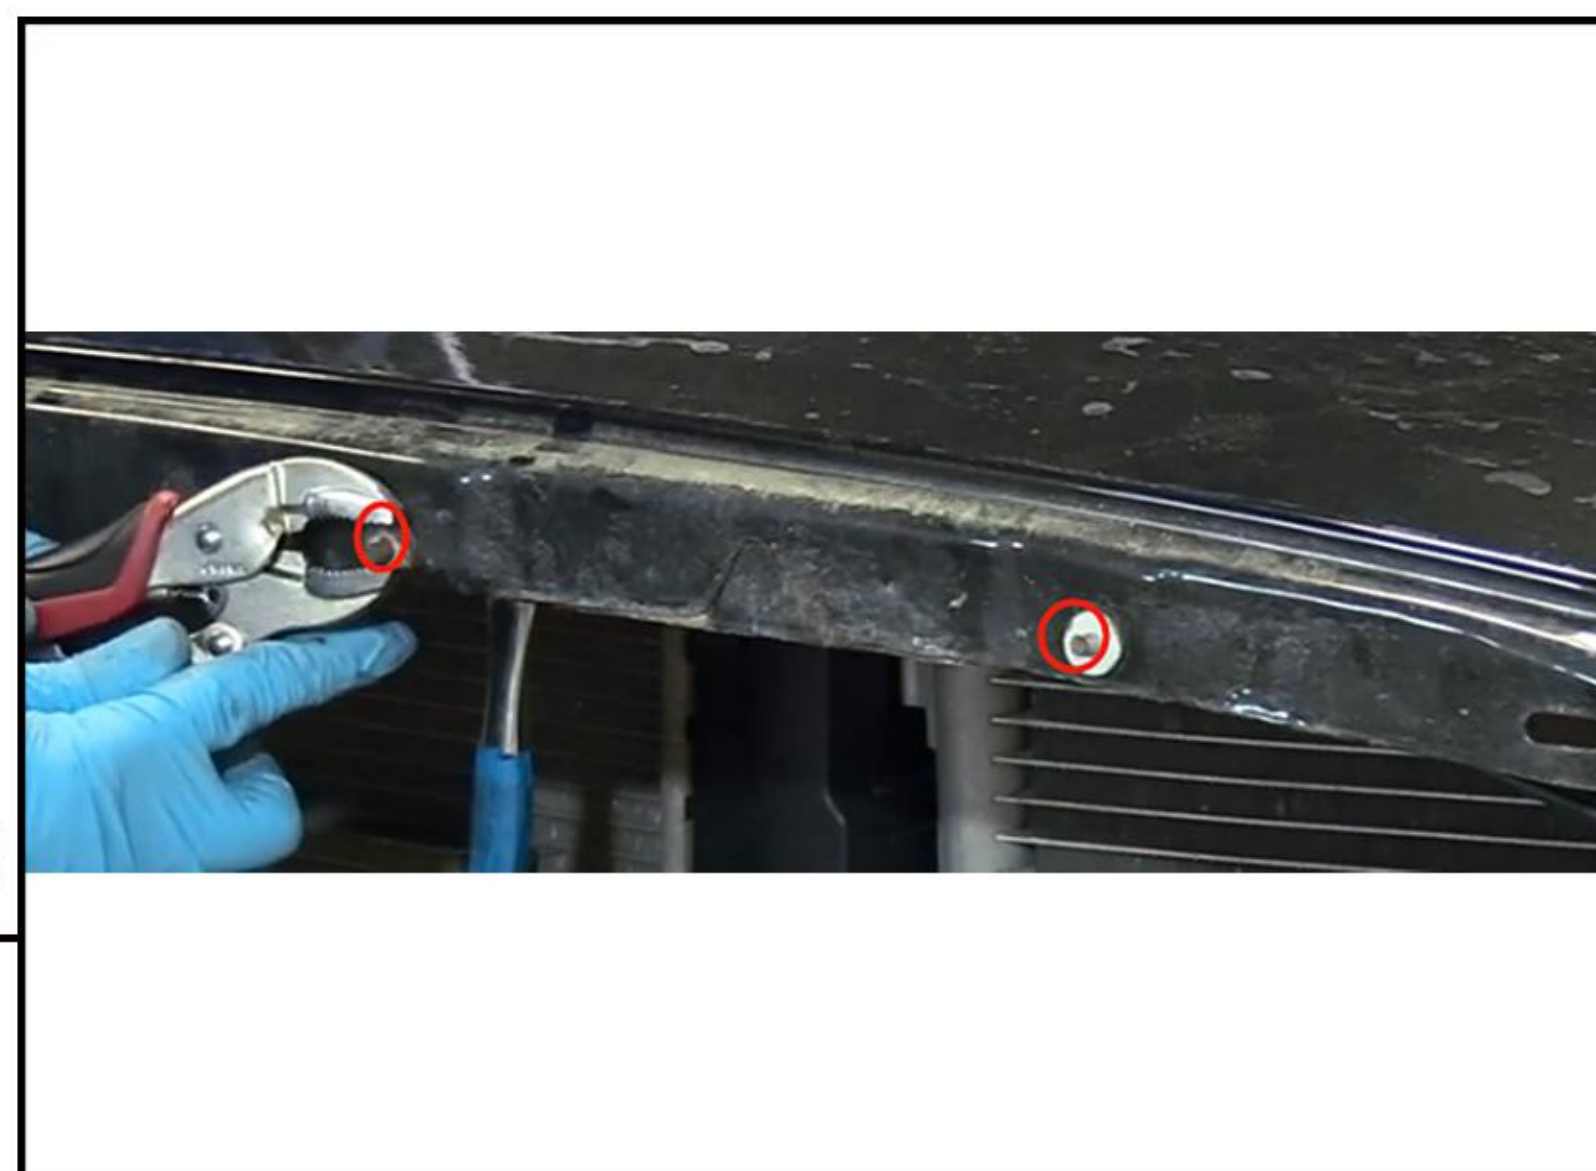


Remove all the metals from the plastic and metal nuts that are on the back with a pair of vice to save the nuts for the new grille.(You can clean the surface and put a coat of wax)

STEP 3

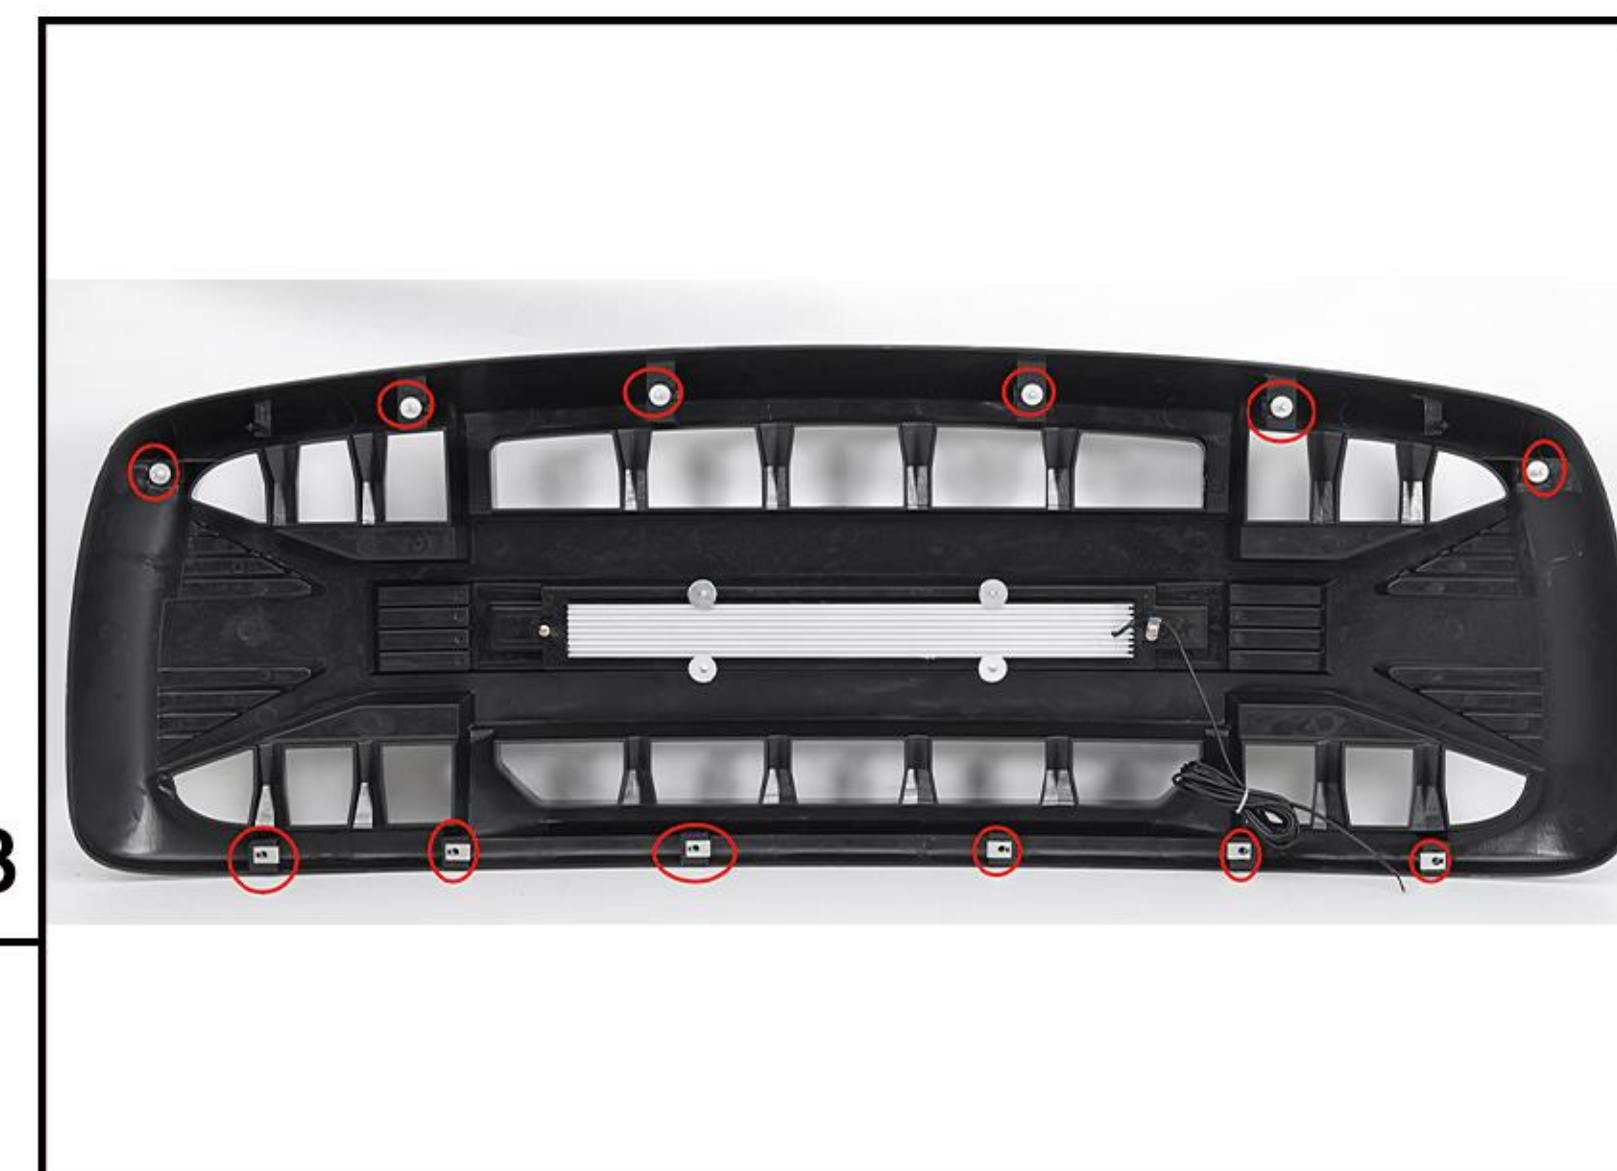

Align the top 6 screws on the back of the new grille and the bottom 6 metal clips (installed on the grille, not separately equipped with screws) with the holes on the body of the vehicle.

STEP 4

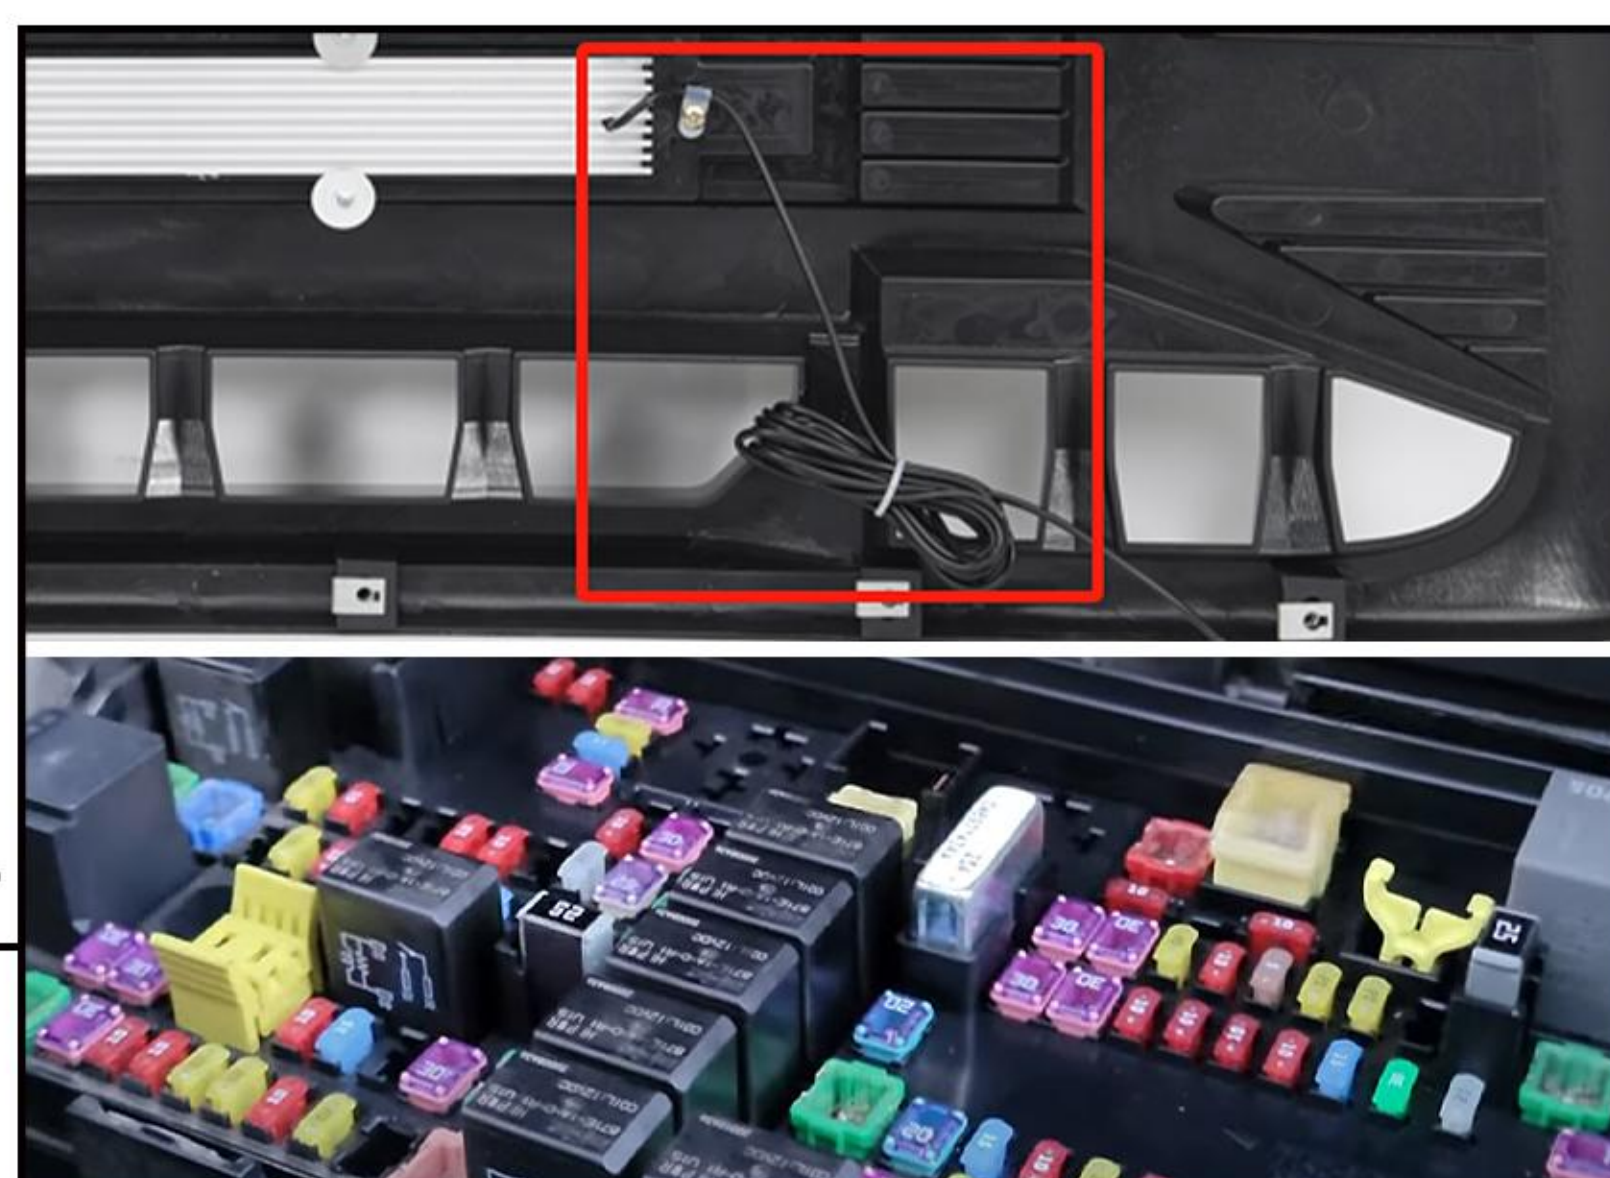

DRL Wiring:

Wire to fuse box,the red wire connects to the ACC,the black wire connects to the negative of battery.

STEP 5



Follow the step 1 in reverse order to complete the grille installation.