
FARRICADE

HD4 LD BN Hoop with Skid Plate 19-24 Dodge Ram 2500-3500

Installation Instructions

PARTS LIST: HR61446

Qty	Item Description	Qty	Item Description
1.	HD4 Skid Plate	2	M8 Single Bolt Plates
1	HD4 LD Bull Nose Hoop	6	8-1.25mm x 25mm Button Head Bolts
1	Driver/left Skid Plate Mount Bracket	2	8-1.25mm x 25mm Hex Bolts
1	Passenger/right Skid Plate Mount Bracket	2	8-1.25mm x 16mm Hex Bolts
1	Driver/left Light Mount Bracket	20	8mm x 24mm OD x 2mm Large Flat Washers
1	Passenger/right Light Mount Bracket	12	8mm Lock Washers
3	10-1.5mm x 25mm Button Head Bolts	10	8mm Hex Nuts
3	10mm x 30mm OD x 2.5mm Flat Washers	1	6mm Allen Wrench
3	10mm Lock Washers	1	5mm Allen Wrench

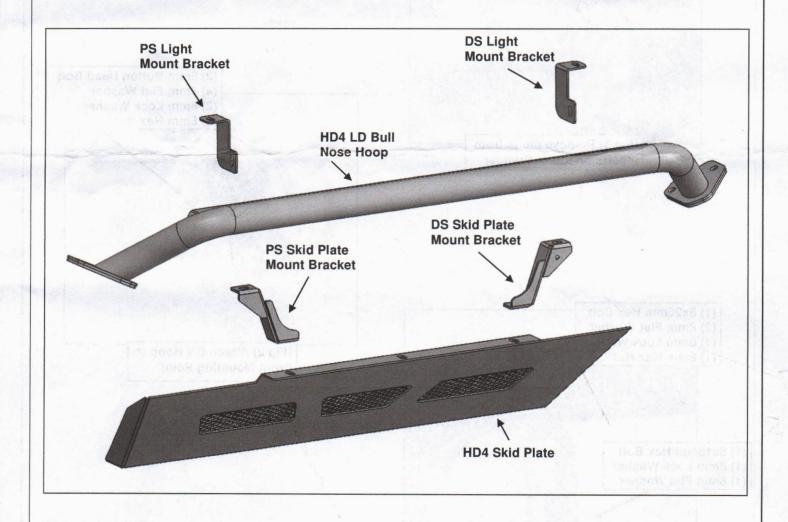

TOOLS REQUIRED






13mm Socket







Wrench

Follow (Fig 1 – 3) to attach BN Hoop to LD Bumper, then attach LED Brackets and LED Light as necessary. Ensure BN Hoop is level before tightening fasteners.

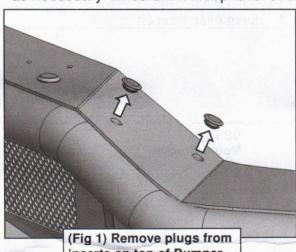

inserts on top of Bumper

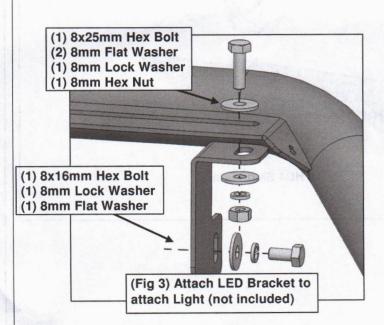

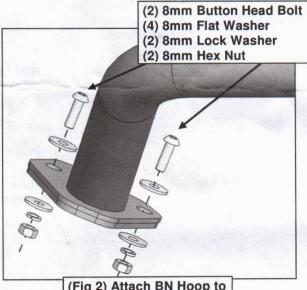

(Fig 2) Attach BN Hoop to **Front Mounting Point**

12-18-24 (JY)

Follow (Fig 4-8) to attach Skid Plate to Bumper. Ensure Skid Plate is level and fits well before tightening hardware. Installation is complete. Do periodic inspection to the installation to make sure that all hardware is secure and tight.



(Fig 8) Attach Skid Plate

Mounting Bracket to Skid Plate

(1) 8mm Bolt Plate
(1) 8mm Flat Washer
(1) 8mm Lock Washer
(1) 8mm Hex Nut

(Fig 5) Attach Skid Plate
Mounting Bracket to Vehicle

