

Instructions

Front Control Arm Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

- Raise vehicle evenly and safely support.

Never rely on a Jack only

- Proceed to remove wheels and un-bolt control arms.
We recommend only servicing one arm at a time.


Note - do not remove original steel outer shells.

- Heat up bushings - push out steel inner tube, followed by the original rubber.
- Clean eye-rings well. Push in supplied bushings - note diagram below for location.
- Grease bushing internal diameter and face with supplied grease only.
- Re-fit arm to vehicle, Tighten bolts to OEM specification.
- re-check bolts after 100kms travelled.

Application - Chevy Silverado 2500
- 2001- 06

(Refer current catalogue listing)

Contents - 2x bushing 90630
- 2x bushing 90631
- 4x bushing 91311
- 2x steel tubes 74.5mmL
- 2x steel tubes 98.0mmL
- Grease

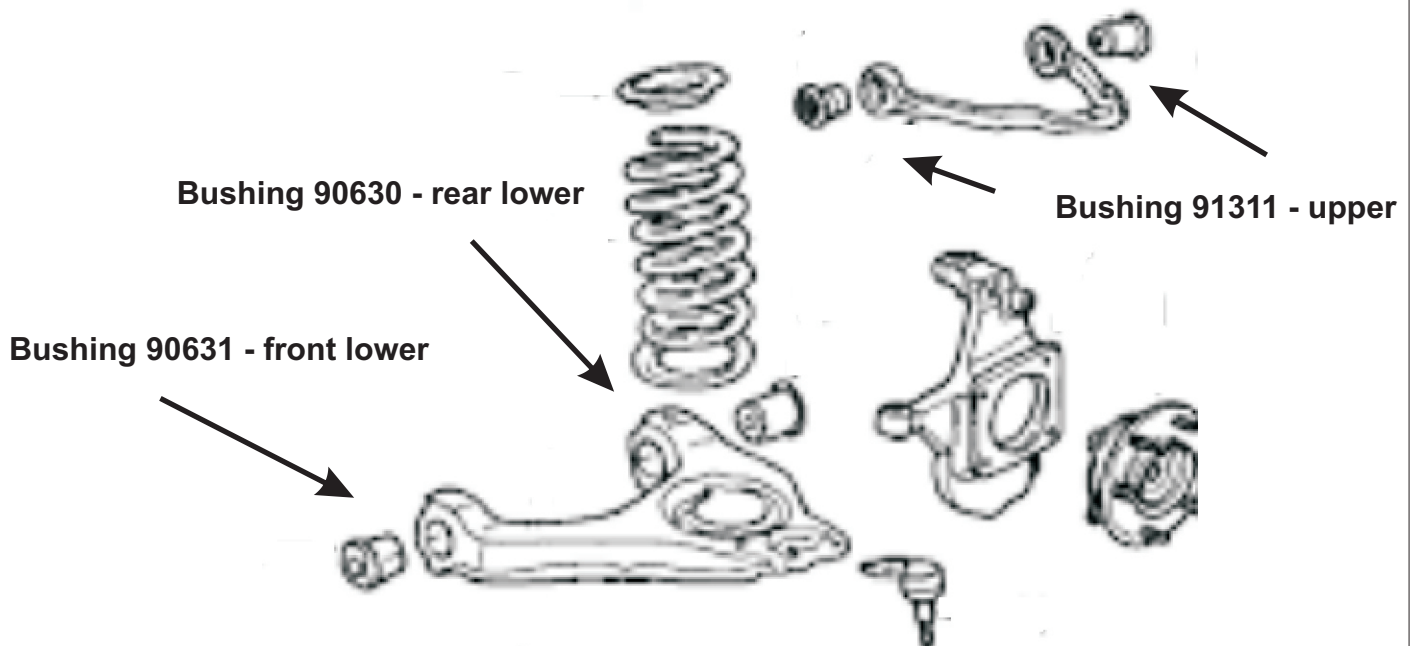

N.B: It is recommended that a licenced workshop or Tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.