




RHINO-RACK

QMVA10

CONTROLLED

Item	Component Name	Qty	Part No.
1	Quick Mount VA 10mm Spacer	2	M761
2	M6x30 Socket HD Cap Screw	2	B047
3	Instructions	1	R565

Note: Max Spacer height 30mm

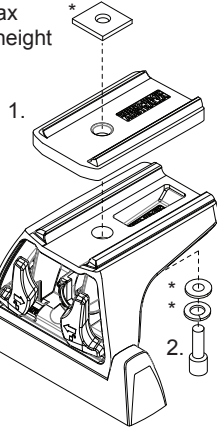

Quick Mount Spacers can be combined to achieve a desired height.

5mm	
10mm	
15mm	
20mm	
25mm	

*Fix the Quick Mount Spacer to the Leg using the hardware in the leg kit. The bolts found in the spacer kit will replace the original in the leg kit.

Issue: 02

Document No: R565

Prepared: Kayle Everett




RHINO-RACK

QMVA10

CONTROLLED

Item	Component Name	Qty	Part No.
1	Quick Mount VA 10mm Spacer	2	M761
2	M6x30 Socket HD Cap Screw	2	B047
3	Instructions	1	R565

Note: Max Spacer height 30mm

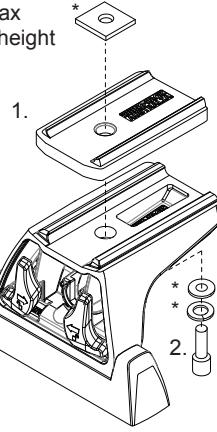

Quick Mount Spacers can be combined to achieve a desired height.

5mm	
10mm	
15mm	
20mm	
25mm	

*Fix the Quick Mount Spacer to the Leg using the hardware in the leg kit. The bolts found in the spacer kit will replace the original in the leg kit.

Issue: 02

Document No: R565

Prepared: Kayle Everett




RHINO-RACK

QMVA10

CONTROLLED

Item	Component Name	Qty	Part No.
1	Quick Mount VA 10mm Spacer	2	M761
2	M6x30 Socket HD Cap Screw	2	B047
3	Instructions	1	R565

Note: Max Spacer height 30mm

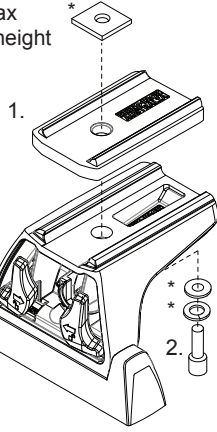

Quick Mount Spacers can be combined to achieve a desired height.

5mm	
10mm	
15mm	
20mm	
25mm	

*Fix the Quick Mount Spacer to the Leg using the hardware in the leg kit. The bolts found in the spacer kit will replace the original in the leg kit.

Issue: 02

Document No: R565

Prepared: Kayle Everett




RHINO-RACK

QMVA10

CONTROLLED

Item	Component Name	Qty	Part No.
1	Quick Mount VA 10mm Spacer	2	M761
2	M6x30 Socket HD Cap Screw	2	B047
3	Instructions	1	R565

Note: Max Spacer height 30mm

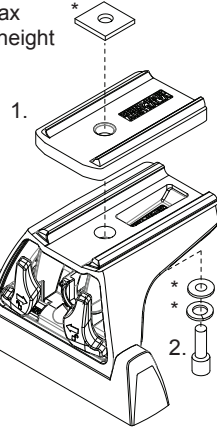

Quick Mount Spacers can be combined to achieve a desired height.

5mm	
10mm	
15mm	
20mm	
25mm	

*Fix the Quick Mount Spacer to the Leg using the hardware in the leg kit. The bolts found in the spacer kit will replace the original in the leg kit.

Issue: 02

Document No: R565

Prepared: Kayle Everett




RHINO-RACK

QMVA10

CONTROLLED

Item	Component Name	Qty	Part No.
1	Quick Mount VA 10mm Spacer	2	M761
2	M6x30 Socket HD Cap Screw	2	B047
3	Instructions	1	R565

Note: Max Spacer height 30mm

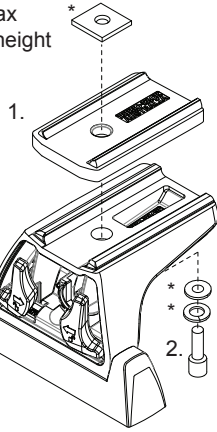

Quick Mount Spacers can be combined to achieve a desired height.

5mm	
10mm	
15mm	
20mm	
25mm	

*Fix the Quick Mount Spacer to the Leg using the hardware in the leg kit. The bolts found in the spacer kit will replace the original in the leg kit.

Issue: 02

Document No: R565

Prepared: Kayle Everett




RHINO-RACK

QMVA10

CONTROLLED

Item	Component Name	Qty	Part No.
1	Quick Mount VA 10mm Spacer	2	M761
2	M6x30 Socket HD Cap Screw	2	B047
3	Instructions	1	R565

Note: Max Spacer height 30mm

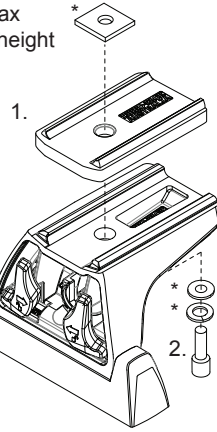

Quick Mount Spacers can be combined to achieve a desired height.

5mm	
10mm	
15mm	
20mm	
25mm	

*Fix the Quick Mount Spacer to the Leg using the hardware in the leg kit. The bolts found in the spacer kit will replace the original in the leg kit.

Issue: 02

Document No: R565

Prepared: Kayle Everett