



---

# FULL REPLACEMENT GRILLES

(2009-2012 RAM)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) Grille
- (1) Optional Wiring Harness

### TOOLS REQUIRED

---


- Soft Pry Tool
- 10mm Socket
- Socket Wrench

SKU #




**STEP 1**

Remove the air dam across the top of the radiator support. Using a soft pry tool, remove the plastic push clips securing the air dam to the vehicle.

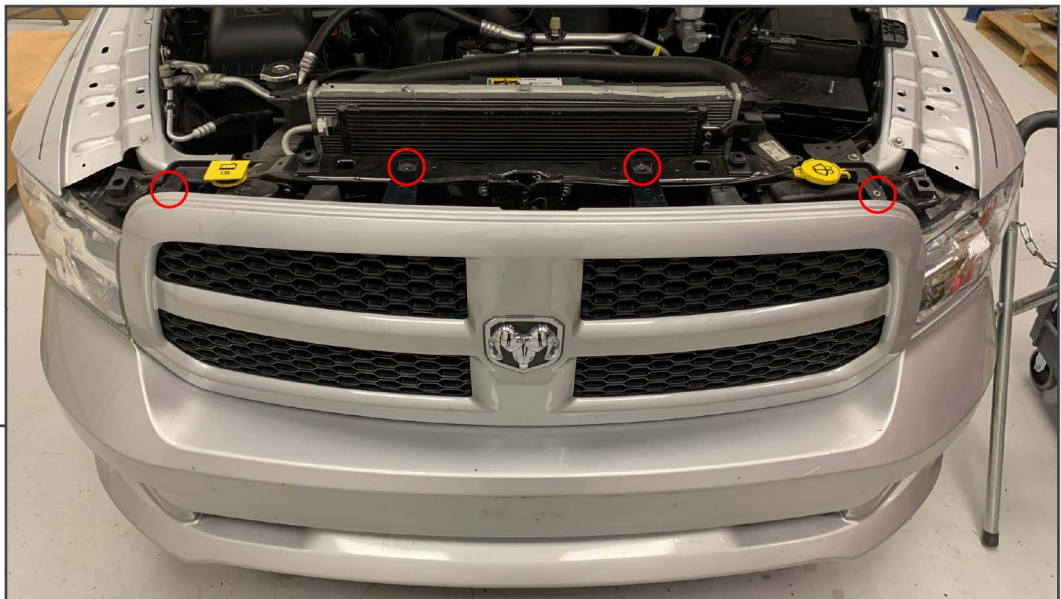

**STEP 2**

Using a 10mm socket, remove the (4) bolts securing top of the grille to the radiator support.

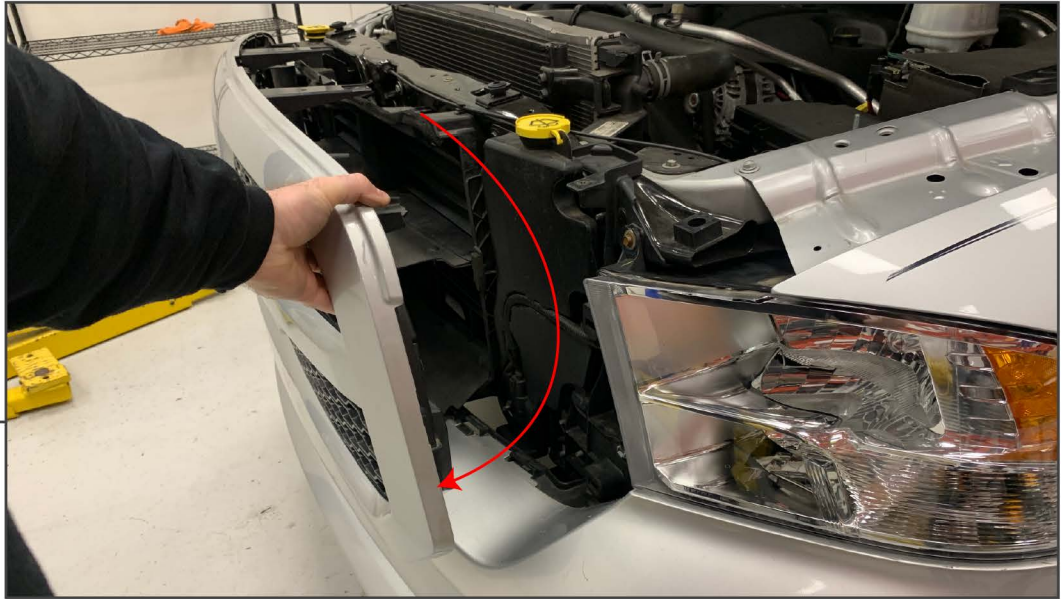
**STEP 3**

Place your hand down behind the grille and press at the bottom of the grille away from the radiator support and pull the grille away from the vehicle.

**STEP 4**

Align the supplied corner brackets to the back of the grille. Each bracket has a specific location on the grille. Line the alignment tabs up with each bracket. Then attach the brackets to the grille using the supplied screws.

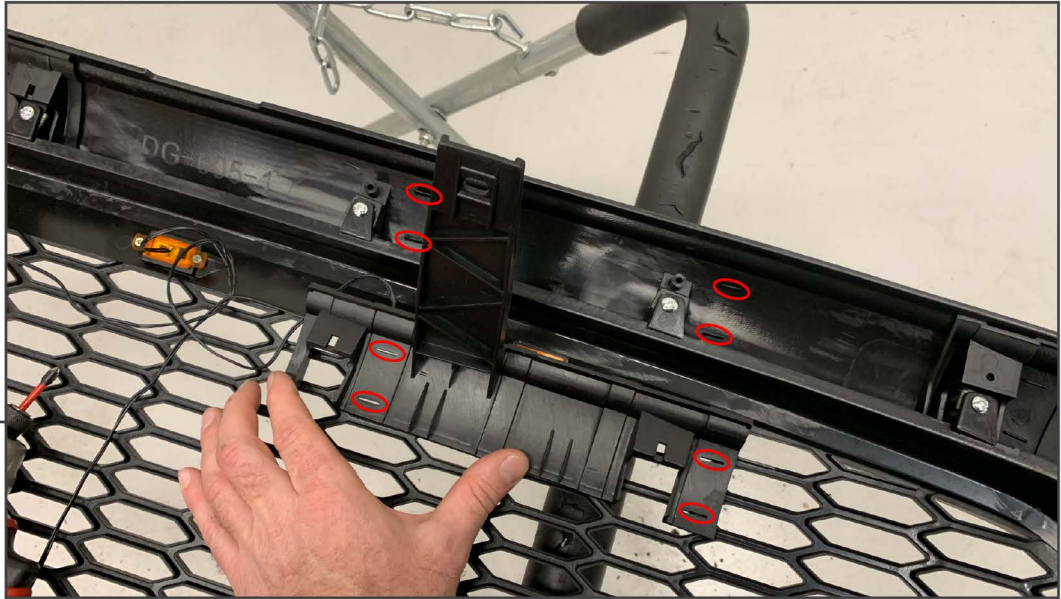

**STEP 5**

Align the supplied center brackets to the back of the grille. Each bracket has a specific location on the grille. Line the alignment tabs up with each bracket. Then attach the brackets to the grille using the supplied screws.

**STEP 6**

Align the supplied bottom center grille brackets to the grille. Each bracket has a specific location on the grille. Line the alignment tabs up with each bracket. Then attach the brackets to the grille using the supplied screws.



**STEP 7**


Press the supplied push clips into the (2) lower grille clip locations.



**STEP 8**

Reinstall the grille following Step 1-3 in reverse order.




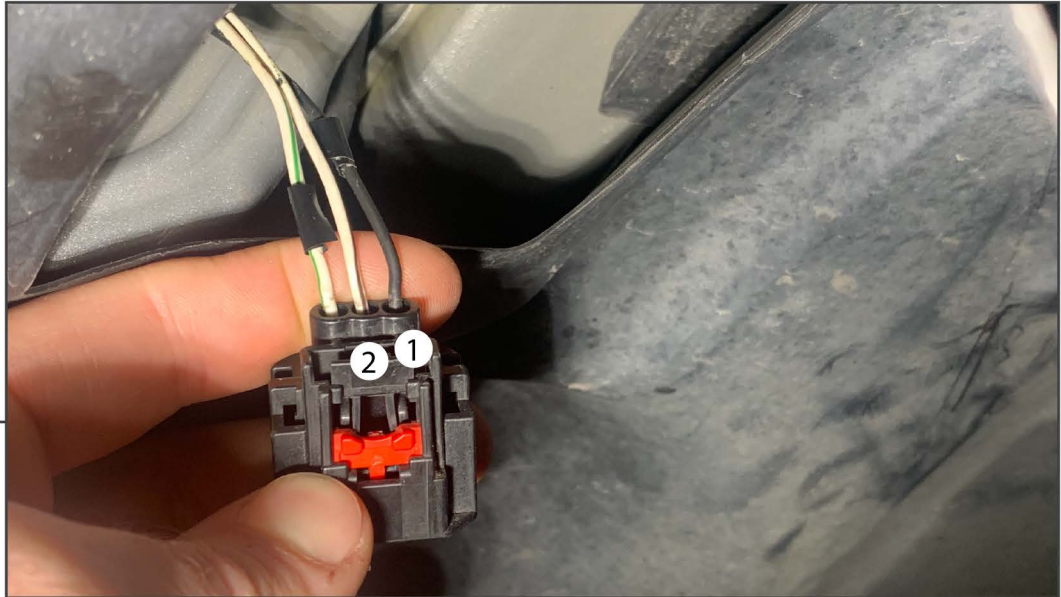

**STEP 9**

If equipped with grille lights, wire the grille lights as follows:

- |                          |   |                               |
|--------------------------|---|-------------------------------|
| <b>Grille LED Lights</b> | - | <b>Headlight Marker Light</b> |
| Black                    | - | Black (1)                     |
| Black w/ White Stripe    | - | White/Black (2)               |

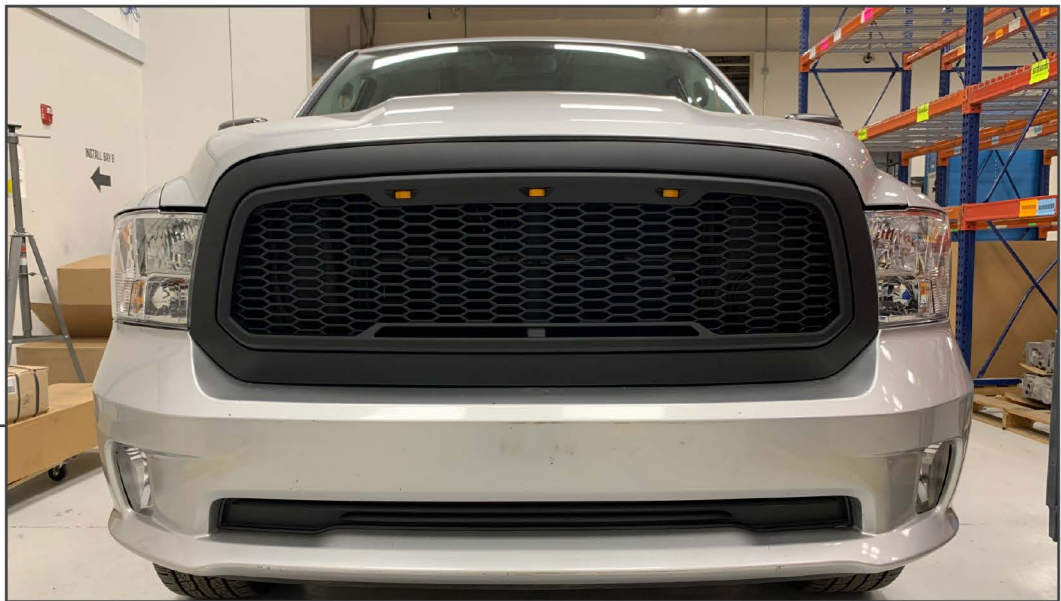

**STEP 10**

Installation is now complete.