

## INSTALLATION INSTRUCTIONS

4000 SERIES SIDE STEPS PART#4094 (B-C-PS)

09-13 DODGE RAM 1500 / 2010-13 2500HD, 3500HD REG CAB P/U 4DR 2/4WD

**Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!**

### PARTS LIST



<u>QTY</u>	<u>PART DESCRIPTION</u>	<u>QTY</u>	<u>PART DESCRIPTION</u>
10	3/8" X 1 1/4" HEX BOLTS	1	4094D DRIVER SIDE STEP
18	3/8" FLAT WASHERS	1	DRIVER FRONT BRACKET
18	3/8" LOCK WASHERS	1	DRIVER FRONT AUXILIARY BRACKET
10	3/8" HEX NUTS	1	DRIVER REAR BRACKET
4	1/2" X 2" HEX BOLTS	1	DRIVER REAR AUXILIARY BRACKET
4	1/2" FLAT WASHERS	1	4094P PASSENGER SIDE STEP
4	1/2" LOCK WASHERS	1	PASSENGER FRONT BRACKET
8	VINYL GASKETS	1	PASSENGER FRONT AUXILIARY BRACKET
4	3/8" T-BOLT	1	PASSENGER REAR BRACKET
4	3/8" T-PLATE	1	PASSENGER REAR AUXILIARY BRACKET

### INSTALLATION INSTRUCTIONS

**READ THE INSTRUCTIONS COMPLETELY BEFORE YOU BEGIN THE INSTALLATION**

**STEP-1** BEGIN THE INSTALLATION BY INSTALLING THE DRIVER SIDE FRONT BRACKETS. LOCATE THE HOLES IN THE BODY PANEL AND UNDERSIDE OF THE BODY AT THE FRONT OF THE CAB.  
**PHOTO #1**

**STEP-2** INSTALL (1) 3/8" T-PLATE IN THE OBLONG HOLE IN THE BODY PANEL AND INSTALL (1) VINYL GASKET OVER THE THREADS TO PREVENT THE T-PLATE FROM FALLING INTO THE BODY. INSTALL (1) 3/8" T-BOLT IN THE SQUARE HOLE IN THE UNDERSIDE OF THE BODY AND INSTALL (1) VINYL GASKET OVER THE THREADS TO PREVENT THE T-BOLT FROM FALLING INTO THE BODY. **PHOTO #2**

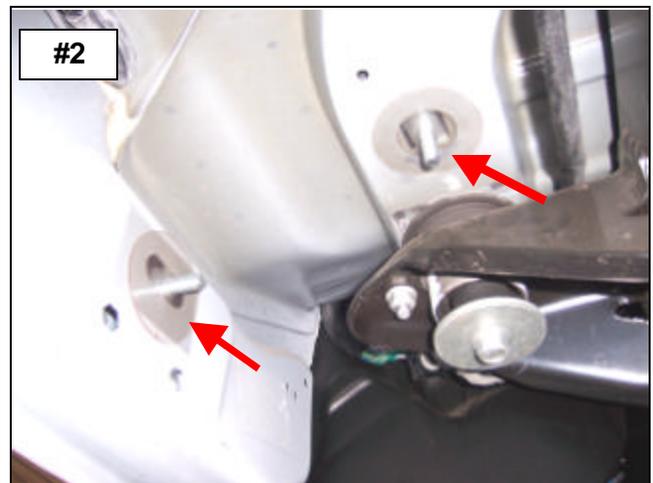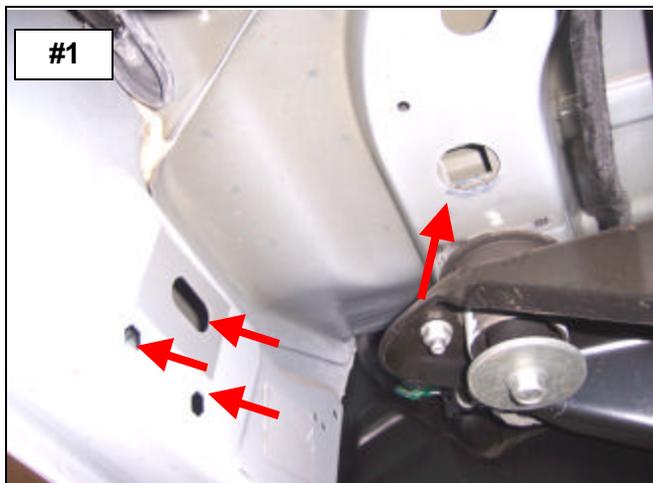


**STEP-3** ATTACH THE DRIVER SIDE FRONT BRACKET TO THE BODY PANEL USING THE T-PLATE (2) 3/8" X 1/4" HEX BOLTS, (3) 3/8" FLAT WASHERS, (3) 3/8" LOCK WASHERS AND (1) 3/8" HEX NUT. HAND TIGHTEN. **PHOTO #3**

**STEP-4** ATTACH THE DRIVER SIDE FRONT AUXILIARY BRACKET TO THE UNDERSIDE OF THE BODY USING THE T-BOLT, (1) 3/8" FLAT WASHER, (1) 3/8" LOCK WASHER AND (1) 3/8" HEX NUT. HAND TIGHTEN. **PHOTO #4**



**STEP-5** LOCATE THE HOLES IN THE BODY PANEL AND UNDERSIDE OF THE BODY AT THE REAR OF THE CAB. **PHOTO #5**

**STEP-6** INSTALL (1) 3/8" T-PLATE IN THE OBLONG HOLE IN THE BODY PANEL AND INSTALL (1) VINYL GASKET OVER THE THREADS TO PREVENT THE T-PLATE FROM FALLING INTO THE BODY. INSTALL (1) 3/8" T-BOLT IN THE SQUARE HOLE IN THE UNDERSIDE OF THE BODY AND INSTALL (1) VINYL GASKET OVER THE THREADS TO PREVENT THE T-BOLT FROM FALLING INTO THE BODY. **PHOTO #6**

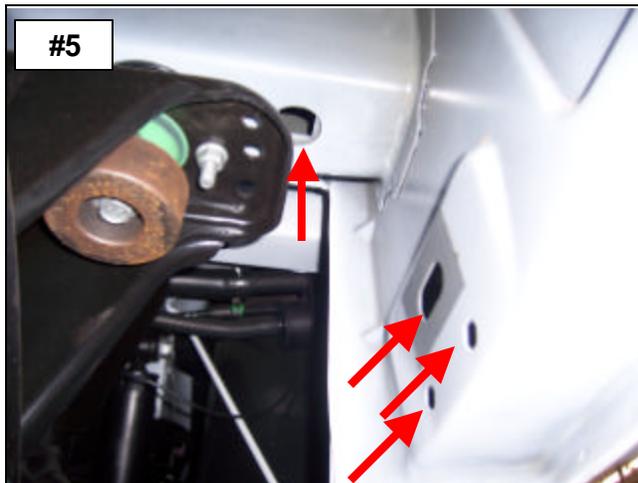

**STEP-7** ATTACH THE DRIVER SIDE REAR BRACKET TO THE BODY PANEL USING THE T-PLATE (2) 3/8" X 1 1/4" HEX BOLTS, (3) 3/8" FLAT WASHERS, (3) 3/8" LOCK WASHERS AND (1) 3/8" HEX NUT. HAND TIGHTEN. **PHOTO #7**

**STEP-8** ATTACH THE DRIVER SIDE REAR AUXILIARY BRACKET TO THE UNDERSIDE OF THE BODY USING THE T-BOLT, (1) 3/8" FLAT WASHER, (1) 3/8" LOCK WASHER AND (1) 3/8" HEX NUT AND TO THE FLANGE OF THE REAR BRACKET USING (1) 3/8" X 1 1/4" HEX BOLT, (1) 3/8" FLAT WASHER, (1) 3/8" LOCK WASHER AND (1) 3/8" HEX NUT. HAND TIGHTEN. **PHOTO #8**



**STEP-9** ATTACH THE DRIVER SIDE STEP TO THE FRONT AND REAR BRACKETS USING (1) 1/2" X 2" HEX BOLT, (1) 1/2" FLAT WASHER AND (1) 1/2" LOCK WASHER FOR EACH BRACKET.

**STEP-10** ALIGN THE SIDE STEP WITH THE VEHICLE AND TIGHTEN ALL MOUNTING BRACKET AND SIDE STEP NUTS AND BOLTS. **REPEAT THE ABOVE PROCESS TO INSTALL THE PASSENGER SIDE BRACKETS AND SIDE STEP.**



**FOR TECHNICAL OR WARRANTY INFORMATION CALL:**  
TOLL FREE (888) 427-4466 FAX (714) 672-0278  
GO RHINO! Products® 591 W. Apollo St. Brea, CA 92821