

INSTRUCCIONES DE INSTALACIÓN

4097 Sidebar

02 - 08 Dodge Ram Quad Cab 1500, 2500/3500 HD (New Body Style)

Lista de Partes:

Cantidad

- (1) Juego de estribos (Conductor & Pasajero)
- (2) Brackets principales frontales (Conductor & Pasajero)
- (2) Brackets principales traseros (Conductor & Pasajero)
- (2) Brackets auxiliares frontales
- (2) Brackets auxiliares traseros
- (8) Placas de fijación c/tornillo
- (4) Rondana gruesa espaciadora pequeña
- (4) Rondana gruesa espaciadora grande

(1) Kit de tornillos 37123:

- (4) Tornillos Cab. Hex. 1/2 x 2"
- (8) Rondanas planas 1/2"
- (4) Rondanas de presión 1/2"
- (8) Rondanas planas 3/8"
- (8) Rondanas de presión 3/8"
- (8) Tuercas hex. 3/8"
- (4) Tornillos M12 x 120 mm
- (8) Empaques vynil

Herramienta Requerida:

Dado 3/4" Llave 9/16" Matraca
Dado 18 mm Dado 9/16"

Instrucciones:

Tiempo aprox. de instalación: 24 min.

1. Lea y comprenda perfectamente las instrucciones antes de comenzar la instalación.
2. El juego de estribos consiste en lado conductor y pasajero. Asegúrese de determinar el lado correcto antes de instalar.
3. Localice y remueva los hules ovalados o cintas protectoras, que se encuentran en la parte delantera y posterior del vehículo por debajo de la cabina, como se muestra en la **Foto 1**.
4. Coloque las placas de fijación c/tornillo dentro de los galuces en el panel de la camioneta, antes de introducir las placas coloque los empaques redondos transparentes a los tornillos (esto evitara que el tornillo se caiga al interior del rocker panel). Fije los brackets principales delantero y trasero, utilizando las rondanas planas, de presión y tuercas 3/8". **Foto 2**.
- 5.- Localice y remueva el tornillo de montaje de cabina delantero (no lo volverá a utilizar), coloque el bracket auxiliar delantero y atornille usando el tornillo **M12 x 120 mm** con una rondana plana 1/2", como aparece en la **Foto 3**. No apriete aún. Repita el mismo procedimiento para el bracket auxiliar trasero. **Nota: Para el modelo 2006 el tornillo del montaje de cabina requiere de la aplicación de mayor fuerza para aflojar el tornillo con rondana; así como agregar la rondanas espaciadoras , Foto 5.**
- 6.- Pase un tornillo de **1/2 x 2"** con su rondana plana y de presión a través del bracket auxiliar y el principal y atornille al estribo, como se muestra en la **Foto 4**. No apriete aún.
7. Alinee el estribo y apriete toda la tornillería. Repita del lado del pasajero.
8. Recuerde revisar y reapretar la tornillería periódicamente.

Diagrama de Ensamble:

Foto 1



Foto 2



Recomendaciones de cuidado y mantenimiento:

Diseño:


Calidad:

Para proteger el acabado de este producto, manténgalo limpio para evitar la corrosión y no utilice ceras abrasivas.

INSTRUCCIONES DE INSTALACIÓN

4097 Sidebar


Foto 3

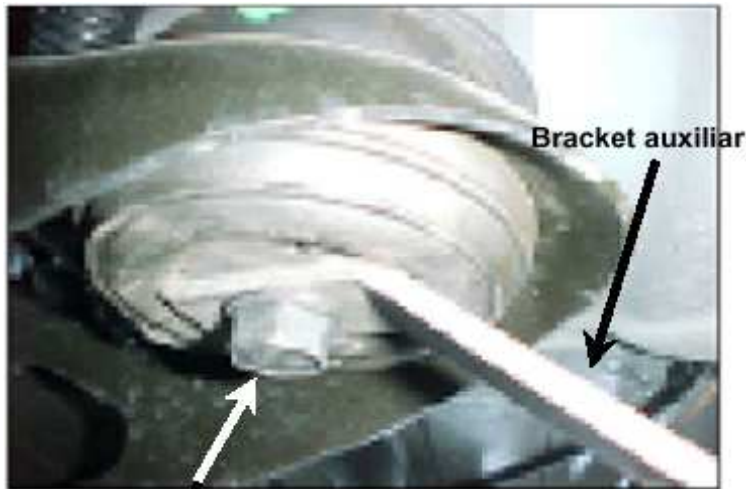

Tornillo de montaje
de cabina

Montaje modelos
anteriores a 2006


Foto 4

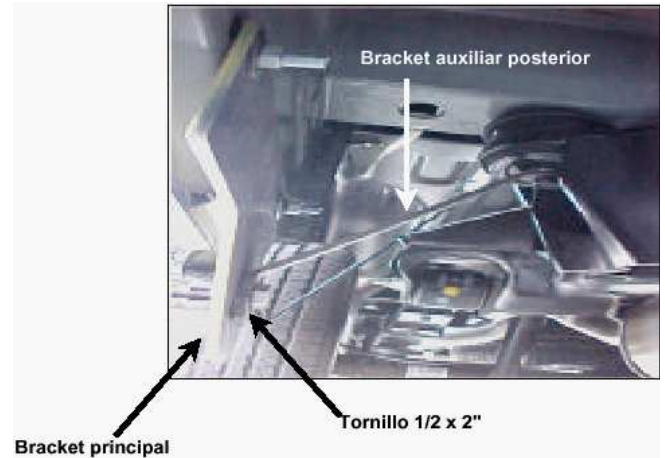

Bracket principal

Tornillo 1/2 x 2"

Foto 5

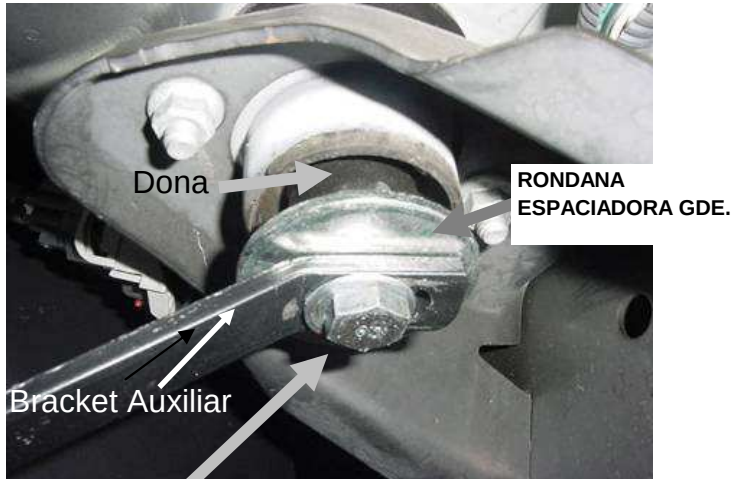

TORN. CAB. HEX. M12 X 120 MM.



MONTAJE 2006. NOTA: EL TORNILLO TIENE MÁS
TORQUE DE APRIETE.



Estribo Instalado

Recomendaciones de cuidado y mantenimiento:

Para proteger el acabado de este producto, manténgalo limpio para evitar la corrosión y no utilice ceras abrasivas.

Diseño:

Calidad:

INSTALLATION INSTRUCTIONS

4097 Sidebar

2002 - 2008 Dodge Ram Quad Cab 1500, 2500/3500 HD(New Body Style)

Parts List:

QTY

- (1) Nerfstep Set (Driver & Passenger)
- (2) Mounting Front Main Brackets (Driver & Passenger)
- (2) Mounting Rear Main Brackets (Driver & Passenger)
- (2) Mounting Front Auxiliary Brackets
- (2) Mounting Rear Auxiliary Brackets
- (8) Bolt plates
- (4) 1/2" HD Small thick flat washers
- (4) 1/2" HD Big thick flat washer

(1) Hardware kit 37123:

- (4) 1/2 x 2" Hex Head Bolt
- (8) 1/2" Flat Washer
- (4) 1/2" Lock Washer
- (8) 3/8" Flat Washer
- (8) 3/8" Lock Washer
- (8) 3/8" Hex Nut
- (4) M12 x 120 mm Hex. Head Bolt
- (8) Gaskets

Tools required:

- | | | |
|--------------|--------------|---------|
| 3/4" Socket | 9/16" Wrench | Ratchet |
| 9/16" Socket | 18 mm Socket | |

Instructions:


Approximated installation time: 24 min.

1. Before beginning the installation, please read the instructions thoroughly. If any of the listed hardware is missing, please stop the installation and call your distributor immediately.
- 2.- Nerfstep set consist of a driver and passenger side. Be sure to determine the correct side before installation.
- 3.- Locate and remove 4 rubber plugs at the front and rear of the vehicle on the inside of the vehicle rocker panel, as shown in **Picture 1**.
- 4.-Insert bolt plates into de oval openings in the vehicle rocker panel, before place bolt plates. Place the front and rear main mounting brackets up to the bolt plates, making sure that the long end of the main brackets is the top as shown in **Picture 2**. Secure the front and rear main mounting brackets to the bolt plates using 3/8" flat and lock washers and hex nuts.
- 5.- Locate, remove and discard the front body mount bolt from the vehicle. Place the front auxiliary bracket onto the body mount bolt and re-attach using **M12 x 120 mm** bolt and 1/2" flat washer. **Picture 3**. Do not tighten at this time. Repeat this process for the rear auxiliary bracket. **Note 1:** Due to the variation of vehicle body mounts, the use of 1-2 H.D. flat washers may be required to space the front body mount bolts to avoid bottoming out the bolts into the body. **Note 2: For model 2006, the cabinet mounting bolt requires a higher strength to untighten the bolt; and to attach the big flat washer , Picture 5.**
- 6.- Place the nerfstep up to the front and rear main brackets. Align the front main bracket, front auxiliary bracket, and the front of the nerfstep and then secure them together using a **1/2 x 2"** hex. head bolt, flat washer and lock washer. **Picture 4**. Repeat this process for the rear of the nerfstep.
- 7.- Make any final adjustments to the alignment of the nerfstep and then tighten all of the fasteners until snug. Repeat for passenger side.
- 8.- You may need to periodically re-tighten the fasteners on your Nerfstep.

Assembly Diagram: **Picture 1**



Picture 2

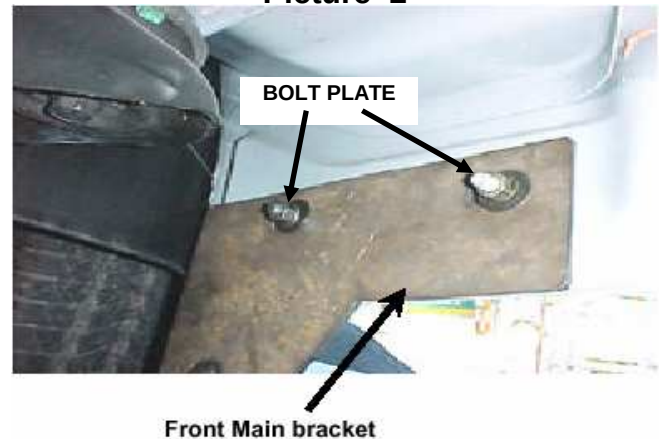

Cleaning and care instructions:

Design:

Quality:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.

Revised 06/Oct/2008

G:\Usuarios\Diseño\Instructivos PDF\37s\37123-I.Pdf

INSTALLATION INSTRUCTIONS

4097 Sidebar


Picture 3




Auxiliary bracket mounted to the body mount on vehicle

Mounting for models before 2006

Picture 4

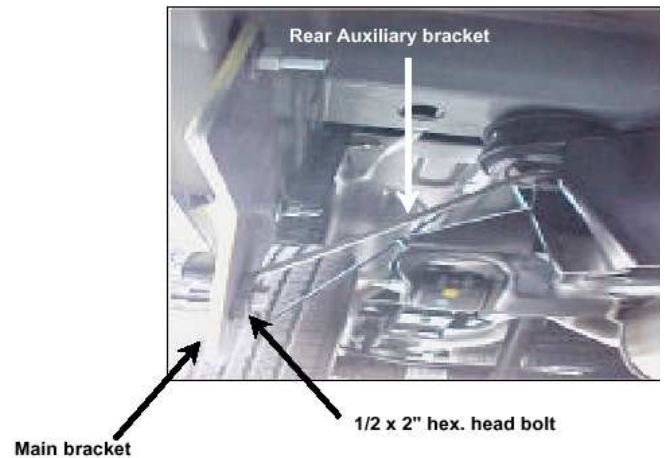

Picture 5

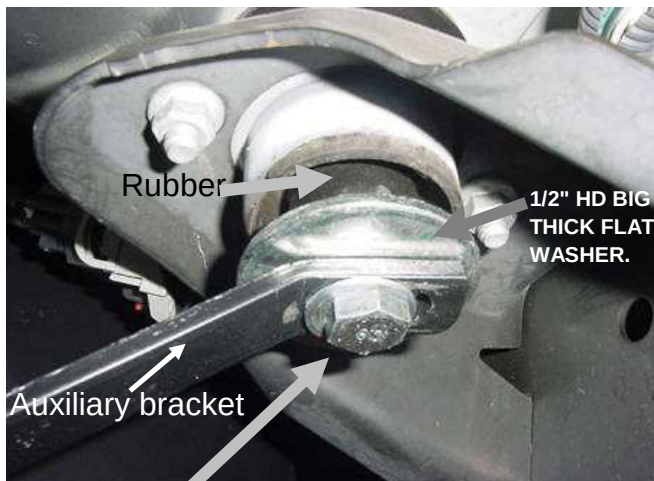

M12 x 120 mm. HEX HEAD BOLT

Mounting 2006 Model. **Note:** the bolt has more tighten strength.



Sidebar Installed

Cleaning and care instructions:

Design:

Quality:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.

Revised 06/Oct/2008

G:\Usuarios\Diseño\Instructivos PDF\37s\37123-I.Pdf