
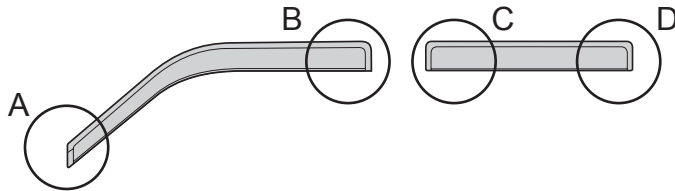
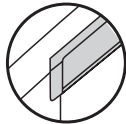
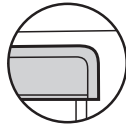
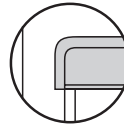


This product is designed to be placed on the painted metal surface of the door.

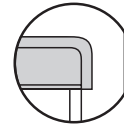


70°-100° F (Install temp.)

- 1 Clean door's painted surface, mirror cap, and mirror cap rubber seal (if applicable) with alcohol pad. If Surface Prep Pads are included, apply one coat of Surface Prep to previously cleaned areas on all doors promptly to prevent evaporation.
- 2 Remove tape liner from front and rear flanges. Peel back 2" from each end of top flange.
- 3 Align front flange to mirror cap. Front end flange may overlap mirror cap depending on vehicle style. (If rubber window seal is present, visor attaches to the door above the trim and seal.) Attach top and rear flanges to doors painted surface.
- 4 Remove tape liner by pulling on free ends. Apply pressure to flanges to secure.
- 5 The rear visor attaches with the same preparation methods as the front visor.

**A****B****C****D**




IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219

This product is designed to be placed on the painted metal surface of the door.


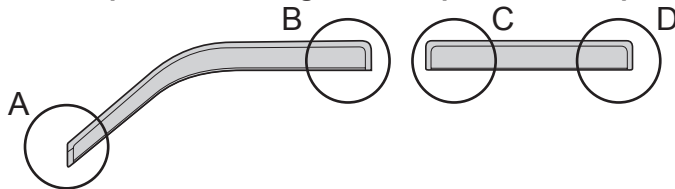


70°-100° F (Install temp.)

- 1 Clean door's painted surface, mirror cap, and mirror cap rubber seal (if applicable) with alcohol pad. If Surface Prep Pads are included, apply one coat of Surface Prep to previously cleaned areas on all doors promptly to prevent evaporation.
- 2 Remove tape liner from front and rear flanges. Peel back 2" from each end of top flange.
- 3 Align front flange to mirror cap. Front end flange may overlap mirror cap depending on vehicle style. (If rubber window seal is present, visor attaches to the door above the trim and seal.) Attach top and rear flanges to doors painted surface.
- 4 Remove tape liner by pulling on free ends. Apply pressure to flanges to secure.
- 5 The rear visor attaches with the same preparation methods as the front visor.

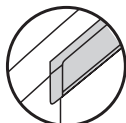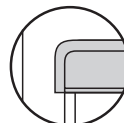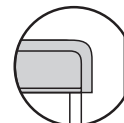**A****B****C****D**



IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219

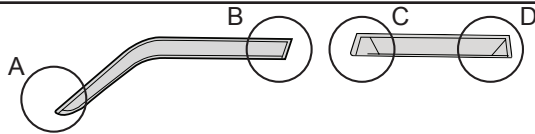



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



- 1 Lower drivers side window and clean window frame and chrome trim with an alcohol pad. **NOTE:** Visors mount on the OUTSIDE door trim.
- 2 Peel back 2" (5 cm) of tape liner from each end of lateral flange.
- 3 Align the visor with the previously cleaned surface. The flanges of the visor attach to the surface of the window's chrome trim.
- 4 Verify proper positioning. With the visor in its final position, remove remaining tape liner by pulling on free ends.
- 5 Apply pressure along all flanges to ensure adhesion of tape to the trim surfaces.
- 6 The rear visor attaches with the same preparation methods as the front. Center the visor over the window and align on the chrome trim.

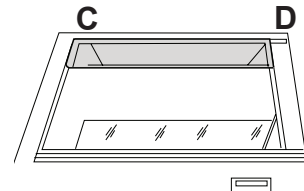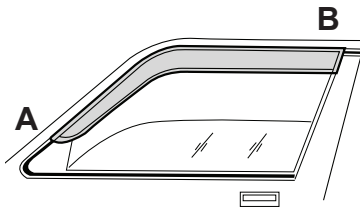



IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-858-5634

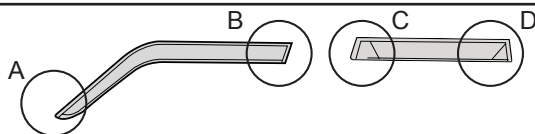

The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



- 1 Lower drivers side window and clean window frame and chrome trim with an alcohol pad. **NOTE:** Visors mount on the OUTSIDE door trim.
- 2 Peel back 2" (5 cm) of tape liner from each end of lateral flange.
- 3 Align the visor with the previously cleaned surface. The flanges of the visor attach to the surface of the window's chrome trim.
- 4 Verify proper positioning. With the visor in its final position, remove remaining tape liner by pulling on free ends.
- 5 Apply pressure along all flanges to ensure adhesion of tape to the trim surfaces.
- 6 The rear visor attaches with the same preparation methods as the front. Center the visor over the window and align on the chrome trim.

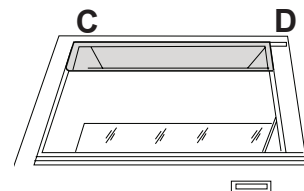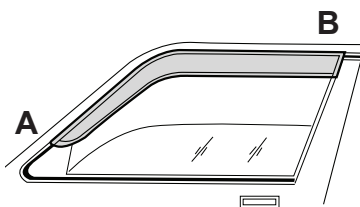

IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-858-5634