



# **BIG HORN STYLE UPPER REPLACEMENT GRILLE; BLACK & RED**

(2009-2012 RAM)

---

INSTALLATION INSTRUCTIONS

## **CONTENTS**

---


(1) Grille  
(1) Optional Wiring Harness

## **TOOLS REQUIRED**

---


Soft Pry Tool  
10mm Socket  
Socket Wrench

SKU # R118082

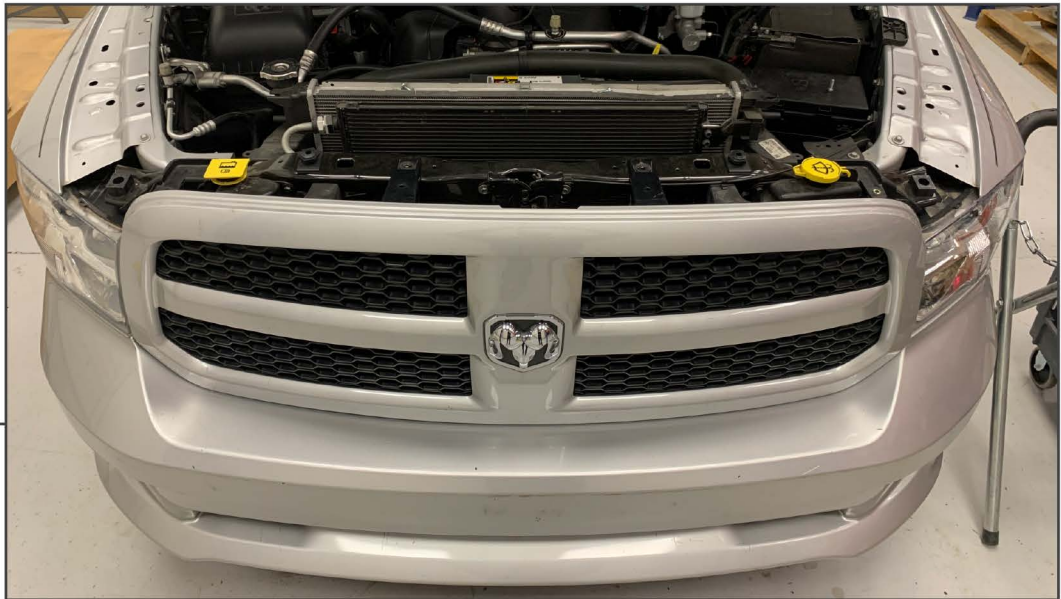


**STEP 1**

Remove the air dam across the top of the radiator support. Using a soft pry tool, remove the plastic push clips securing the air dam to the vehicle.

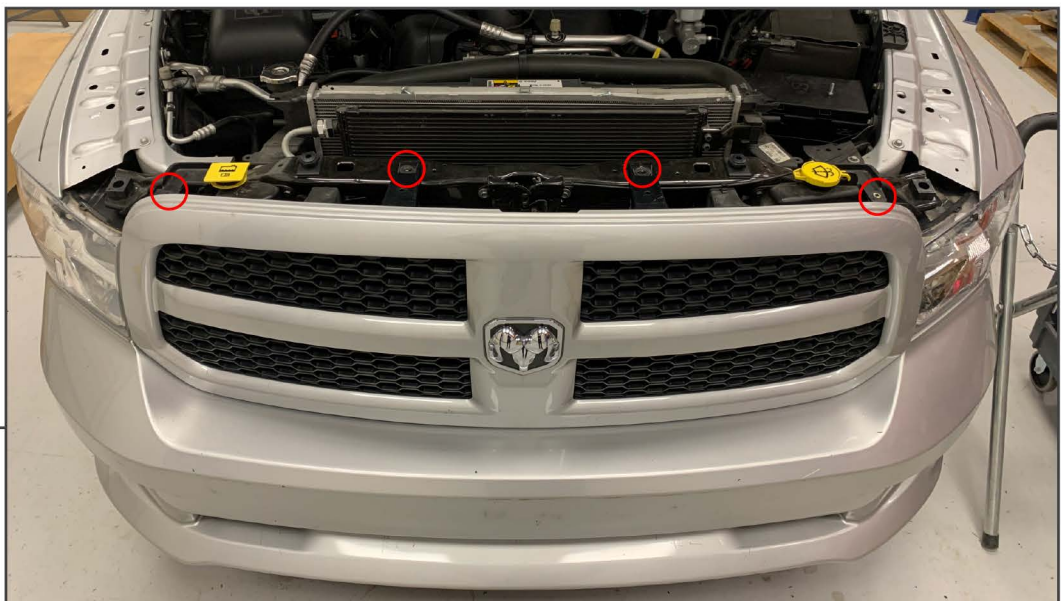

**STEP 2**


Using a 10mm socket, remove the (4) bolts securing top of the grille to the radiator support.

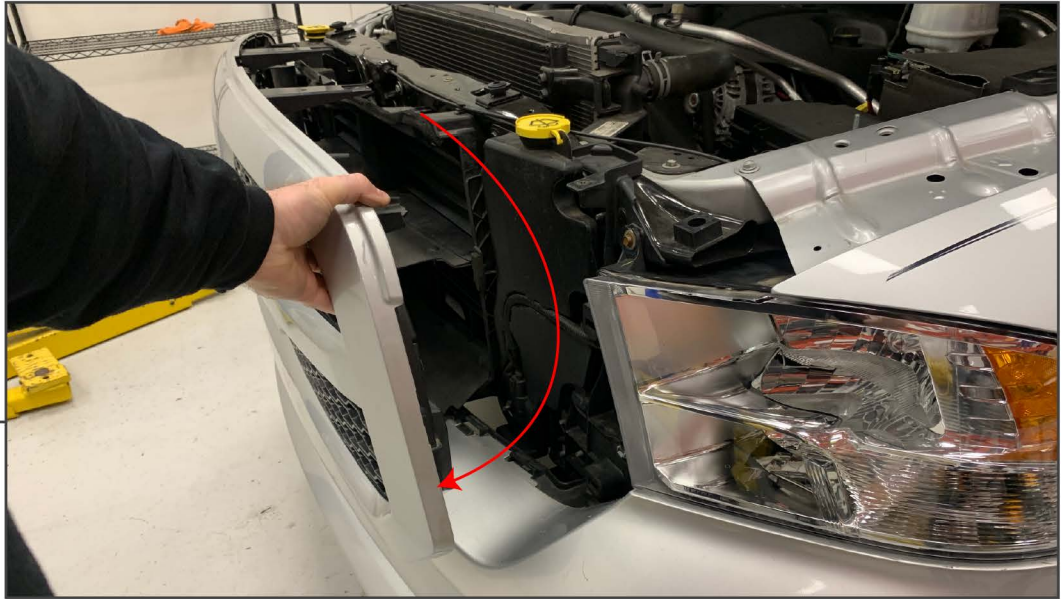**STEP 3**

Place your hand down behind the grille and press at the bottom of the grille away from the radiator support and pull the grille away from the vehicle.

**STEP 4**

Align the supplied corner brackets to the back of the grille. Each bracket has a specific location on the grille. Line the alignment tabs up with each bracket. Then attach the brackets to the grille using the supplied screws.

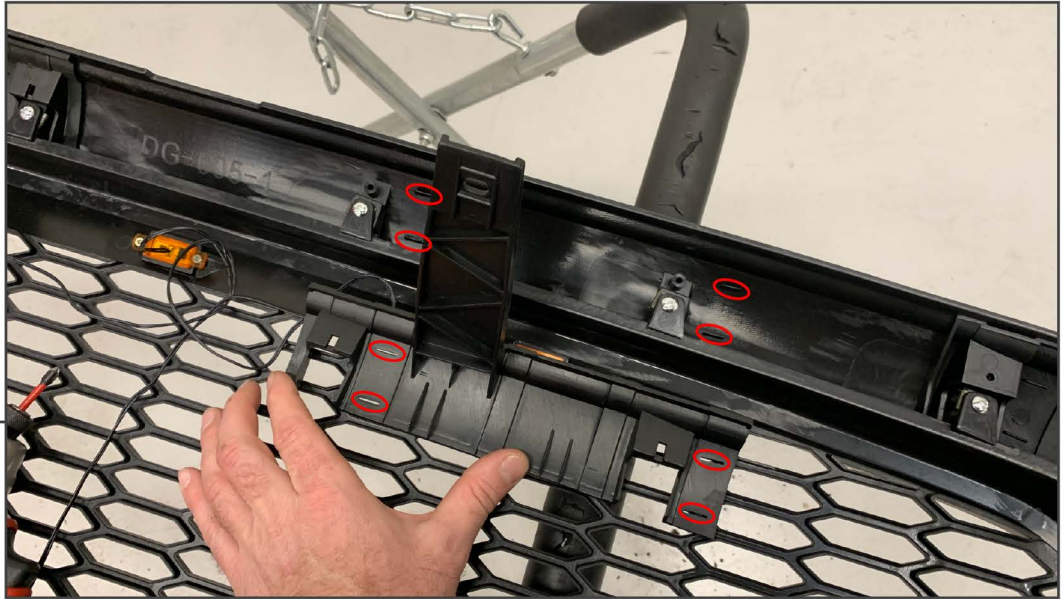**STEP 5**

Align the supplied center brackets to the back of the grille. Each bracket has a specific location on the grille. Line the alignment tabs up with each bracket. Then attach the brackets to the grille using the supplied screws.

**STEP 6**

Align the supplied bottom center grille brackets to the grille. Each bracket has a specific location on the grille. Line the alignment tabs up with each bracket. Then attach the brackets to the grille using the supplied screws.




**STEP 7**

Press the supplied push clips into the (2) lower grille clip locations.



**STEP 8**


Reinstall the grille following Step 1-3 in reverse order.

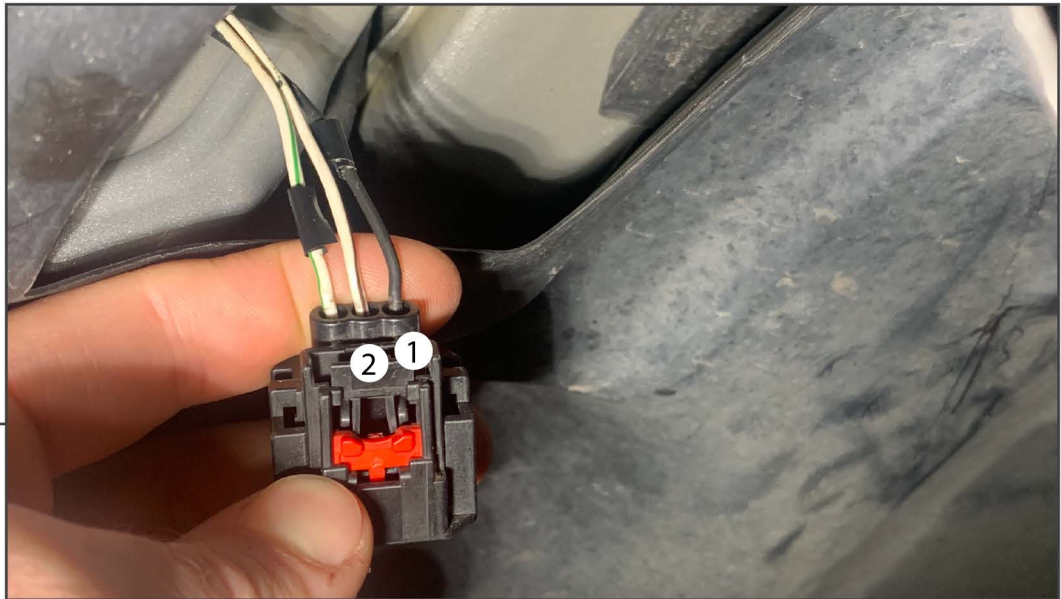

**STEP 9**

If equipped with grille lights, wire the grille lights as follows:

- |                          |   |                               |
|--------------------------|---|-------------------------------|
| <b>Grille LED Lights</b> | - | <b>Headlight Marker Light</b> |
| Black                    | - | Black (1)                     |
| Black w/ White Stripe    | - | White/Black (2)               |

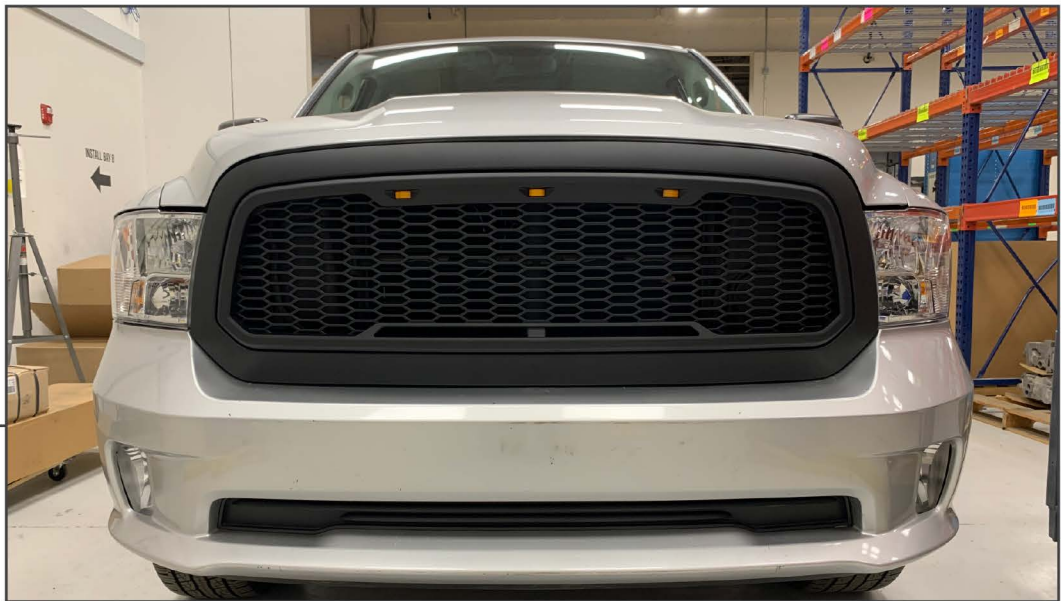

**STEP 10**

Installation is now complete.