



OEM STYLE FENDER FLARES

(2009-2018 DODGE RAM)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Front Fender Flare
- (1) RH Front Fender Flare
- (1) LH Rear Fender Flare
- (1) RH Rear Fender Flare
- (10) Screw Clips
- (10) Screw Clip Protectors
- (30) #10 Phillips Screws

TOOLS REQUIRED

- Phillips Screwdriver
- 8mm, 10mm Sockets
- Ratchet
- Panel Removal Tool
- Exterior Detailer
- Microfiber Cloth


SKU # R123140

**STEP 1
(FRONT)**

Clean the fender using exterior detailer and a microfiber cloth. Remove (2) 10mm bolts from the original mud guard. Remove (1) plastic push clip, then remove the mud guard. Remove (5) 8mm screws from the outer edge of the fender liner.


STEP 2

Install (2) screw clips and (2) screw clip protectors at the designated locations inside the fender.

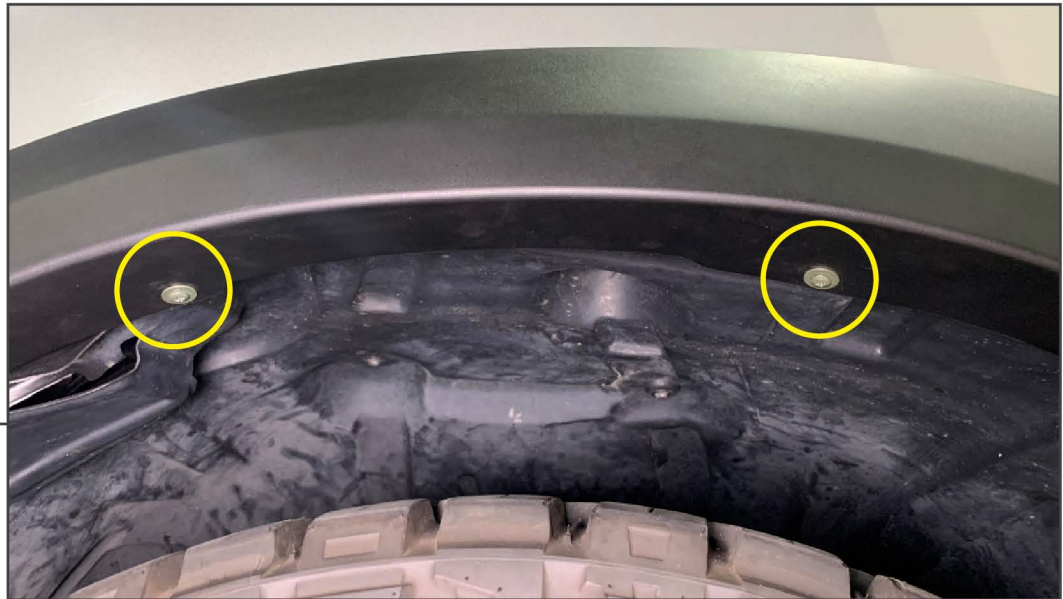

STEP 3

Align the fender flare to the vehicle, then install (2) Phillips screws through the fender flare into the previously installed screw clips. Do not tighten screws.

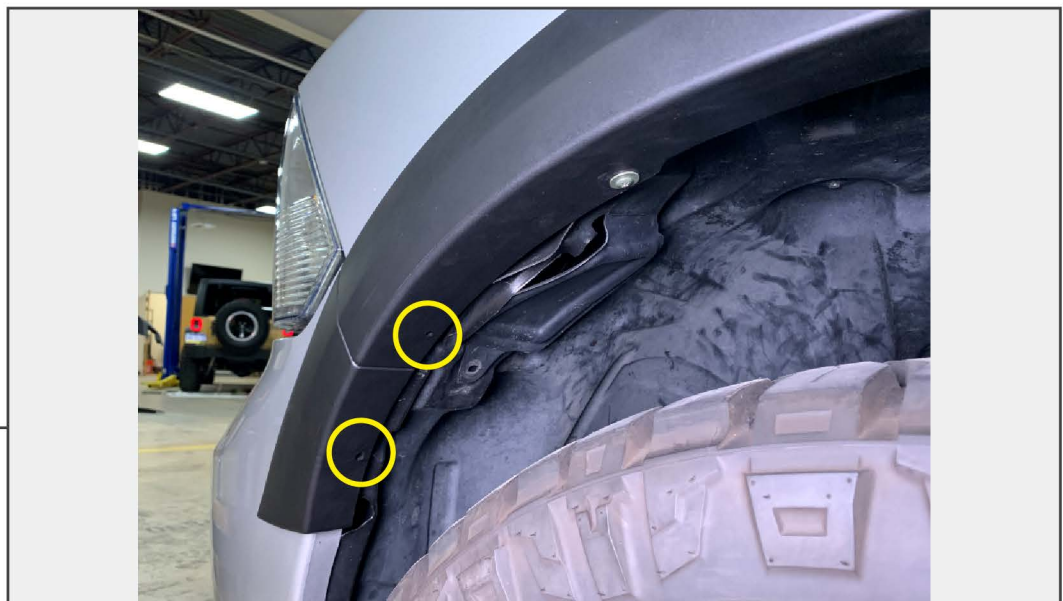

STEP 4


Install (2) Phillips screws through the fender flare into the original fender liner clips. Do not tighten screws.

STEP 5

Install (2) Phillips screws and (2) original 10mm bolts into the original fender liner screw clips. Do not tighten screws.

STEP 6


Once familiar with the fender flare adjustment, remove the fender flare. Clean the double sided tape contact area of the fender with isopropyl alcohol and a microfiber cloth. Once dry, re-install the flare with the double sided tape backing peeled off and secure the flare to the vehicle.

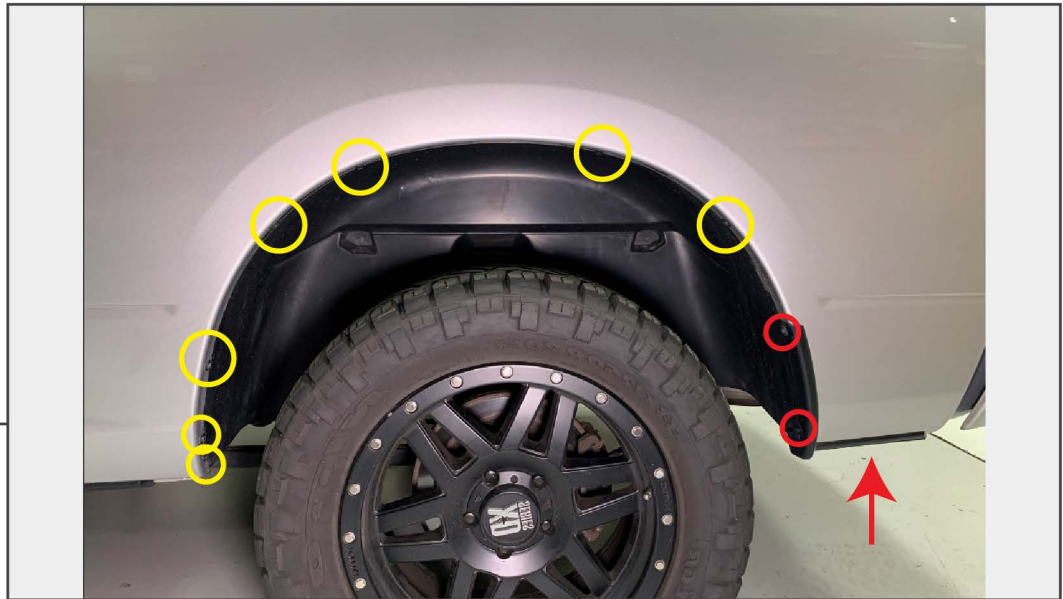**STEP 7
(REAR)**

Clean the bed side using exterior detailer and a microfiber cloth. Remove (2) 10mm bolts from the original mud guard. Remove (1) plastic push clip, then remove the mud guard. Remove (7) 8mm screws from the outer edge of the fender liner.

STEP 8

Place (1) screw clip and (1) screw clip protector along the top of the wheel arch.

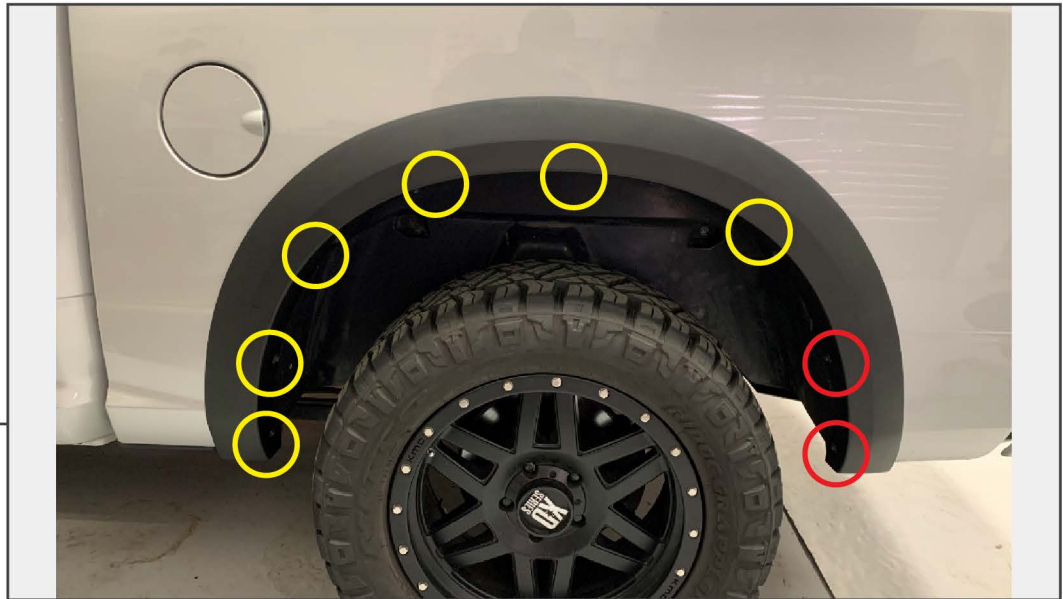STEP 9

Loosely install the fender flare to the bed side using (6) Phillips screws and (2) original 10mm bolts.

STEP 10

Once familiar with the fender flare adjustment, remove the fender flare. Clean the double sided tape contact area of the bed side with isopropyl alcohol and a microfiber cloth. Once dry, re-install the flare with the double sided tape backing peeled off and secure the flare to the vehicle.



STEP 11

Repeat steps 1-10 to the opposite side of the vehicle. Use any remaining hardware as additional reinforcement, if necessary.

Installation is now complete.