

# OE-STYLE FULL SCREEN RADIO UPGRADE WITH NAVIGATION

(2013-2018 RAM)

INSTALLATION INSTRUCTIONS

### **CONTENTS**

- (1) Radio Unit
- (1) Main Harness Adapter
- (1) 8Pin USB Harness
- (1) Auto A/C Control Harness
- (1) Radio Antenna Cable
- (1) 8Pin USB Harness
- (1) DVR Cable
- (1) Camera Input
- (1) AUX Input
- (1) RCA Audio Output Harness
- (1) CAN BOX
- (1) Wi-Fi Antenna Cable
- (1) GPS Antenna Cable
- (1) Microphone

## **TOOLS REQUIRED**

9/32" Socket T-20 Torx Socket Ratchet






Lift and remove the rubber mat from the storage tray above the radio.



Remove (2) T-20 Torx screws from the top of the dashboard radio bezel.



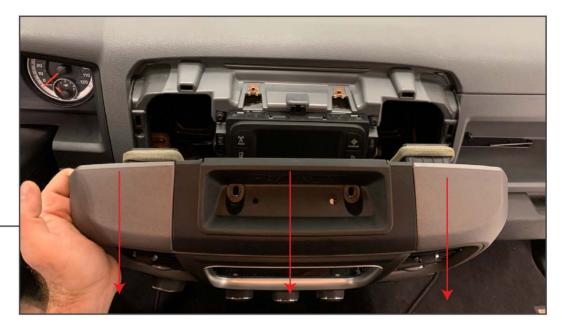


Firmly pull the radio trim bezel from the dashboard.



STEP 4

Turn the radio trim bezel to the side and unplug (5) electrical connectors from the back of the bezel.



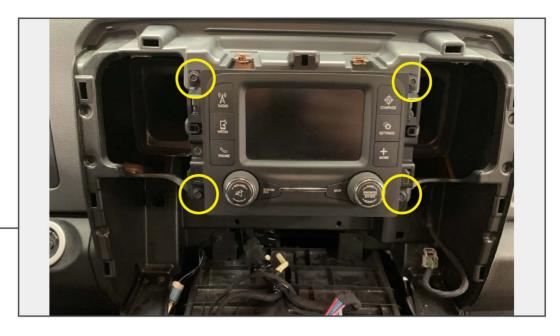

Remove (4) 9/32" screws from the original radio assembly.



STEP 6

Unplug the (4) electrical connectors from the vehicle radio assembly.






Remove (10) Phillips head screws from the backside of the original radio trim bezel. Remove the A/C control module from the radio trim bezel.



# STEP 8

Install the new radio into the radio trim bezel, securing into place using the (10) original Phillips screws.



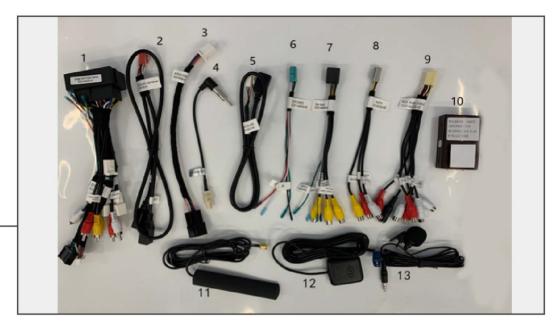

13. Microphone

### STEP 9

Identify the included wiring harnesses.

1. Main Harness Adapter 7

2. 8P USB Harness

3. Auto A/C Control Harness

4. Radio Antenna Cable

5. 8P USB Harness

6. DVR Cable

7. Camera Input


8. AUX Input

9. RCA Audio Output Harness

10. CAN BOX

11. Wi-Fi Antenna Cable

12. GPS Antenna Cable

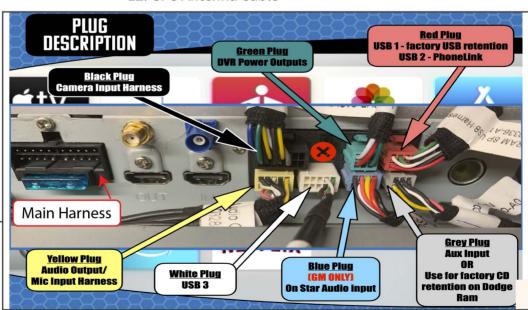

### **STEP 10**

Connect the main harness to the back of the display unit. The main harness is required for the installation. \*\*Please Note: Not all applications will use every harness, and not all plugs on every harness will be used.





Please Note: Not all applications will use every harness, and not all plugs on every harness will be used.

Installation: Route all wiring harnesses so that they do not interfere with the display and inner dash structure, it is a tight fit, but it does fit. Repeat Steps 1-4 in reverse order to complete the installation.