

Dodge Cars - Bypass Cable

Detailed Instructions for Dodge Cars

For a step-by-step video on how to install the cable, see the Diablo Sport tutorial:

<http://tinyurl.com/bypasscable>

(This section is a direct excerpt from the video)

- ① Locate the kick-panel under the glove box.

NOTE: In some car models, disconnecting the elastic cord inside the glove box may make the process easier.

- ② If necessary, remove carpet covering the bottom of the glove box and kick-panel. Do so by removing the three pins holding the carpet in place, then carefully peel back.

- ③ Carefully pull down the kick-panel from the left side to reveal the compartment inside.


- ④ Locate the green colored star connector hub inside, and carefully pull it out of the compartment (if it does not move all the way, do not force it any further than it can go).

- ⑤ Insert the white star connector from the provided harness into any of the unused ports in the connector hub.

NOTE: The green star connector is not used in this installation.

- ⑥ Replace the connector hub into the compartment and close the kick-panel (keep the OBDII section of the provided cable outside of the compartment). Replace the carpet and pins if they were removed during the install. Also reattach the elastic cord inside the glove box.

- ⑦ For best result, route the OBDII section of the provided cable alongside and behind the center console to the driver's side of the vehicle, and connect it to the OBDII port.

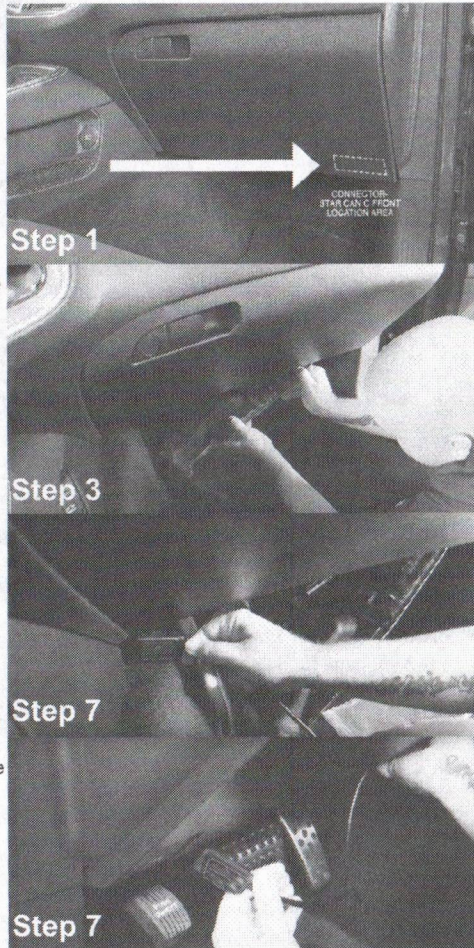

Copyright© 2019

D10022900 Rev03 08/16/2019

For additional questions not found in the user guide call:


Powerteq Technical Support: (801)-476-3343 6:00 am - 5:00 pm MST

To expedite your support call, please have your Vehicle Information, Part Number, and Serial Number ready prior to calling Technical Support.

POWERTEQ


OBDII GATEWAY BYPASS

Installation Instructions

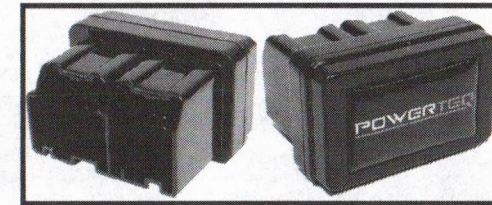

Bypass Module

Jeep® JL, Jeep® Gladiator,
RAM 2019 Trucks

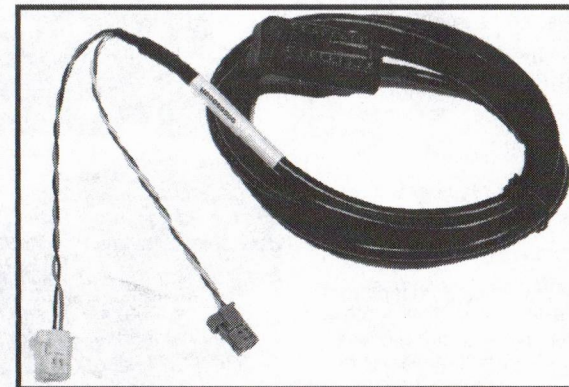


Kick-Panel Cable

RAM 2018 Trucks,
Challenger/Charger 18-19,
Hellcat/Demon 18-19
Trackhawk 18-19


Bypass Module

Installation Instructions

Bypass Module

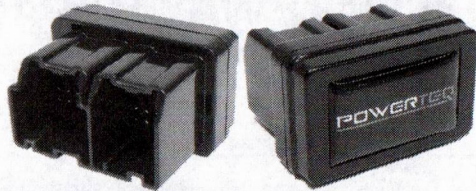


CAUTION: Do not turn on the engine, keep the ignition in the off position/setting.

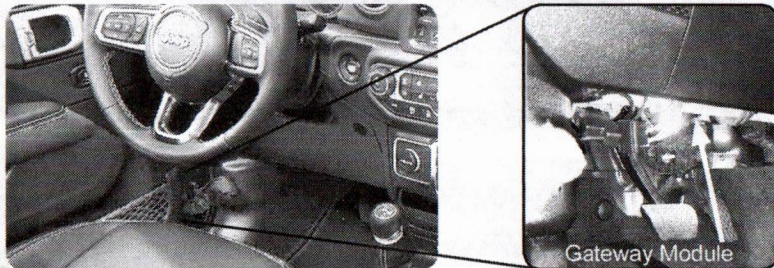

① Locate the Gateway module, found behind or above the OBDII connector.


NOTE: The module is attached to the wall closer to the driver seat. A flashlight may be needed to see it.

② While gently pulling on the wire harness, release the clip on each connector and disconnect the harness from the module.

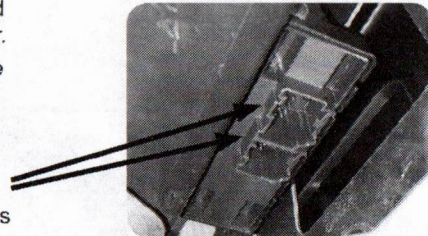

③ Insert the two gateway connectors into the bypass module as shown in the image to the right.

Once finished installing the Bypass Module, use zip-ties or another method to secure the harness and module away from any moving/mechanical components (i.e. pedals, latches, etc.)

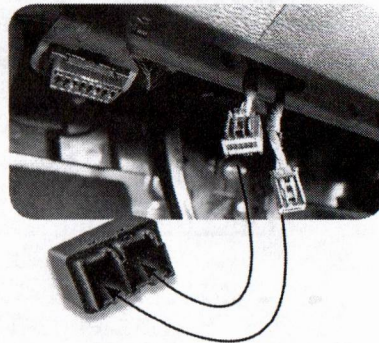


Remember to remove the bypass module prior to taking vehicle to dealership or repairshop.


Kick-Panel Cable

Installation Instructions

Kick-Panel Cable

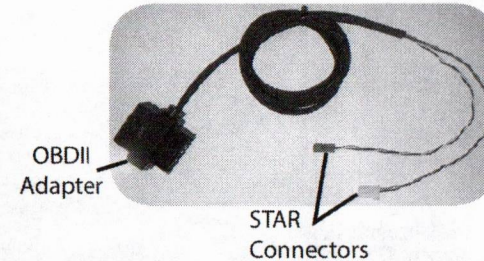

CAUTION: Do not turn on the engine, keep the ignition in the off position/setting.

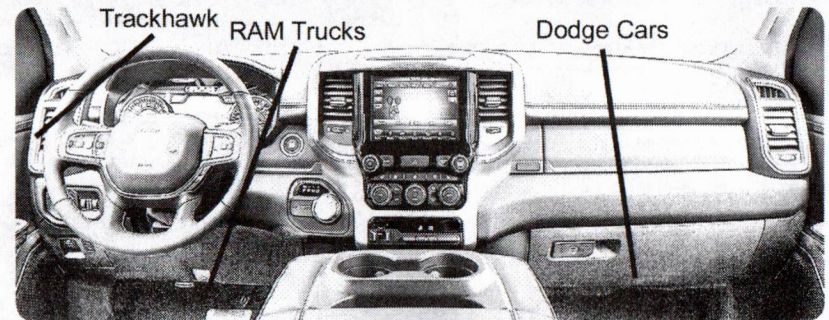


① Locate the green colored star connector hub (see above diagram for location for your vehicle). **For Dodge Cars, see back page for detailed instructions on how to locate the white star connector.**

② Insert the white star connector from the provided harness into any of the unused ports in the connector hub. **NOTE:** The green star connector is not used in this installation.

③ Route the OBDII adapter to the OBDII port, located under the dash on the driver's side. Plug in the adapter as shown.

Once finished installing the Bypass Cable, use zip-ties or another method to secure the cable away from any moving/mechanical components (i.e. pedals, latches, etc.)

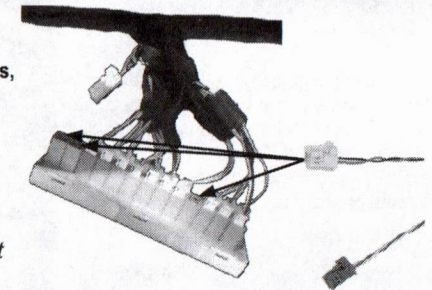

Remember to remove the bypass cable prior to taking vehicle to dealership or repairshop.