



HD FRONT TOW HOOKS

(2019-2021 RAM 1500)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Tow Hook
- (1) RH Tow Hook
- (1) LH Bumper Trim
- (1) RH Bumper Trim
- (2) Bushings
- (2) 'U' Washers
- (2) M14 x 1.50 x 45mm Bolts

TOOLS REQUIRED

- 10mm Wrench
- 8mm, 18mm Sockets
- Ratchet
- Panel Removal Tool
- Adjustable Wrench
- Hammer

SKU # R130419

STEP 1




Remove (5) 8mm bolts from the splash guard. Remove the splash guard from the vehicle.

STEP 2



Loosen (2) 10mm nuts from the top of the block off plate in the bumper. With the nuts loose, pull the studs from the block off plate.

STEP 3

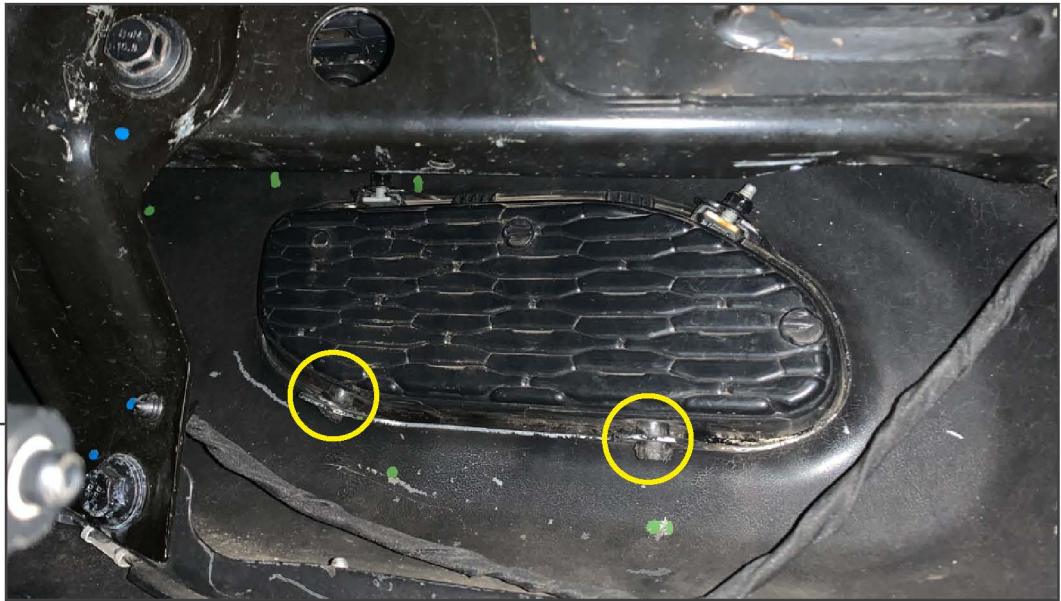

Using a panel removal tool, dislodge the (2) block off plate mounting tabs from the bumper.

Note: The metal bumper tab may bend while prying, the tabs can be bent back into place.

STEP 4



Gently pry downward on the block off plate from the outside of the bumper to allow the top of the block off plate to unclip from the bumper. Remove the block off plate from the vehicle through the front of the bumper.



STEP 5

Insert the designated bumper trim panel through the front of the bumper, and secure using the original (2) studs and (2) 10mm nuts.



STEP 6

Remove (1) 18mm bolt from the vehicle frame.

Note: Removing/manipulating the lower shield may be required to remove the bolt as the bolt is 9.5" long. If the bolt is stuck during removal, use an adjustable wrench and a hammer to tap the bolt the remaining distance downwards.



STEP 7

Install (1) bushing into the tow hook. Align (1) 'U' washer to the tow hook.



STEP 8

Thread (1) M14 x 45mm bolt into the frame at the pre-drilled hole. Align the tow hook to the frame. Secure the tow hook to the vehicle using (1) M14 x 45mm bolt and (1) original 18mm bolt.



STEP 9

Repeat steps 1-8 to the opposite side of the vehicle.

Installation is now complete.