



# RAM

---

# LOW PROFILE HARD TRI-FOLD TONNEAU COVER

(2009-2018 RAM 1500)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) Tonneau Cover
- (1) LH Side Rail
- (1) RH Side Rail
- (1) LH Drain Tube
- (1) RH Drain Tube
- (1) Bulkhead Gasket
- (4) Bed Rail Clamps
- (2) Tonneau Retaining Brackets
- (2) Locking Brackets
- (2) Studs w/ Hardware
- (1) Rubber Gasket
- (1) Allen Key
- (1) Wrench

### TOOLS REQUIRED

---

- 17mm Wrench (Provided)
- 4mm Allen Key (Provided)
- Isopropyl Alcohol
- Microfiber Cloth
- Flathead Screwdriver

SKU # R134396-A , R134396-B

---

**STEP 1**

Clean the bulkhead area of the vehicle bed using isopropyl alcohol and a microfiber cloth. Once dry, adhere the bulkhead gasket to the bulkhead, trim to size as necessary.

---

**STEP 2**

Remove the end cap from the side rail. Insert the (1) locking bracket, and then re-install the end cap. Do not tighten the Allen bolt.

Repeat this step for the remaining side rail.

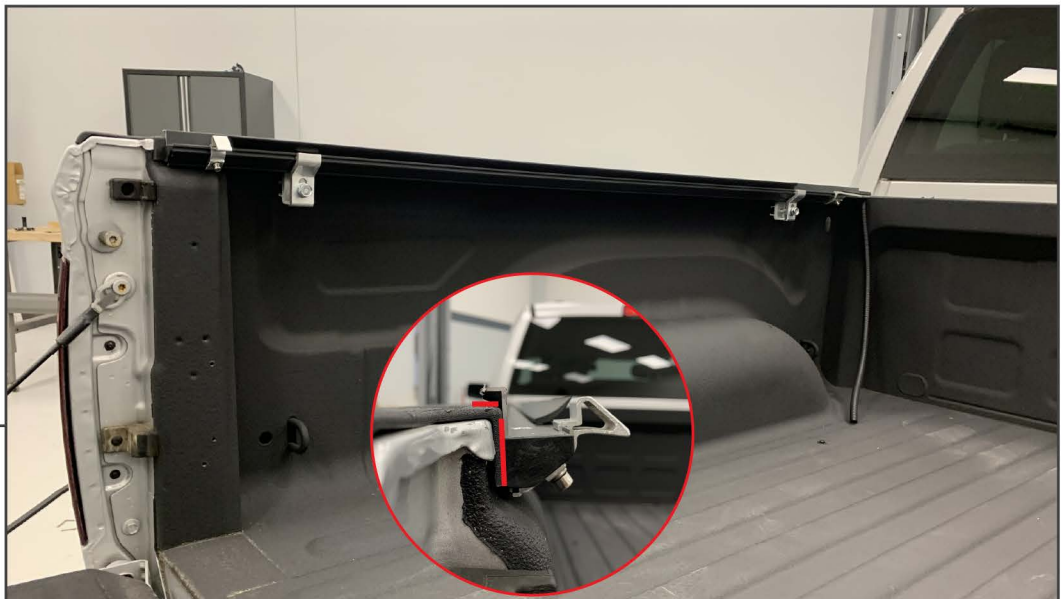
---

**STEP 3**

At the opposite side of the side rail, insert (1) tonneau retaining bracket. Do not tighten the Allen bolt. Install (1) drain tube end cap onto the side rail.

Repeat this step for the remaining side rail.

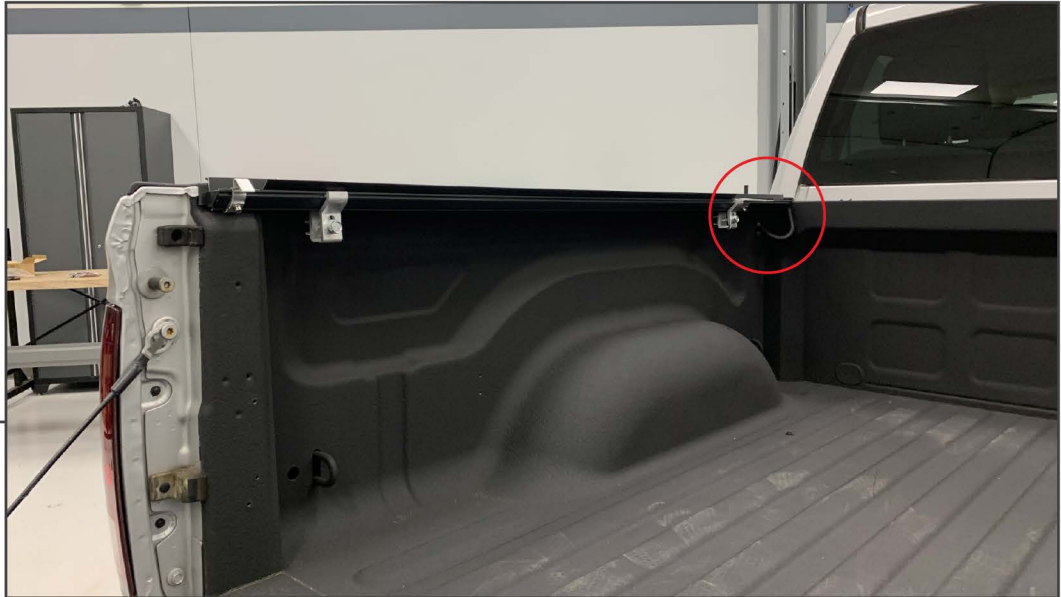
---

**STEP 4**

Mount the side rail to the vehicle bed rail using (2) bed rail clamps. Ensure the drain tube is towards the cab of the vehicle. Tighten until secure.

Note: If vehicle bed rail is not flat, cut the included rubber gasket to size and place in between the deformed bed rail area and the tonneau cover side rail for best fit.

---

**STEP 5**

Insert the drain tube on the side rail into the hole in the vehicle bed. Ensure the tube is routed towards the outside of the vehicle.

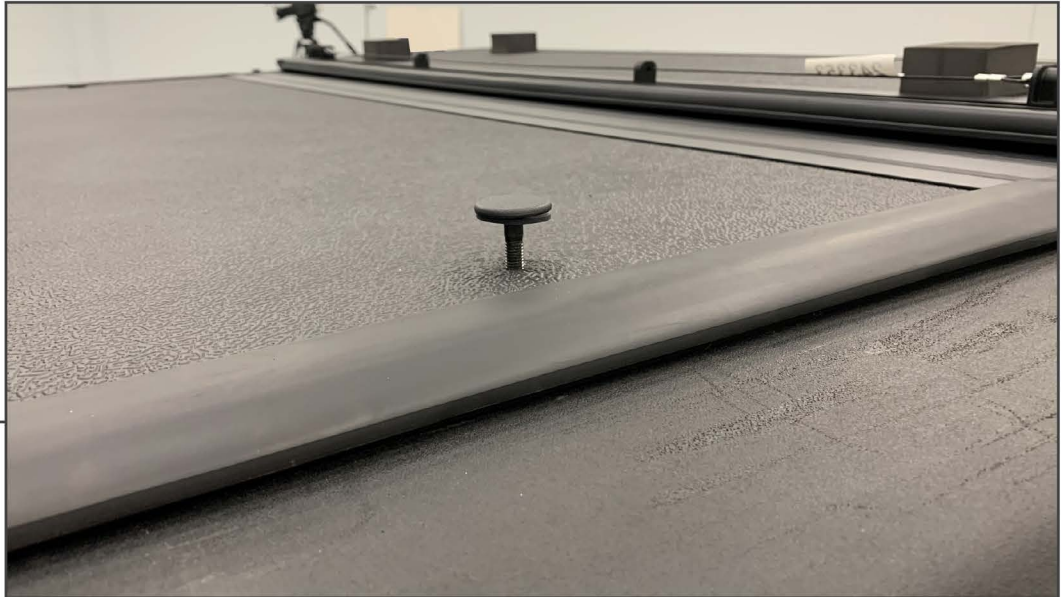
---

**STEP 6**

Place the tonneau cover onto the side rails, closest to the vehicle cab.



---

**STEP 7**

Unfold the first panel of the tonneau cover. Locate (1) hole on each side of the first tonneau cover panel. Align the tonneau mounting brackets on the side rails to the holes. Insert (1) stud and (1) rubber flat washer through the tonneau cover on each side.

---

**STEP 8**

Secure the tonneau cover using (1) flat washer, (1) lock washer, and (1) thumb screw onto each previously installed mounting stud. Unfold the tonneau cover towards the vehicle tailgate, and adjust the tonneau cover until proper fitment is achieved. Once adjusted, tighten the mounting stud thumb screws, and the side rail bracket Allen bolt.

---

**STEP 9**

Adjust the locking brackets to the tonneau cover latches. Ensure the latches and the bracket are properly aligned for proper functionality. Once adjusted, tighten the Allen bolt on the locking bracket.

---

**STEP 10**

Installation is now complete.