



# RAM

---

## SOFT TRI-FOLD TONNEAU COVER

(2009-2018 RAM 1500)

---

### INSTALLATION INSTRUCTIONS

#### CONTENTS

---

(1) Tonneau Cover  
(4) Cotter Pins

#### TOOLS REQUIRED

---

N/A

SKU # R134398-A , R134398-B

---

**STEP 1**

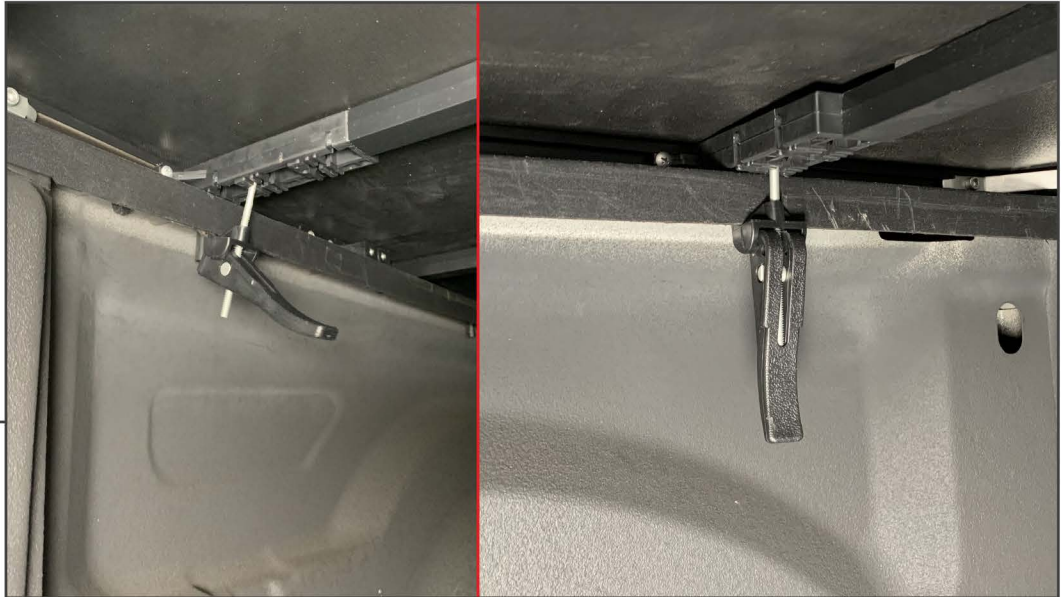
Place the tonneau cover onto the vehicle bed closest to the cab. Ensure the panel with the yellow safety straps are facing downwards towards the bed floor.

---

**STEP 2**

Fold the tonneau cover outwards towards the rear of the vehicle. Adjust the tonneau cover forward/backwards and left/right until proper adjustment is achieved.

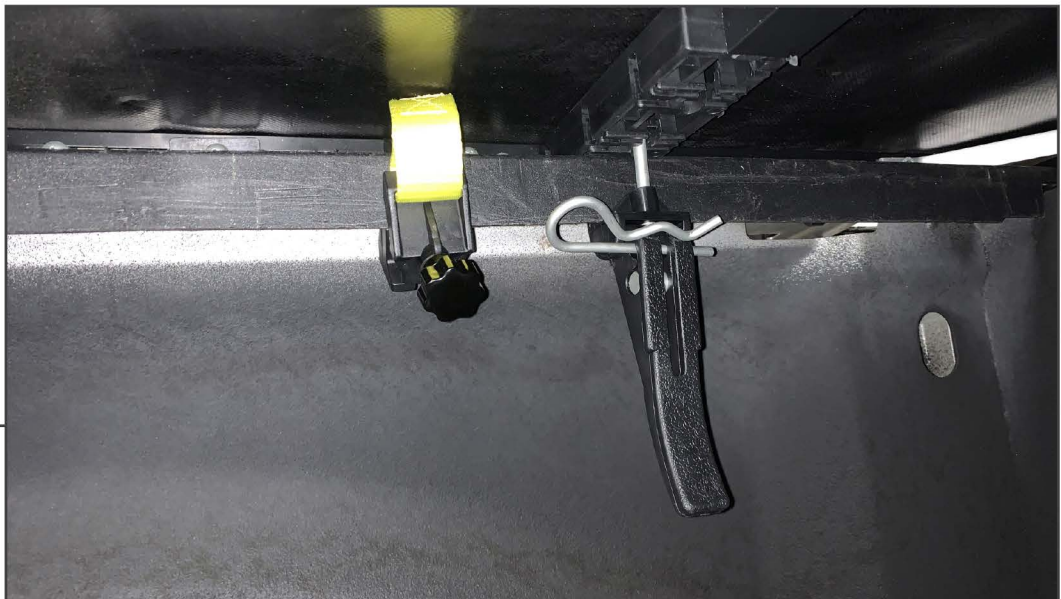
---

**STEP 3**

Once aligned, carefully fold the tonneau cover up towards the cab of the vehicle to access the (2) pre-installed front clamps. Tighten the clamps upwards, then hook the clamp onto the metal portion of the bed rail. Fold the clamp handle 90 degrees to add tension to secure the cover.

Note: If the vehicle has a plastic bed liner/bed rail caps, trimming may be necessary for the clamp to attach to the metal portion of the bed rail.

---

**STEP 4**

Loosen the safety strap thumb screw to loosen the clamp. Install the safety strap clamp to the metal portion of the vehicle bed rail, then tighten the thumb screw until secure. Lock the front clamps into place using (1) cotter pin per clamp.

---

**STEP 5**

Unfold the tonneau cover towards the rear of the vehicle. Secure the (2) pre-installed rear clamps to the metal portion of the vehicle bed rails. Lock the clamps into place using (1) cotter pin per clamp.

---

**STEP 6**

To store, undo the (2) rear clamps, and fold the tonneau cover towards the vehicle cab. Insert the rear clamps into the under side of the cover. Secure the tonneau cover to the attached straps and buckles.





---

**STEP 7**

Installation is now complete.