



STAINLESS STEEL MUFFLER DELETE

(2009-2018 1500 - WITH OEM DUAL EXHAUST)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Front Pipe
- (1) 'Y' Pipe
- (2) 3" Exhaust Clamps
- (2) 2.25" Exhaust Clamps

TOOLS REQUIRED

- 13mm, 15mm Sockets
- Ratchet
- Floor Jack & Jack Stands


SKU # R141213

STEP 1



Lift and support the vehicle using a floor jack and jack stands. Remove the exhaust tips from the exhaust system by loosening the (1) exhaust clamp per tip.

STEP 2

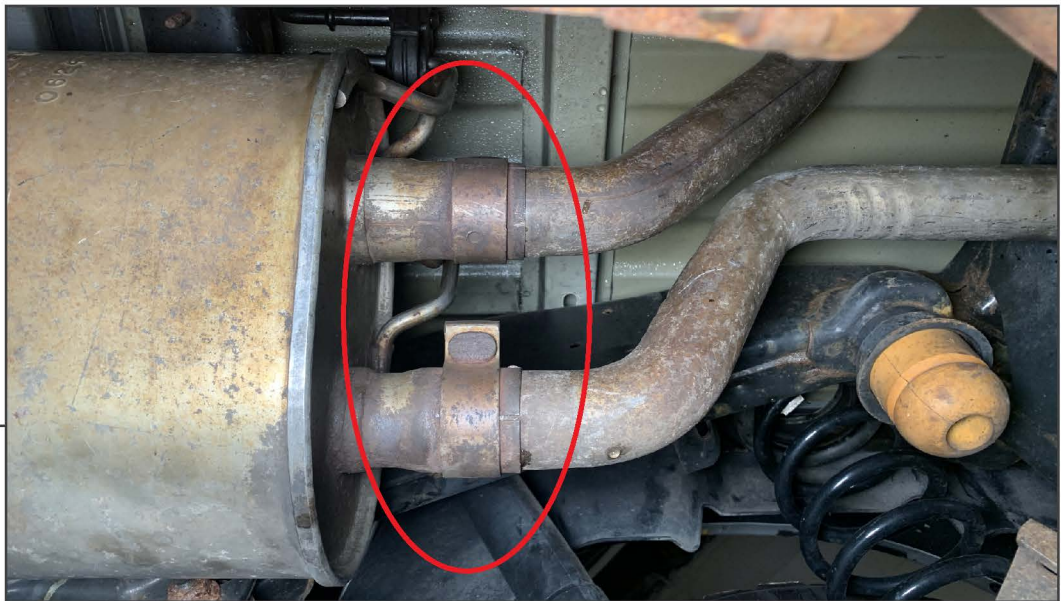

Loosen the (2) exhaust clamps securing the tailpipes to the muffler. Once loose, dislodge the tailpipes from the rubber hangers and remove each tailpipe from the vehicle.

Note: Ensure to keep the original rubber hangers attached to their mounting points.



STEP 3

Loosen the (1) exhaust clamp securing the muffer to the vehicle front pipe. Once loose, dislodge the muffer from the (2) rubber hangers and remove the muffer from the vehicle.

Note: Ensure to keep the original rubber hangers attached to their mounting points.




STEP 4

Install the (1) front pipe to the vehicle front exhaust pipe, and secure using (1) 3" exhaust clamp.

Place (1) 3" exhaust clamp onto the end of the front pipe to prepare for the following 'Y' Pipe.


STEP 5

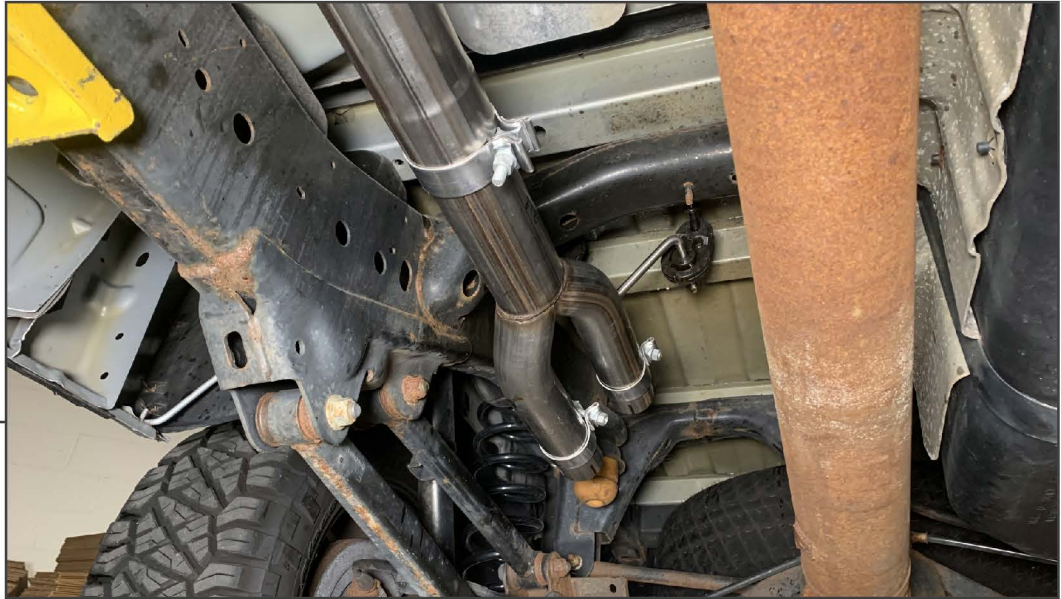

Place the 'Y' pipe hangers into the vehicle rubber hangers, then insert the 'Y' pipe into the previously installed front pipe. Secure the pipes together using the previously placed (1) 3" exhaust clamp.

Place (1) 2.25" exhaust clamp onto each exit on the 'Y' pipe to prepare for the original tailpipes.

STEP 6

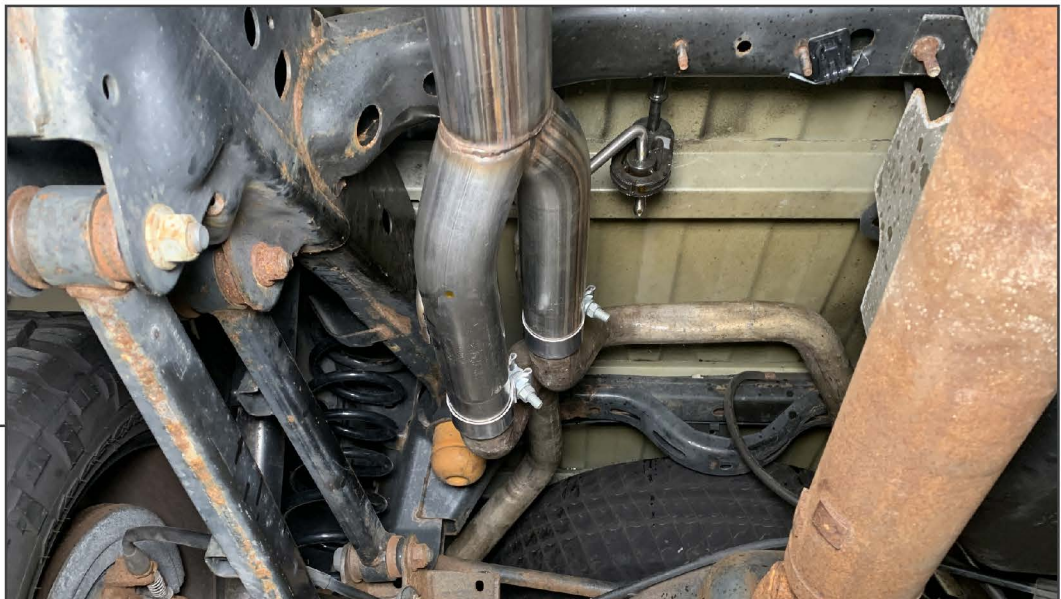

Install each tailpipe into the 'Y' pipe, and secure using the previously placed (2) 2.25" exhaust clamps.



STEP 7

Re-install the original exhaust tips. Adjust the exhaust to allow proper clearance from other components. The 'Y' pipe is designed to have generous inwards/outwards movement for additional tailpipe adjustments. Once adjusted, tighten all exhaust clamps to 45 ft.-lbs.

Installation is now complete.