



CATALYTIC CONVERTER ANTI-THEFT DEVICE & SKID PLATE

(2019-2024+ 1500)

INSTALLATION INSTRUCTIONS


CONTENTS

- (1) Skid Plate
- (2) M12x1.75 Nuts
- (2) M10x1.50 x 50mm Bolts
- (2) M10 Lock Washers
- (2) M10 Flat Washers
- (2) M10 Nut Plates
- (2) Spacers
- (1) T-45 Security Torx Bit

TOOLS REQUIRED

- T-45 Security Torx Bit (Provided)
- Bit Driver
- 16mm Wrench
- Floor Jack
- Jack Stands

SKU # R144493
Edited: 05/29/24

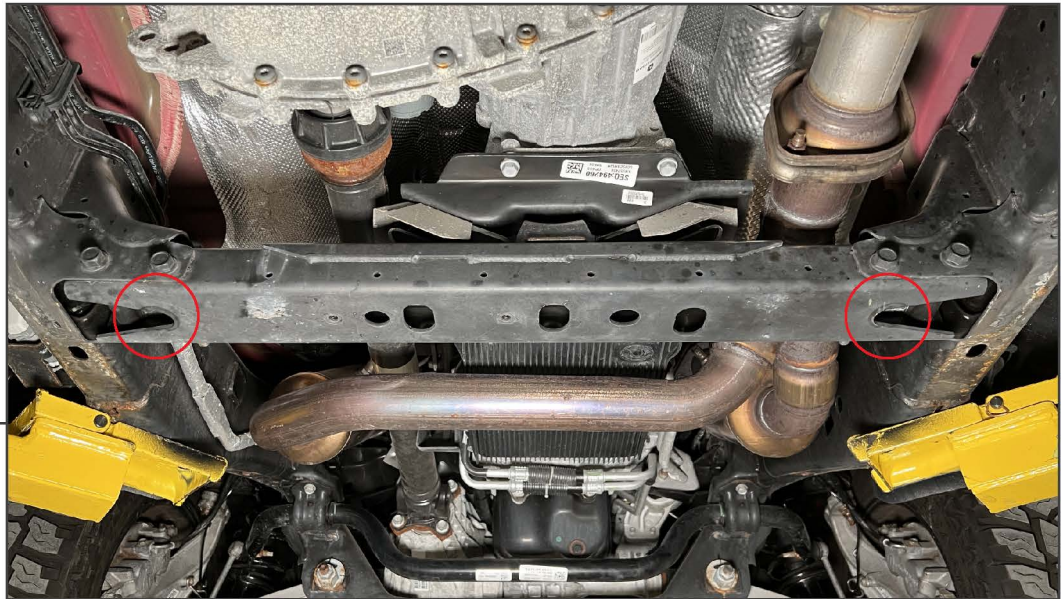

STEP 1


Lift and support the front of the vehicle using a floor jack and jack stands.

Locate the (2) slots in the crossmember under the rear of the transmission. Fit the included (2) M10 nut plates into the slots.




STEP 2

Under the vehicle engine, locate the crossmember studs. The inner-most studs will be used to mount the skid plate.

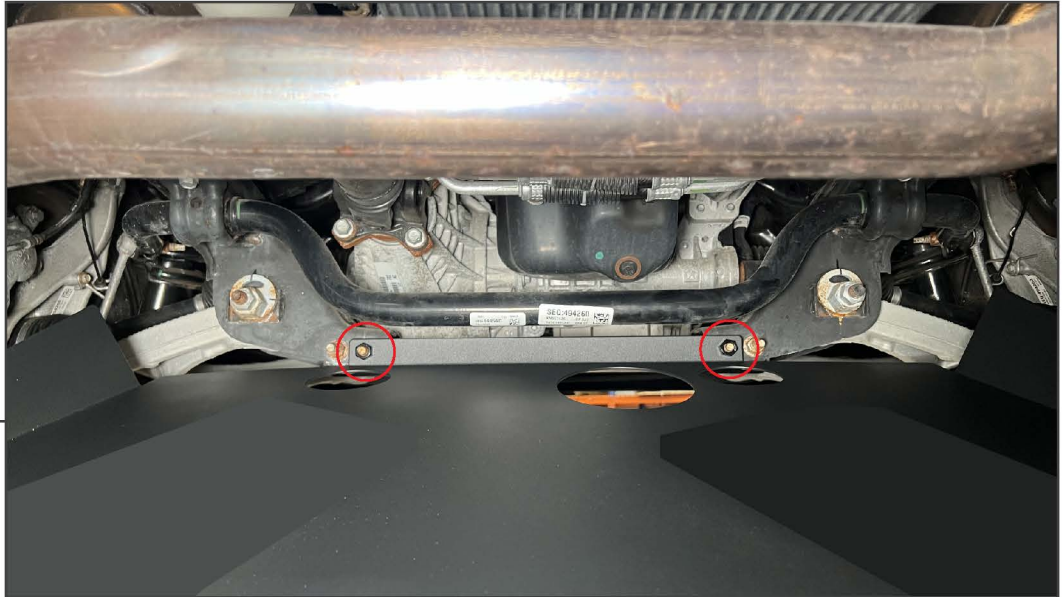


STEP 3

With a helper, lift the skid plate to the front (2) studs. Loosely secure the skid plate to the studs using the included (2) M12 nuts.

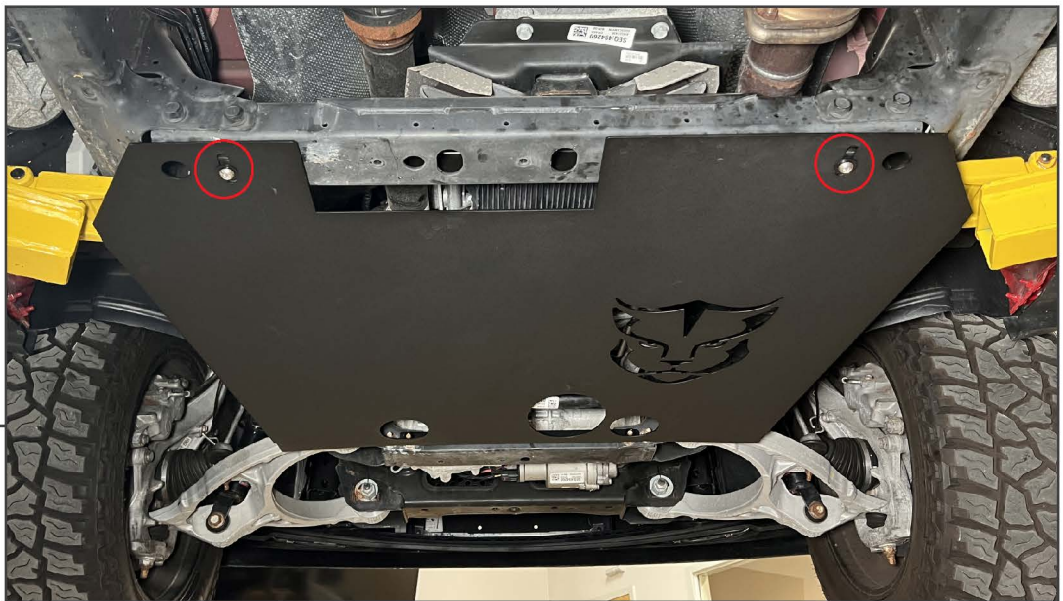

STEP 4

Secure the rear of the skid plate to the previously placed stud plates using (2) M10 x 50mm bolts, (2) M10 lock washers, (2) M10 flat washers, and (2) spacers. Ensure the provided spacers are installed between the vehicle crossmember and the skid plate.

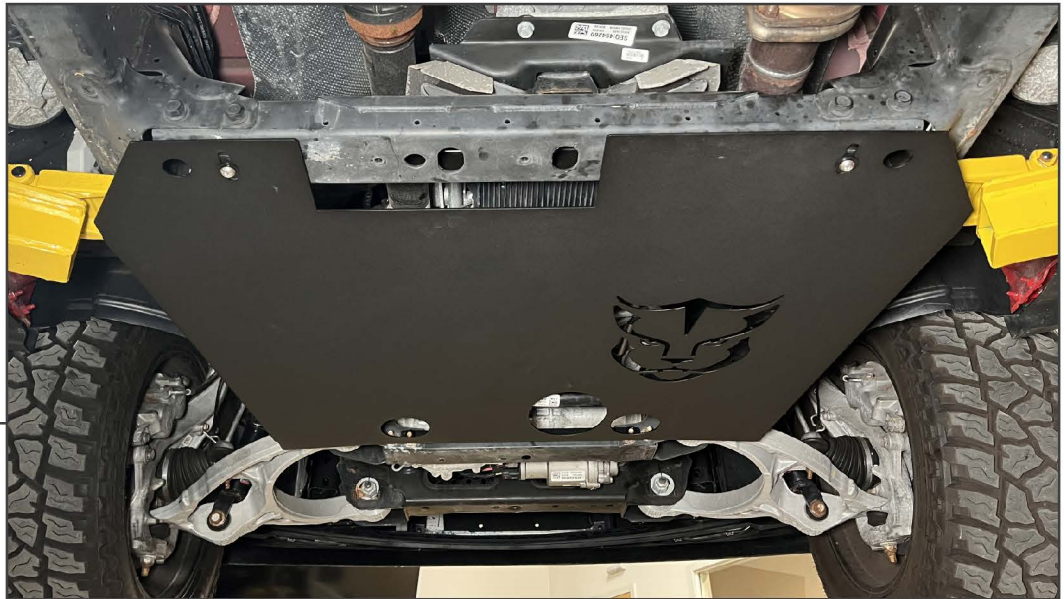

STEP 5

Adjust the skid plate for best fit, then fully tighten all hardware.

Installation is now complete.