

REDROCK

TC1 RUNNING BOARD

SKU #: R175552

FITS:

2019-Up 1500 Quad Cab
(Excluding 2019-2024 1500 **Classic** Quad Cab)



60-120 min



Cutting Not
Required



Drilling Not
Required


Torque & Tools

| Fastener Size | Tightening Torque (ft-lbs) | Wrench Required | | Allen Wrench Required | |
|---|---|-----------------|--|-----------------------|------------------------------|
| <input type="checkbox"/> 6mm | <input type="checkbox"/> 7-8.5 | | <input type="checkbox"/> 10mm | | <input type="checkbox"/> 4mm |
| <input checked="" type="checkbox"/> 8mm | <input checked="" type="checkbox"/> 18-20 | | <input checked="" type="checkbox"/> 13mm | | <input type="checkbox"/> 5mm |
| <input type="checkbox"/> 10mm | <input type="checkbox"/> 35-40 | | <input type="checkbox"/> 16mm | | <input type="checkbox"/> 6mm |
| <input type="checkbox"/> 12mm | <input type="checkbox"/> 60-70 | | <input type="checkbox"/> 18mm | | <input type="checkbox"/> 8mm |

BEFORE INSTALLATION

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED.

Part List

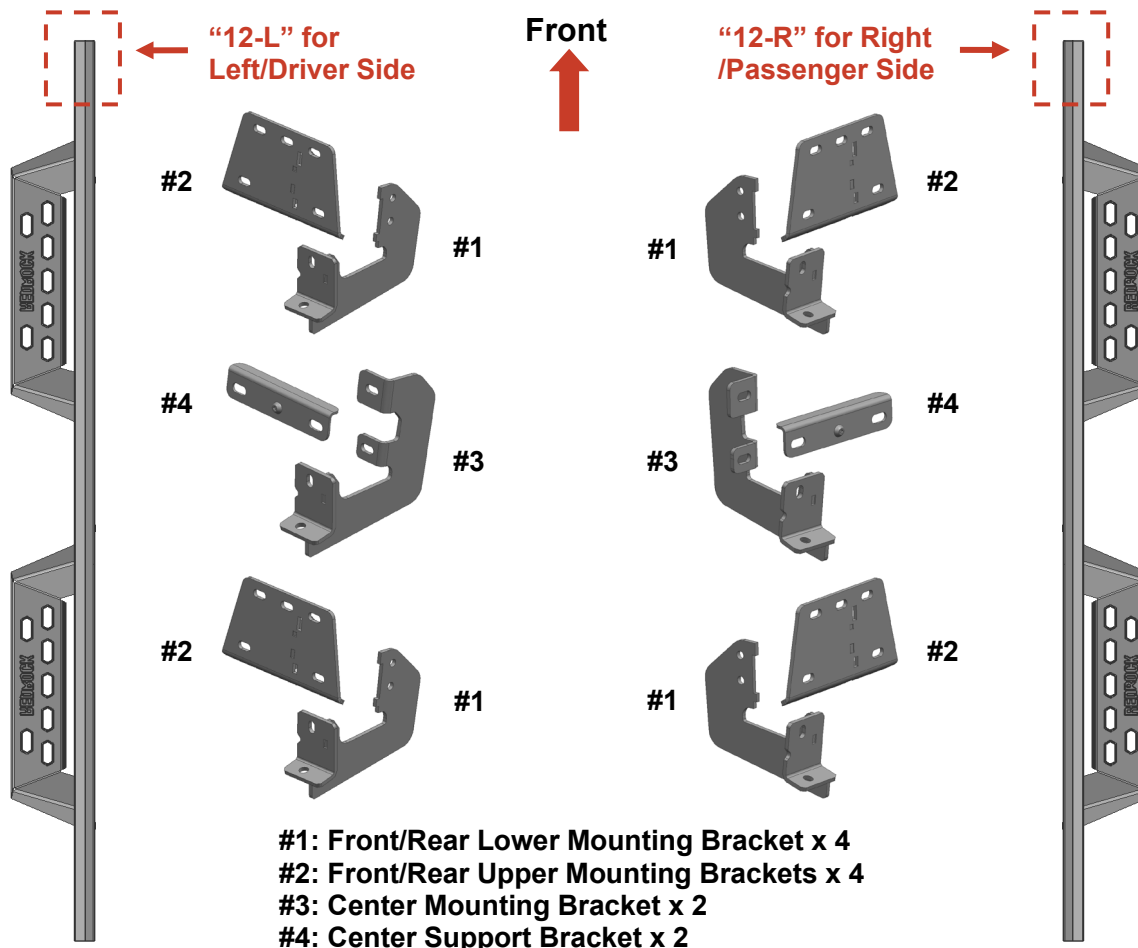

REDROCK




8mm x 25mm
Hex Bolt




8mm x 16mm
Flat Washer



8mm x 24mm
Flat Washer



8mm Nylon
Lock Nut

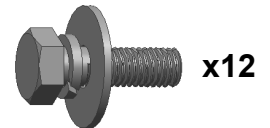


8mm x 25mm
Combo Bolt

PLEASE NOTE THAT THE FOLLOWING PICTURES ARE BASED ON THE DRIVER SIDE INSTALLATION

STEP 1

Start the installation under the Driver/Left side of the vehicle. Locate the front (3) factory studs along the inner side of the body panel, **(Fig 1)**.

FIG 1

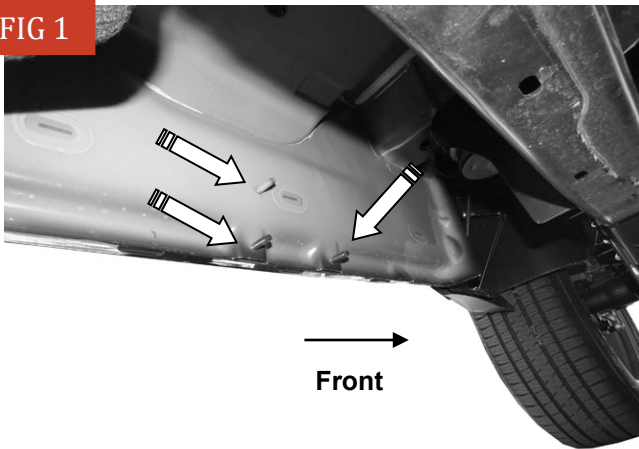


(Fig 1) Driver/Left Front mounting location

STEP 2

Select (1) Front/Rear Upper Mounting Bracket **(#2)**. Attach the Mounting Bracket to the (3) factory studs with (3) 8mm x 24mm Flat Washers and (3) 8mm Nylon Lock Nuts, **(Fig 2)**. Do not tighten hardware.

FIG 2

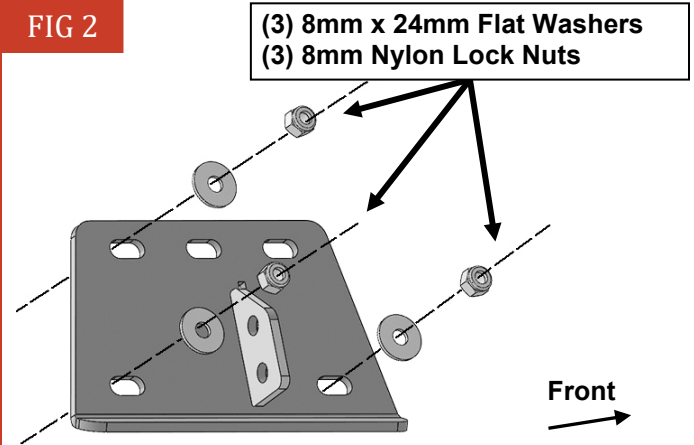


(Fig 2) Attach (1) Front Upper Mounting Bracket (#2) to the threaded studs

STEP 3

Select (1) Front/Rear Lower Mounting Bracket **(#1)**. Attach the Lower Bracket to the short side of the Upper Bracket with (2) 8mm Hex Bolts, (4) 8mm x 16mm Flat Washers and (2) 8mm Nylon Lock Nuts, **(Fig 3)**. Do not tighten hardware.

FIG 3

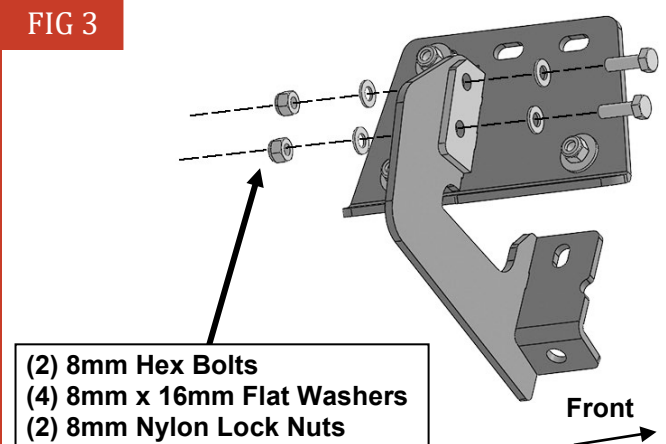


(Fig 3) Attach (1) Front Lower Mounting Bracket (#1) to the Upper Mounting Bracket (#2)

STEP 4


Move to the center location, **(Fig 4)**. Select (1) Center Support Bracket **(#4)**. Attach the Support Bracket to the (2) lower threaded studs with (2) 8mm x 24mm Flat Washers and (2) 8mm Nylon Lock Nuts, **(Fig 5)**.

FIG 4

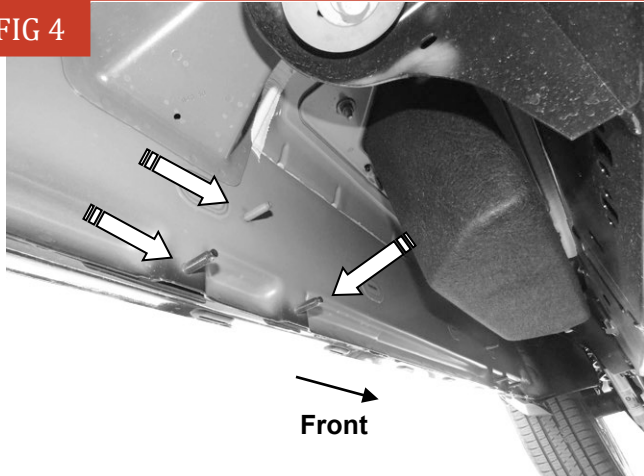

(Fig 4) Driver/Left Center mounting location

FIG 5

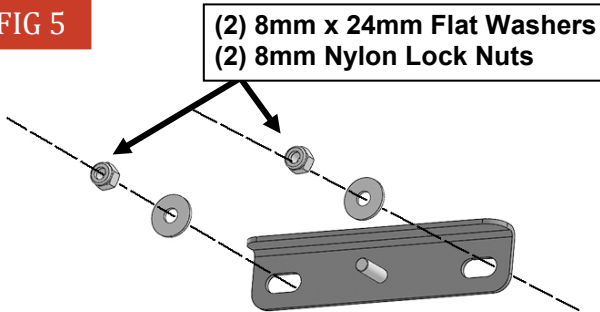


(Fig 5) Attach (1) Center Support Bracket (#4) to the lower (2) threaded studs on the mounting location

STEP 5

Select (1) Center Mounting Bracket **(#3)** and attach to the Support Bracket and upper threaded stud with (2) 8mm Flat Washers and (2) 8mm Nylon Lock Nuts, **(Fig 6)**. Do not tighten hardware.

FIG 6

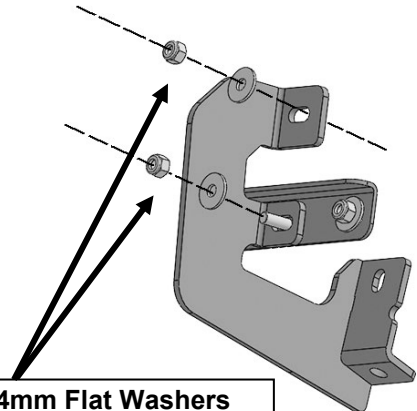


(Fig 6) Attach (1) Center Mounting Bracket (#3) to the upper threaded stud and Support Bracket

STEP 6

Repeat **Steps 2 & 3** to attach (1) Front/Rear Upper Mounting Bracket **(#2)** and (1) Front/Rear Lower Mounting Bracket **(#1)** to the rear mounting location, **(Fig 7)**. Do not tighten hardware.

FIG 7

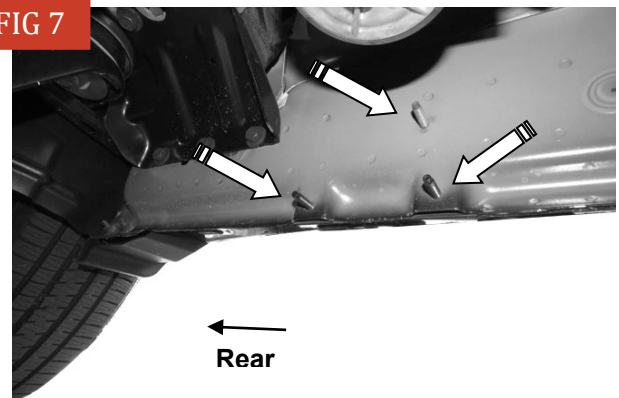


(Fig 7) Driver/Left Rear mounting location

REDROCK

STEP 7

Select the Driver/Left Running Board. **NOTE:** The Driver/Left Running Board will have a “12-L” on the front. **IMPORTANT:** Do not slide Running Board front to back on the Brackets or damage to the finish may result. Attach the Step to the Mounting Brackets with (6) 8mm Combo Bolts, (Fig 8). Do not tighten hardware.

FIG 8

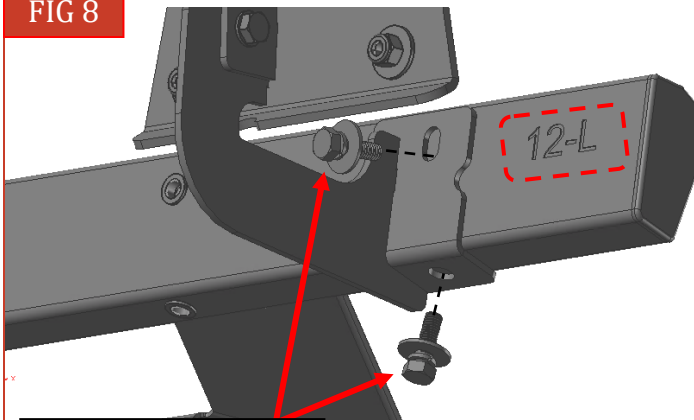

(2) 8mm Combo Bolts

(Fig 8) Attach the Driver/Left Running Board to the (3) Mounting Brackets

STEP 9

Repeat **Steps 1—8** to attach the Passenger/Right Running Board to the vehicle.

STEP 10

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

Attention

To protect your investment, do not use any type of polish or wax that may contain abrasives that could damage the finish.

Mild soap may be used also to clean the Running Boards.

STEP 8

Level and adjust the Running Board as necessary and fully tighten all hardware.