




Installation Guide

Armor Grille
For 2013-2018 Dodge Ram 1500


SKU # AMDEBA00151 & AMDEBA00150

STEP 1

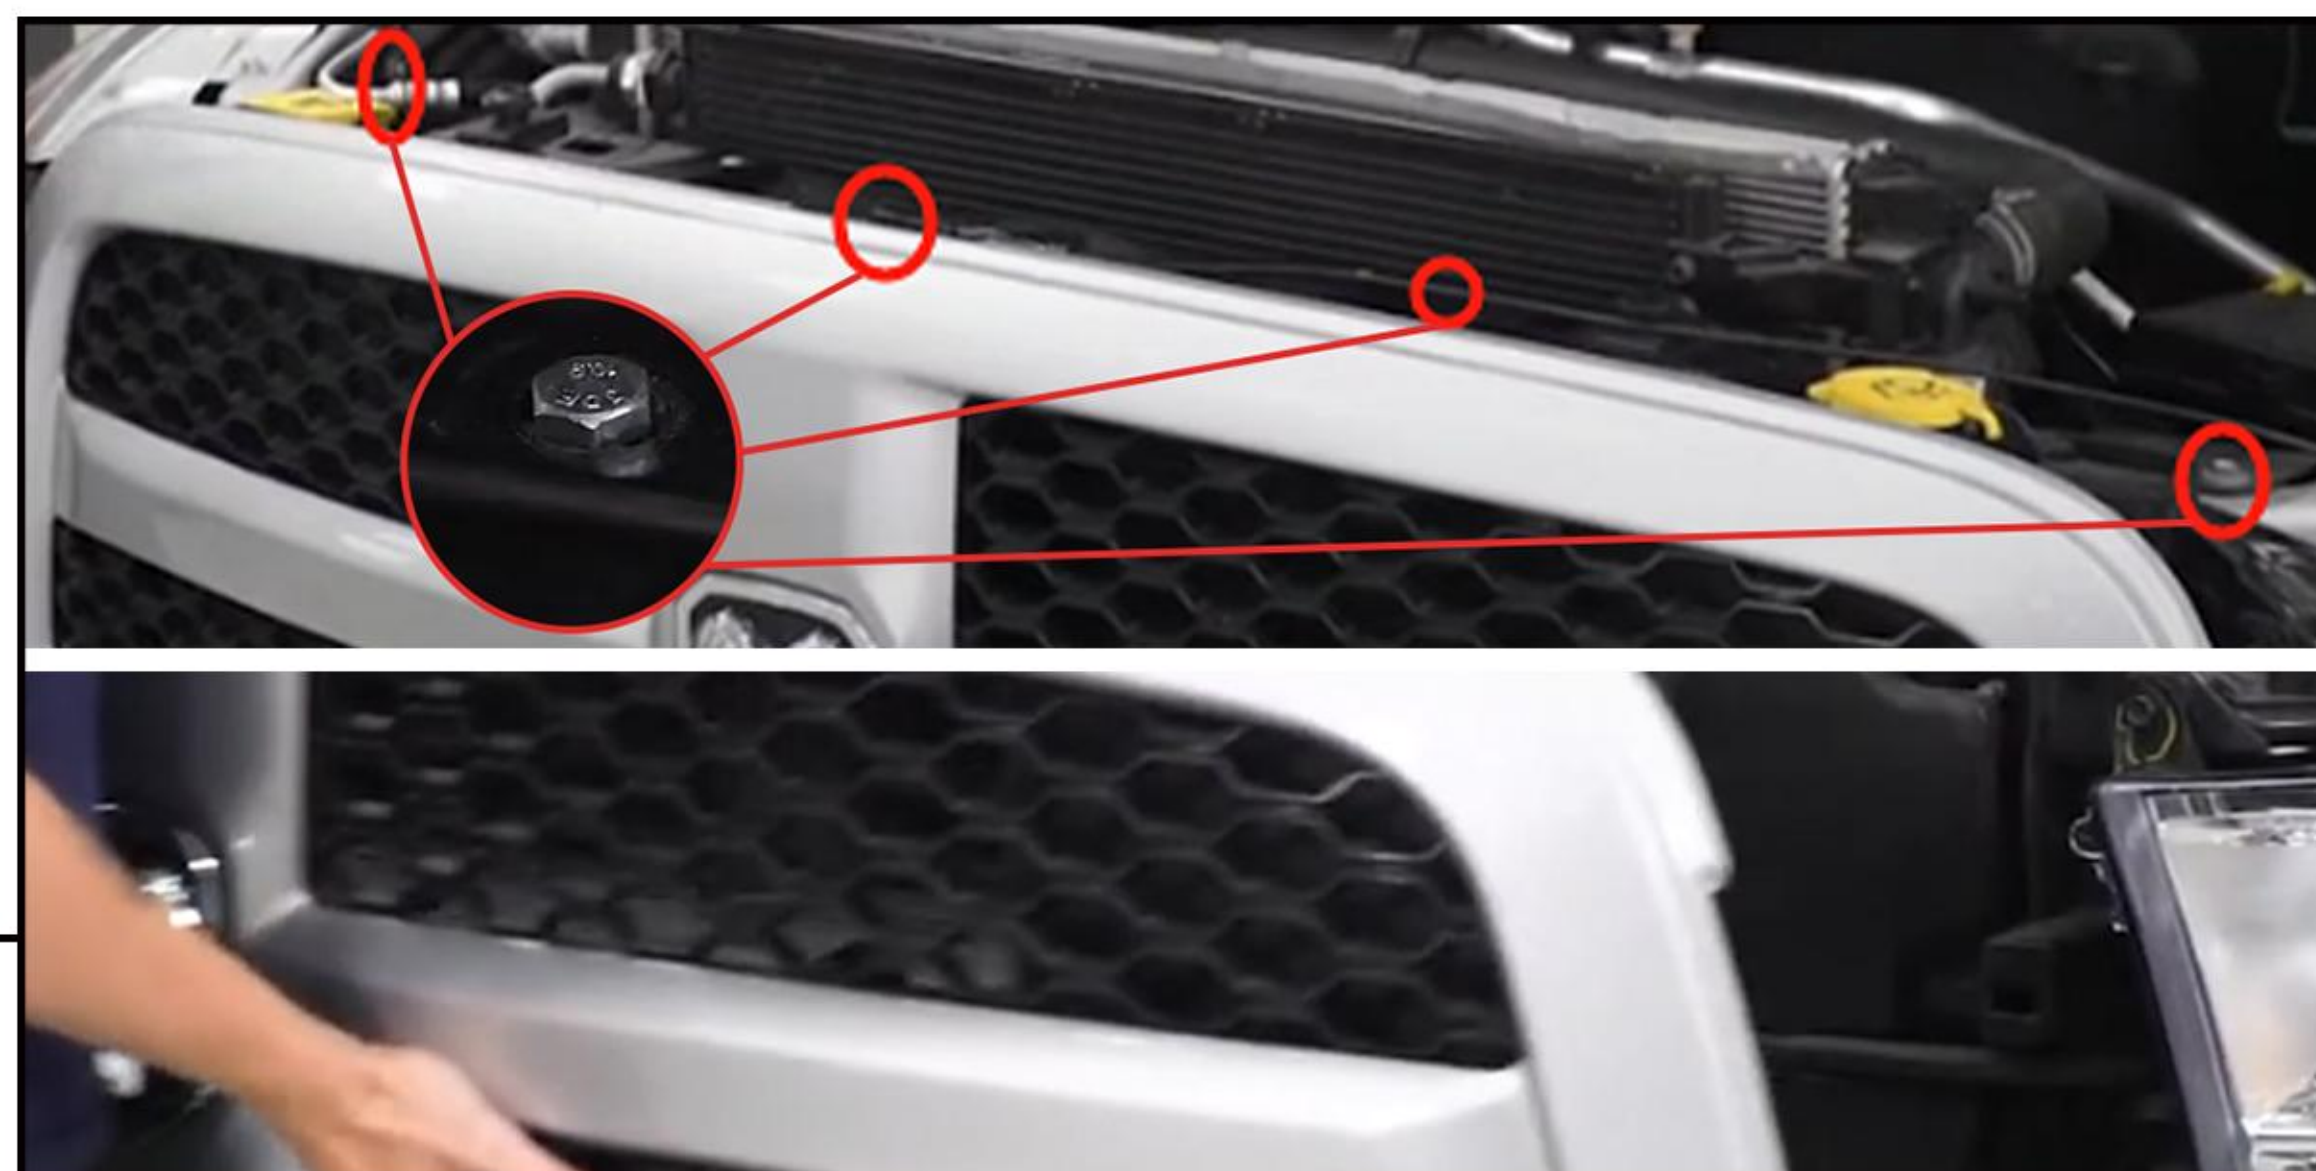

Remove the 4 10-millimeter bolts holding on the top of the grille with a 10-millimeter socket. Then lift up on the brackets and pull straight out towards you to remove the grille.

STEP 2

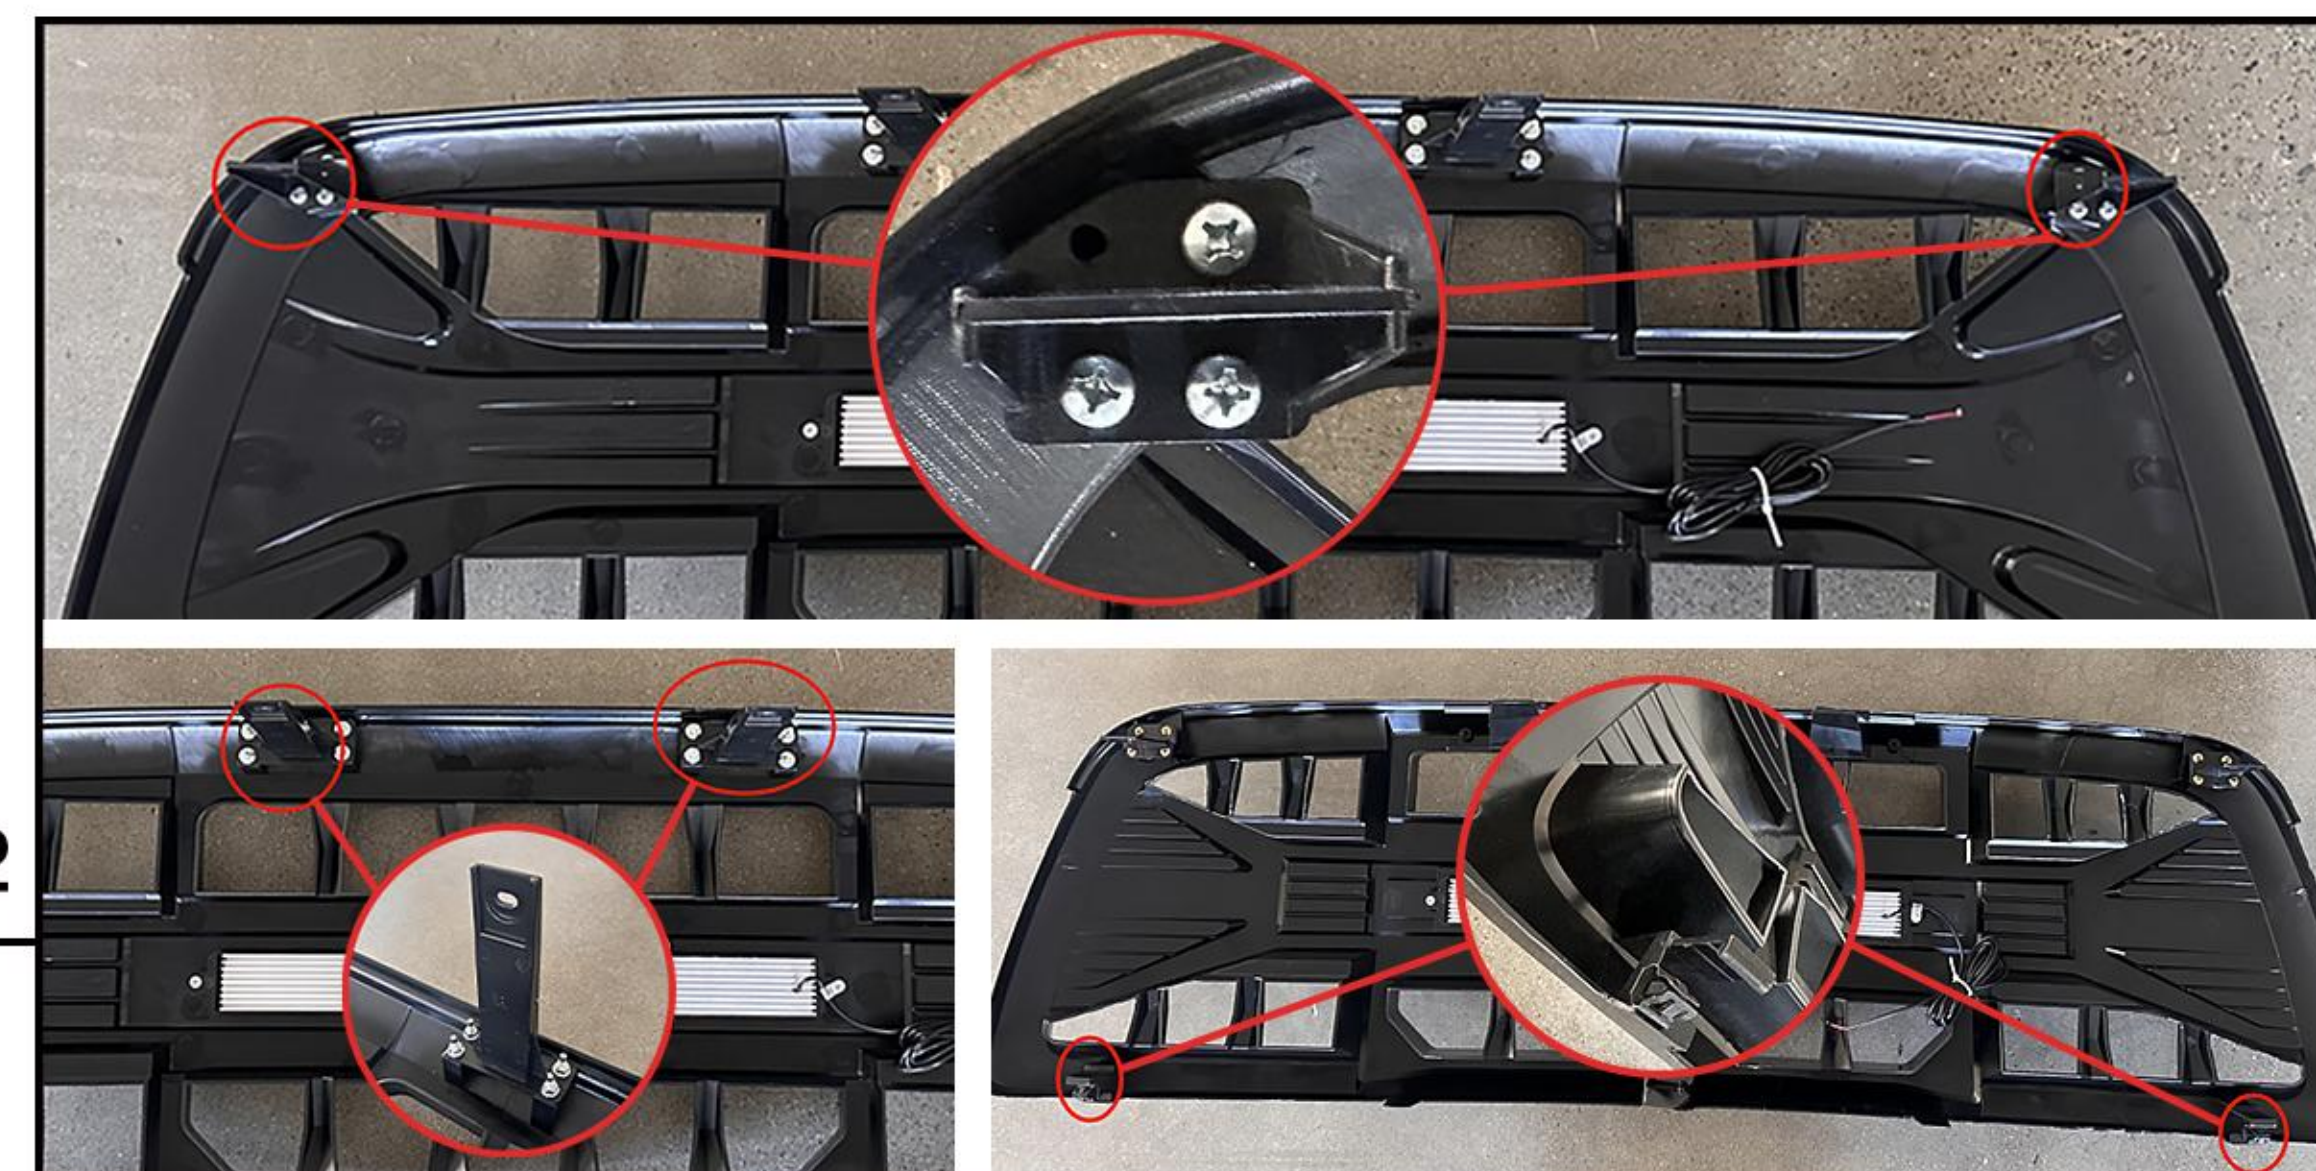

Install 4 mounting brackets.(2 on each end and 2 in the middle).Install 2 metal clips on each end.

STEP 3



DRL Wiring:
Wire to fuse box, the red wire connects to the ACC, the black wire connects to the negative of battery.

STEP 4



Line up the brackets on top(make sure your bracket's going underneath the hood cable). Press the bottom in place and start installing your hardware (follow the step 1 in reverse order.) to complete the grille installation.