


INSTALLATION INSTRUCTIONS

**HD4 LD BN Hoop
19-24 Dodge Ram 1500
R182148**

Installation Instructions

PARTS LIST:

Qty	Item Description	Qty	Item Description
1	BN Hoop	8	8mm Lock Washers
1	PS/right LED Bracket	2	8-1.25mm x 25mm Hex Bolt
1	DS/left LED Bracket	2	8-1.25mm x 16mm Hex Bolt
4	8-1.25mm x 25mm Button Head Allen Bolt	1	5mm Allen Wrench
14	8mm x 24mm x 2mm Flat Washers	6	8mm Hex Nuts

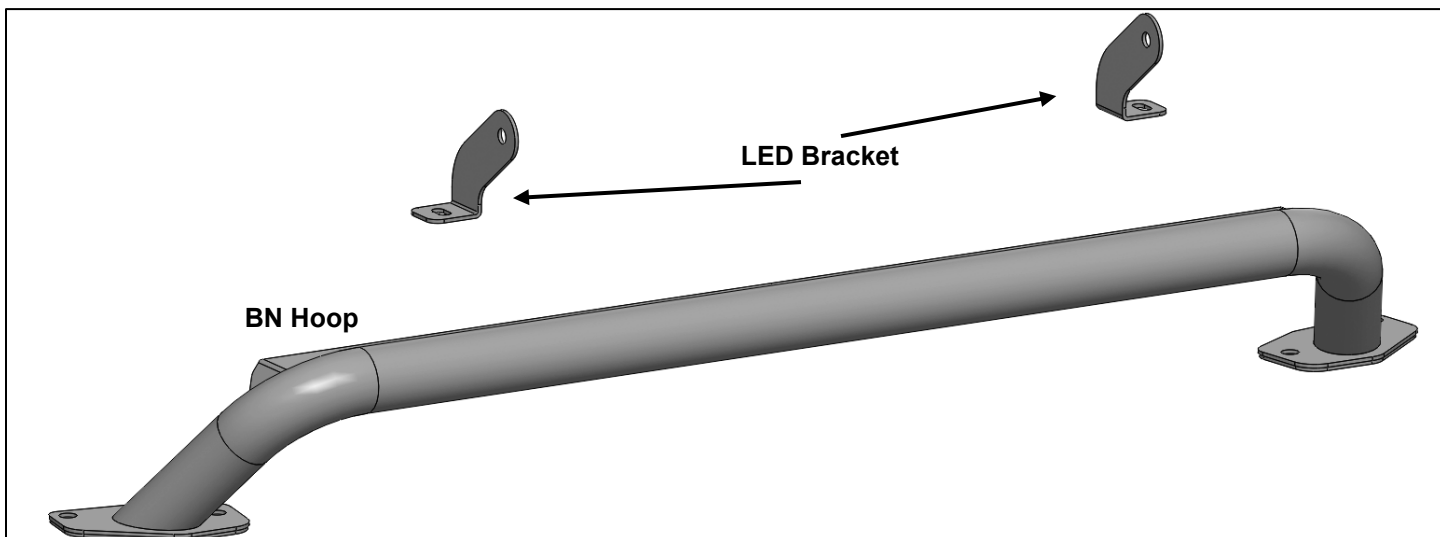

TOOLS REQUIRED



Ratchet



13mm Socket




Extensions



Wrench


1

Follow (Fig 1 – 3) to attach BN Hoop to LD Bumper, then attach LED Brackets and LED Light as necessary. Ensure BN Hoop is level before tightening fasteners.

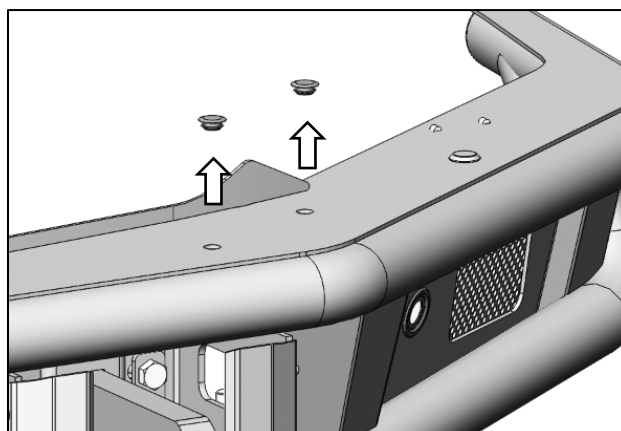


(Fig 1) Remove plugs from inserts on top of Bumper

- (2) 8mm Button Head Allen Bolt
- (4) 8mm Flat Washer
- (2) 8mm Lock Washer
- (2) 8mm Hex Nut

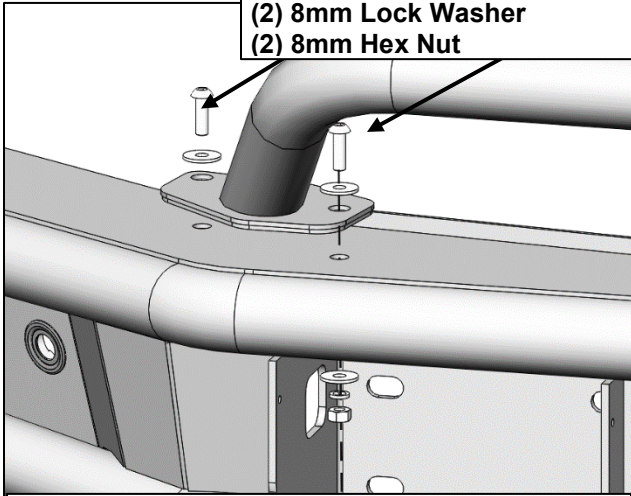


(Fig 2) Attach BN Hoop to Front Mounting Point

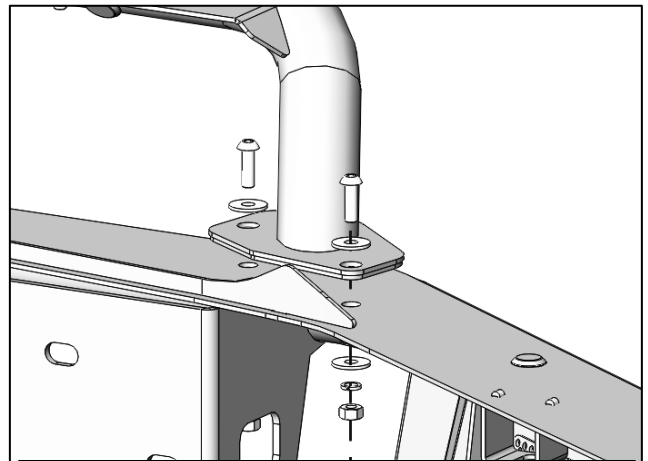

(Fig 3) Attach BN Hoop to Rear Mounting Point

- (1) 8x25mm Hex Bolt
- (2) 8mm Flat Washer
- (1) 8mm Lock Washer
- (1) 8mm Hex Nut

- (1) 8x16mm Hex Bolt
- (1) 8mm Lock Washer
- (1) 8mm Flat Washer

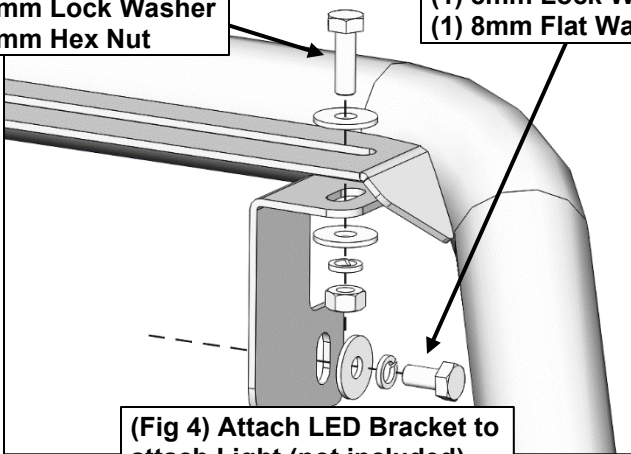(Fig 4) Attach LED Bracket to
attach Light (not included)Completed Installation
(Lights not included)