


INSTALLATION INSTRUCTIONS

**HD4 HD BN Hoop
19-24 Dodge Ram 1500
R182152**

Installation Instructions

PARTS LIST:

| Qty | Item Description | Qty | Item Description |
|-----|--|-----|--------------------------|
| 1 | BN Hoop | 8 | 8mm Lock Washers |
| 1 | PS/right LED Bracket | 2 | 8-1.25mm x 25mm Hex Bolt |
| 1 | DS/left LED Bracket | 2 | 8-1.25mm x 16mm Hex Bolt |
| 4 | 8-1.25mm x 25mm Button Head Allen Bolt | 1 | 5mm Allen Wrench |
| 14 | 8mm x 24mm x 2mm Flat Washers | 6 | 8mm Hex Nuts |

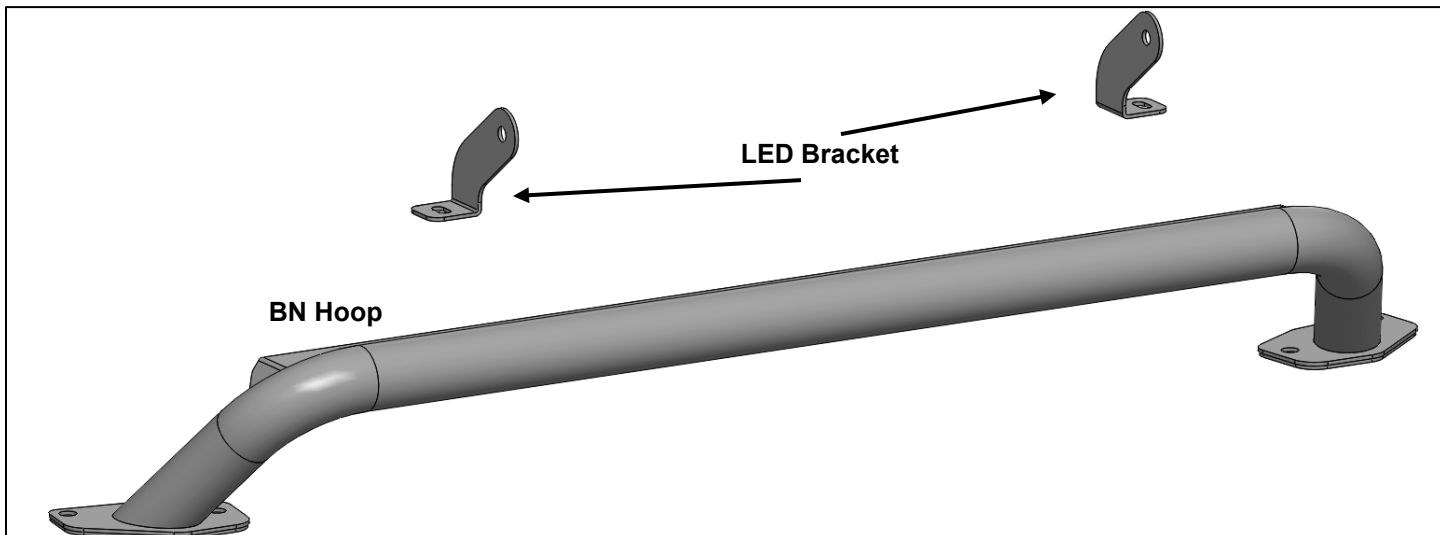

TOOLS REQUIRED



Ratchet



13mm Socket




Extensions




Wrench

- Follow (Fig 1 – 3) to attach BN Hoop to HD Bumper, then attach LED Brackets and LED Light as necessary. Ensure BN Hoop is level before tightening fasteners.

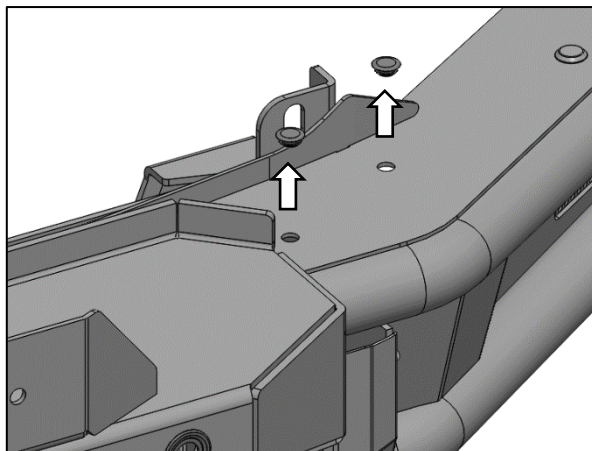


(Fig 1) Remove plugs from inserts on top of Bumper

- (2) 8mm Button Head Allen Bolt
- (4) 8mm Flat Washer
- (2) 8mm Lock Washer
- (2) 8mm Hex Nut

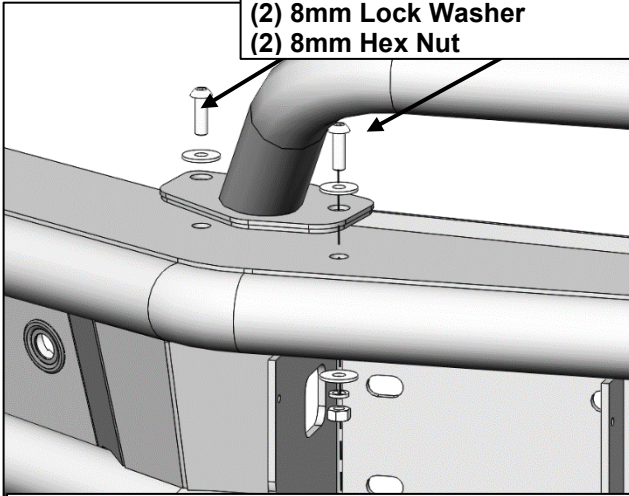

(Fig 2) Attach BN Hoop to Front Mounting Point


- (2) 8mm Button Head Allen Bolt
- (4) 8mm Flat Washer
- (2) 8mm Lock Washer
- (2) 8mm Hex Nut

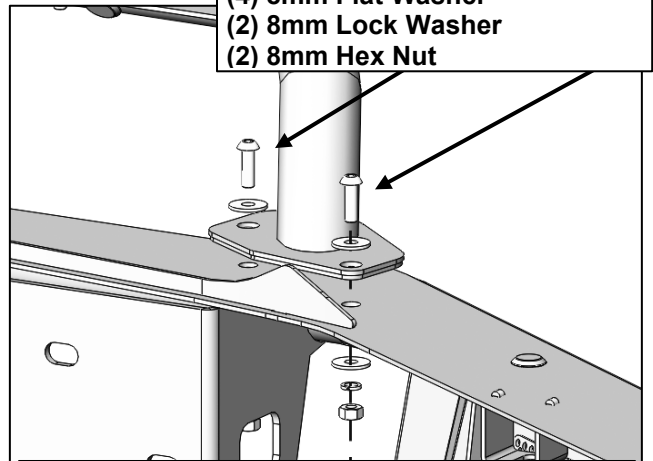

(Fig 3) Attach BN Hoop to Rear Mounting Point

- (1) 8x25mm Hex Bolt
- (2) 8mm Flat Washer
- (1) 8mm Lock Washer
- (1) 8mm Hex Nut

- (1) 8x16mm Hex Bolt
- (1) 8mm Lock Washer
- (1) 8mm Flat Washer

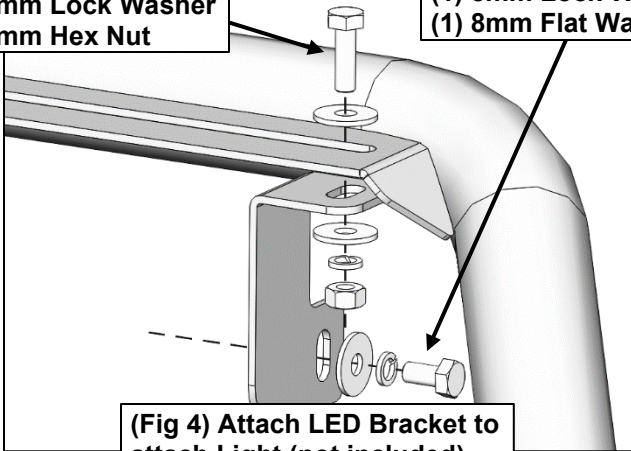(Fig 4) Attach LED Bracket to
attach Light (not included)Completed Installation
(Lights not included)