



Installation Guide

Armor Grille
For 2009-2012 Dodge Ram 1500

SKU # AMDEBA00146 & AMDEBA00147

STEP 1




Open the hood,remove 4 clips(2 in the middle and one on each end)with a pry tool to remove shroud cover from vehicle.Remove 3 bolts with an impact wrench and swing the grille to remove the original grille.

STEP 2



Install 4 mounting brackets.(2 on each end and 2 in the middle).Install 2 metal clips on each end.

STEP 3

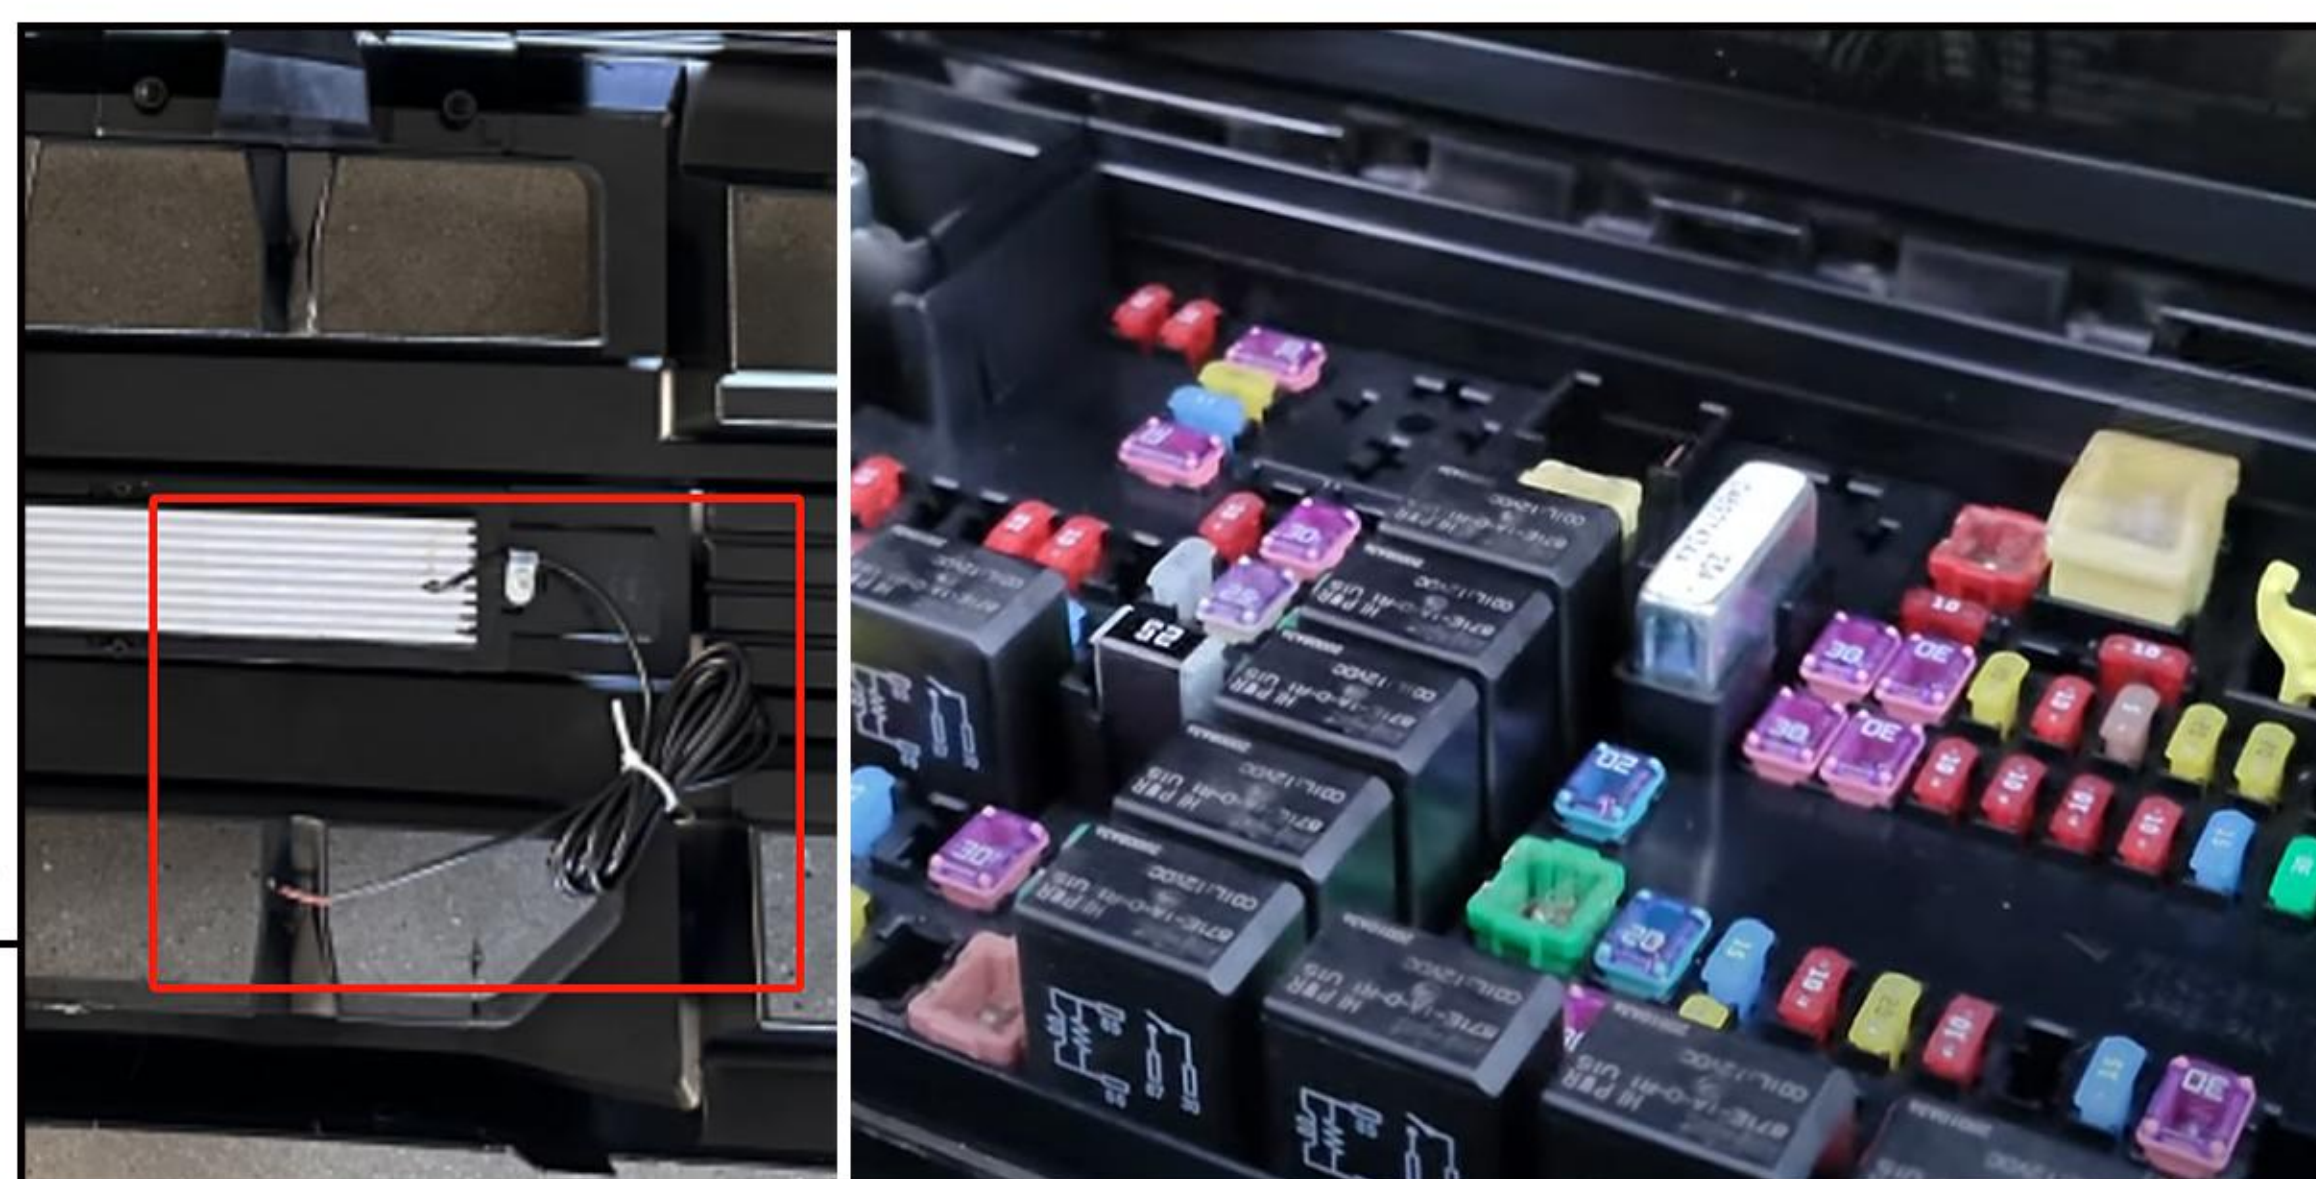

DRL Wiring:
Wire to fuse box,the red wire connects to the ACC,the black wire connects to the negative of battery.

STEP 4



Align the bottom metal clips with the slot,top mounting brackets with the hole on the car.Get these snapped in,screw all bolts and clips to complete the installation.