

SWITCHBACK LED FOG LIGHTS WITH DRL

(2013-2018 1500)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Fog Light
- (1) RH Fog Light
- (2) Wire Leads
- (2) Scotchlok Connectors

TOOLS REQUIRED


- 10mm Socket
- Ratchet
- Pliers

STEP 1



From behind the front bumper, unplug the fog light electrical connector.

STEP 2

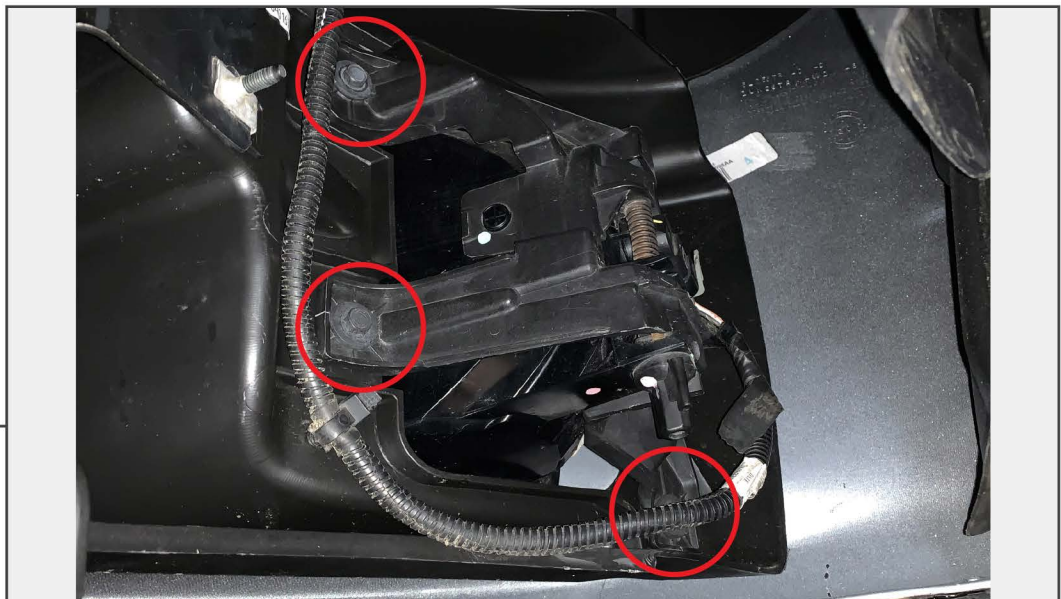


Remove (3) 10mm bolts from the fog light assembly. Remove the fog light assembly from the vehicle.

STEP 3



Install the new fog light assembly to the vehicle bumper using the original (3) 10mm bolts. Plug the fog light harness into the vehicle wiring harness.

STEP 4

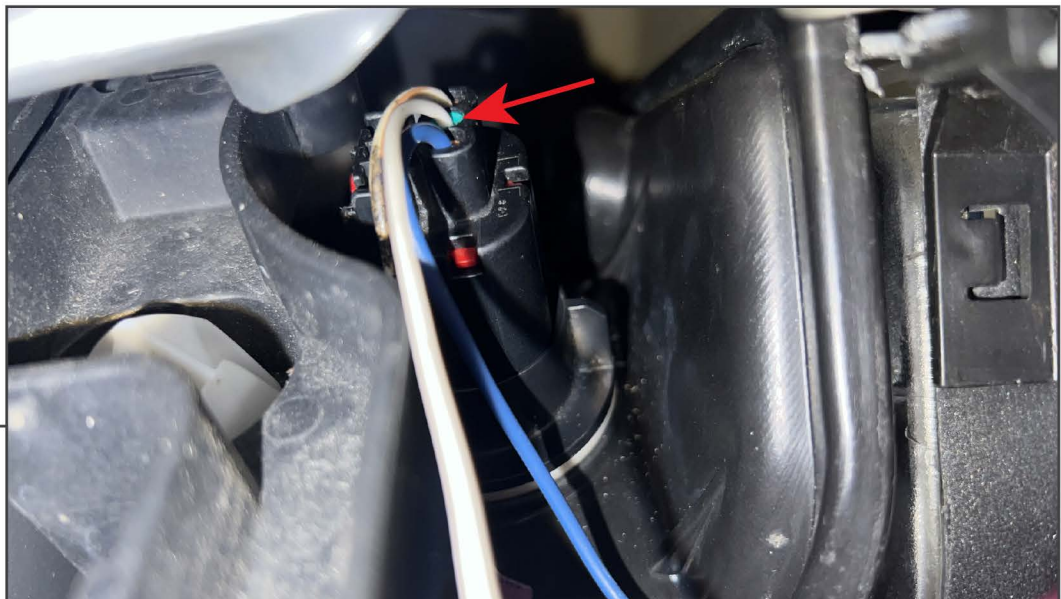


Neatly route the fog light wire lead towards the vehicle headlight assembly. Removing the (2) 8mm screws and (2) plastic clips from the bumper edge may be necessary to move the fender liner away for better wiring access.

Locate the parking light connector on the headlight, and splice the fog light wire lead to the parking light. The DRL will power on with the parking lamps. Verify wire leads with a multimeter before splicing.

LH Side Parking Light Wire: White/Brown (+)

RH Side Parking Light Wire: White/Red (+)

STEP 5

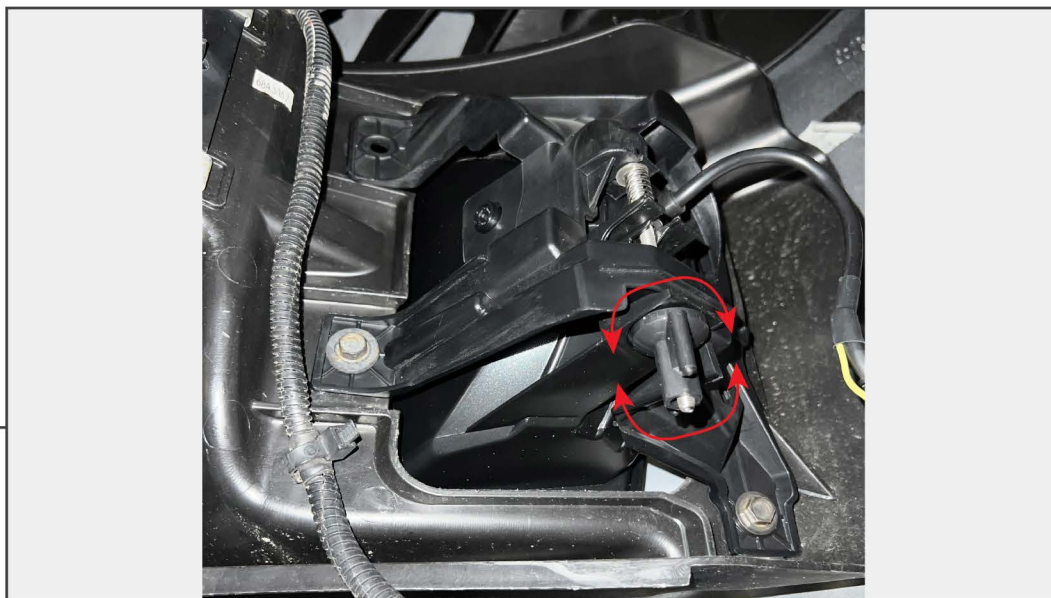

Power on the fog lights, and adjust the height using the thumb-screw along the bottom of the light assembly. Ensure all wiring is secured behind the fog light.

STEP 6



Repeat steps 1-5 for the remaining fog light.

To switch between white/yellow switchback, press the fog light button three times quickly.

Installation is now complete.