



RETRACTABLE BED STEP

(2019-2023 1500)


INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Step Assembly
- (1) M14 x 30mm Bolt
- (1) M14 Flat Washer
- (1) M14 Flange Nut

TOOLS REQUIRED


19, 21mm Socket / Wrench
Ratchet

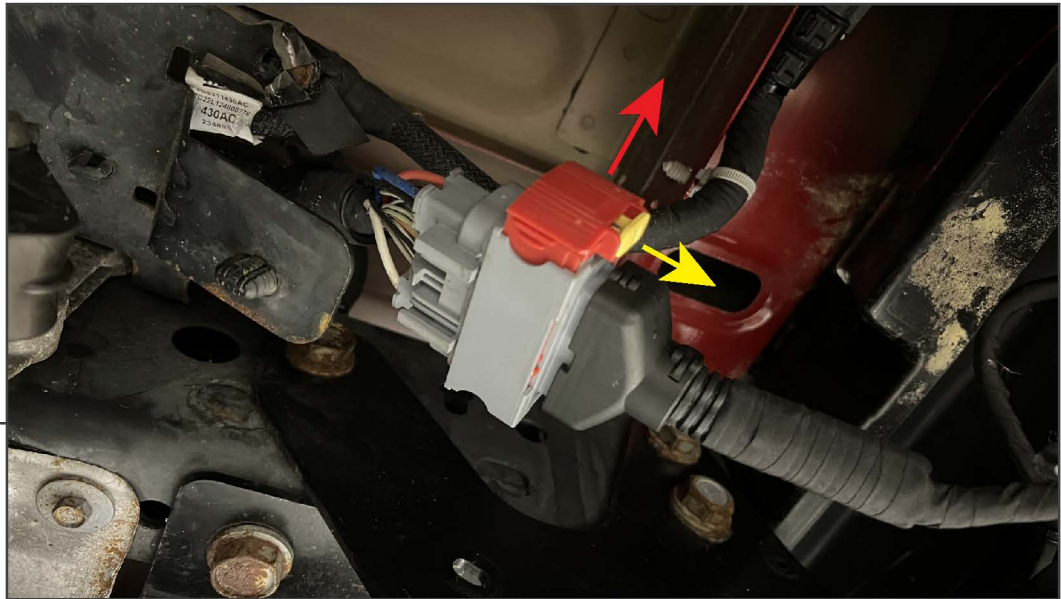

STEP 1

From under the driver side of the vehicle, locate the rear wiring harness and connector. Unplug the harness by sliding the yellow lock back, then sliding the red latch to the side to allow the connectors to separate.

Disconnect 1-2 plastic retainers securing the harness to the frame/hitch receiver. Place the harness above the frame to avoid interference with the bed step installation.

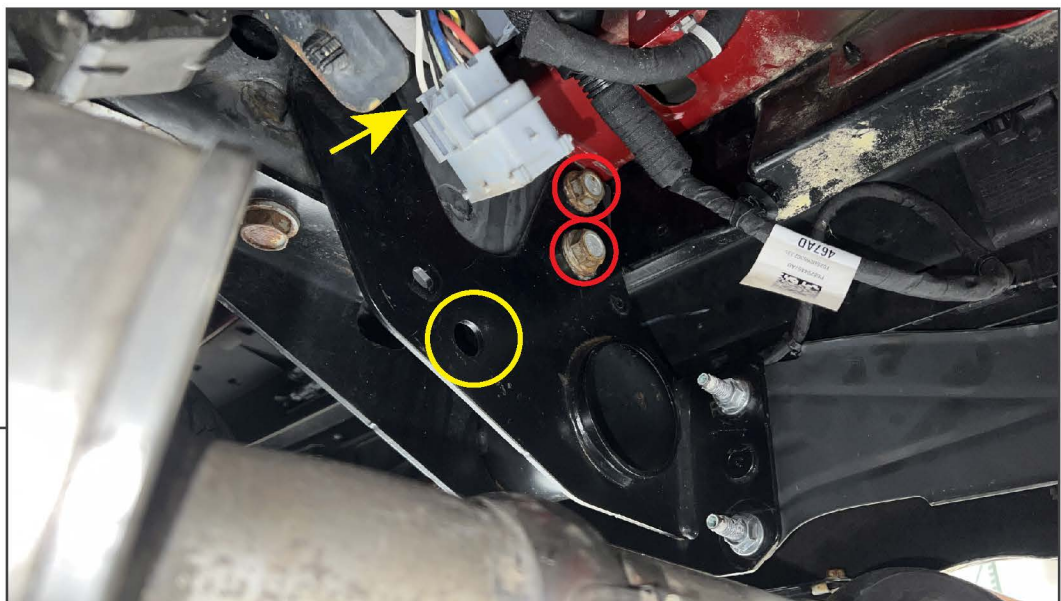


STEP 2

Locate and remove the (2) 21mm hitch receiver bolts.

-Take note to the (1) welded nut installed in the hitch receiver. If the vehicle does not have the welded nut, the included M14 bolt, washer, and nut will be used.

-Take note to the slotted hole in the frame. This hole will aid bed step alignment to the vehicle.

STEP 3

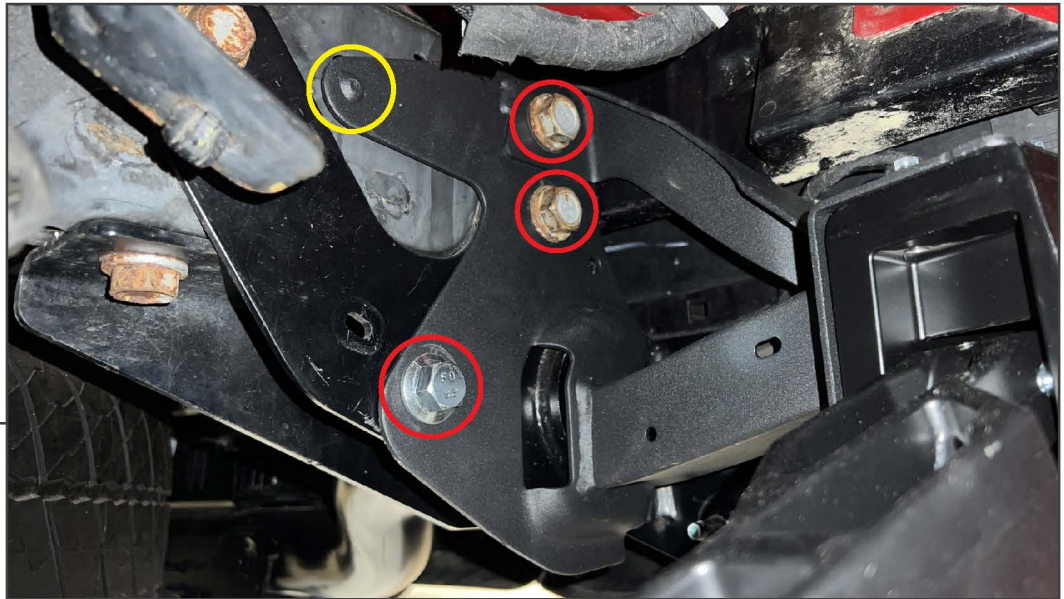

Fit the bed step around the vehicle exhaust pipe, and fit the mounting bracket dowel into the vehicle frame hole. Then, loosely secure the bed step into place using the included (1) M14 hardware, and the (2) 21mm hitch receiver bolts.

Adjust the step to best fit the vehicle, and tighten all hardware evenly until fully secure.

STEP 4



Plug the wiring harness into the vehicle connector, and press the harness retainers into the original frame mounting holes.

Installation is now complete.