



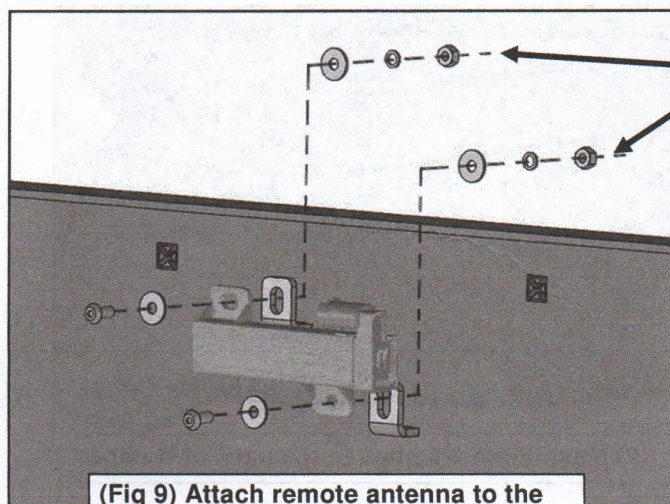


- (2) 4mm Button Head Bolts
- (4) 4mm Flat Washers
- (2) 4mm Lock Washers
- (2) 4mm Hex Nuts

(Fig 9) Attach remote antenna to the back of the Rear Bumper illustrated

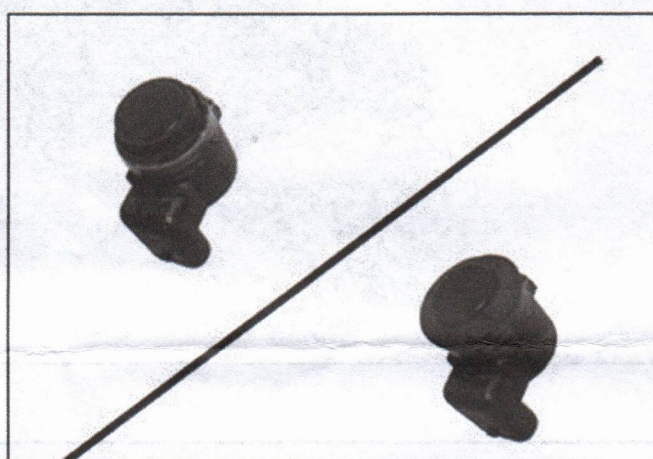

(Fig 10) Remove OE sensor washer and place the provided Foam Washer onto the front of the sensor

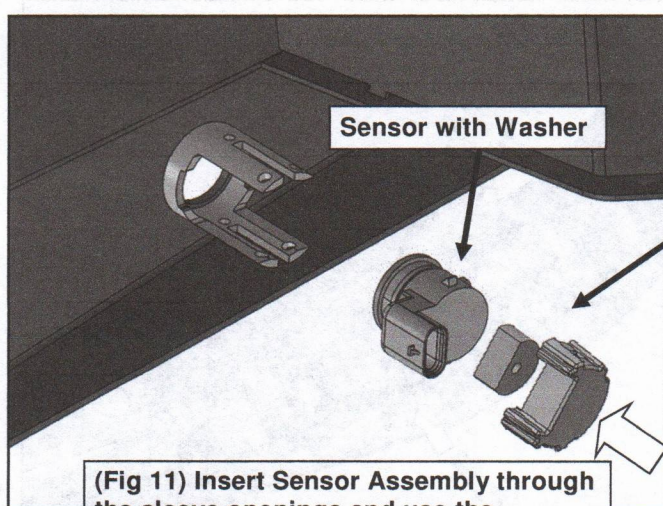


- (1) Foam Washer
- (1) Foam Spacer
- (1) Sensor Retaining Clip


Note: The sensor plastic covers are used for vehicles with no parking sensors

(Fig 11) Insert Sensor Assembly through the sleeve openings and use the Retaining Clip to secure sensor in place

(2) 6mm Combo Bolts
(2) 6mm Flange Nuts

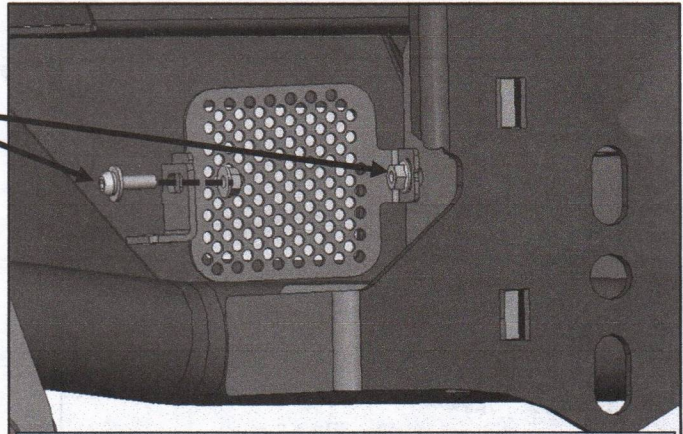

(Fig 12) Mesh Plate attached to the back of Bumper

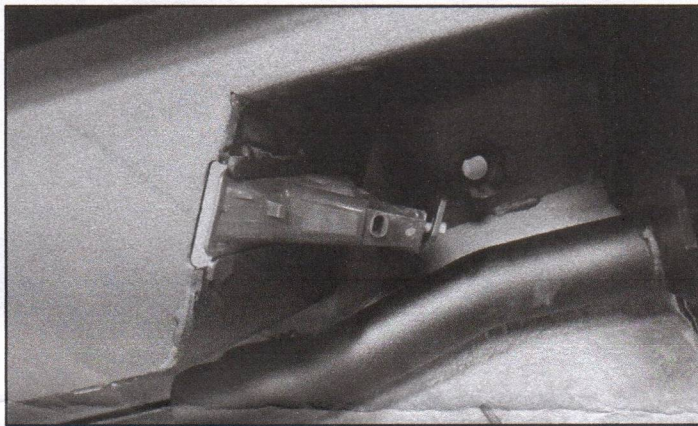


(Fig 13) Swap the OEM license plate lights to the new bumper


3

Follow (Fig 14-16) to mount the bumper to the vehicle. Once installation is complete, do periodic inspections to the installation to make sure that all hardware is secure and tight.


(2) 12mm Hex Bolts
(2) 12mm Lock Washers
(2) 12mm Flat Washers

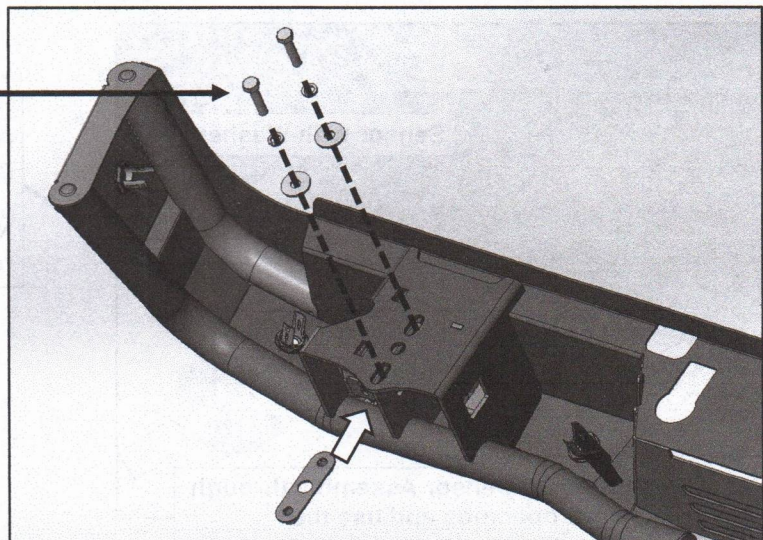


(Fig 14) With assistance, slide Nut Plate through the back of the Bumper

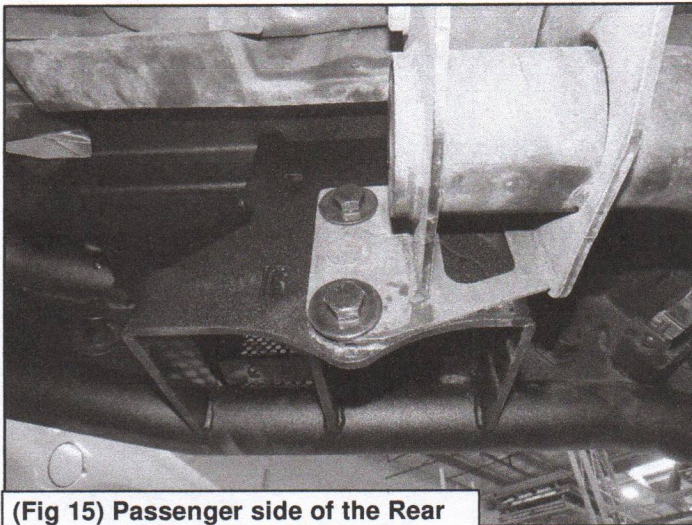

(Fig 15) Passenger side of the Rear Bumper attached to the factory hitch

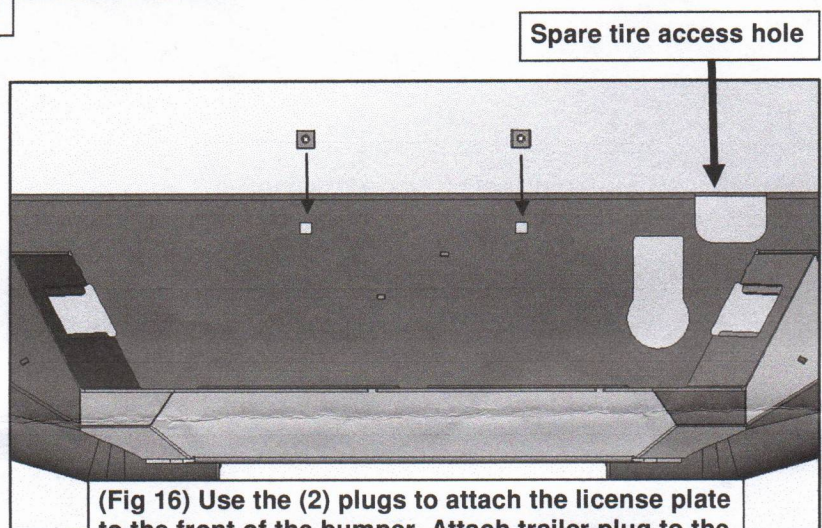

(Fig 16) Use the (2) plugs to attach the license plate to the front of the bumper. Attach trailer plug to the front as well.

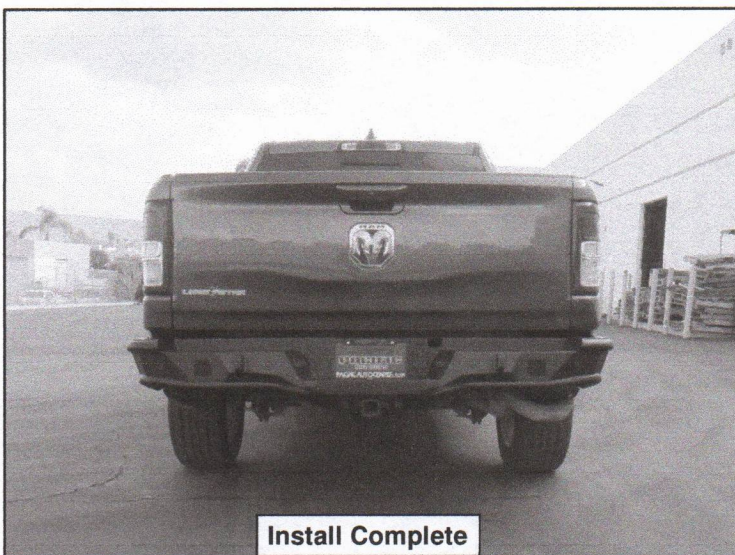

Install Complete