



OFF-ROAD HYDRAULIC JACK KIT

INSTALLATION INSTRUCTIONS

CONTENTS


- (1) Bottle Jack
- (1) Base Plate
- (2) M6x1.00 Tapered Head Bolts
- (1) Jack Handle (2-Piece)
- (1) 5" Lifting Post
- (1) 8" Lifting Post
- (1) 8" Male Lifting Post w/ Hole
- (1) 8" Female Lifting Post w/ 3 Holes
- (1) Hook Lifting Pad
- (1) Flat Lifting Pad
- (1) Pin

TOOLS REQUIRED

- 4mm Allen Key (Provided)


SKU # J251245

REDROCK

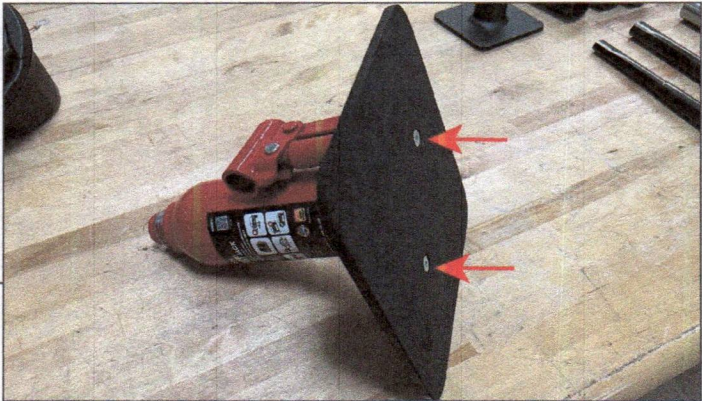

STEP 1

Using the included (2) M6 Tapered Allen bolts, secure the base of the bottle jack to the base plate. The bolts will thread into the threaded holes in the bottom of the bottle jack. Tighten evenly until secure.

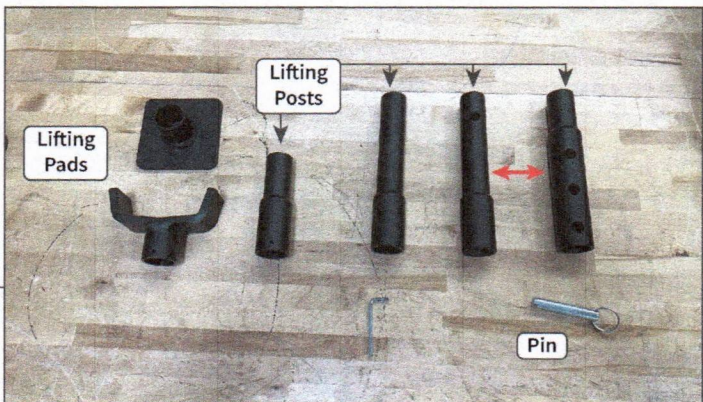


STEP 2

Identify the included items.

The wide portion of the posts fits over the bottle jack shaft. Depending on the application, various posts may be used.

Always use one of the included pads when attempting to lift the vehicle to ensure the most contact patch with the vehicle.

REDROCK

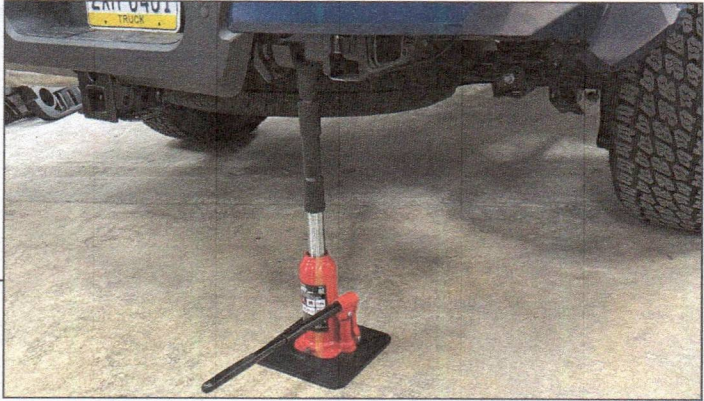

STEP 3

Place the jack under the vehicle. Add the desired lifting posts. The (2) 8" posts with the through holes fit together and can be held together using the included pin. Begin to jack the vehicle upwards using the handle.

Do not go under the vehicle unless the vehicle is supported by jack stands.

To lower the jack, turn the screw at the base of the jack using the jack handle.