



AMERICAN MODIFIED

SKU # AMDEBA00141

ARMOR GRILLE

Product Installation Instructions


Fitment : 2013-2018 Dodge Ram 1500

STEP 1




Use tools to remove the bolts and remove the cover panel.

STEP 2

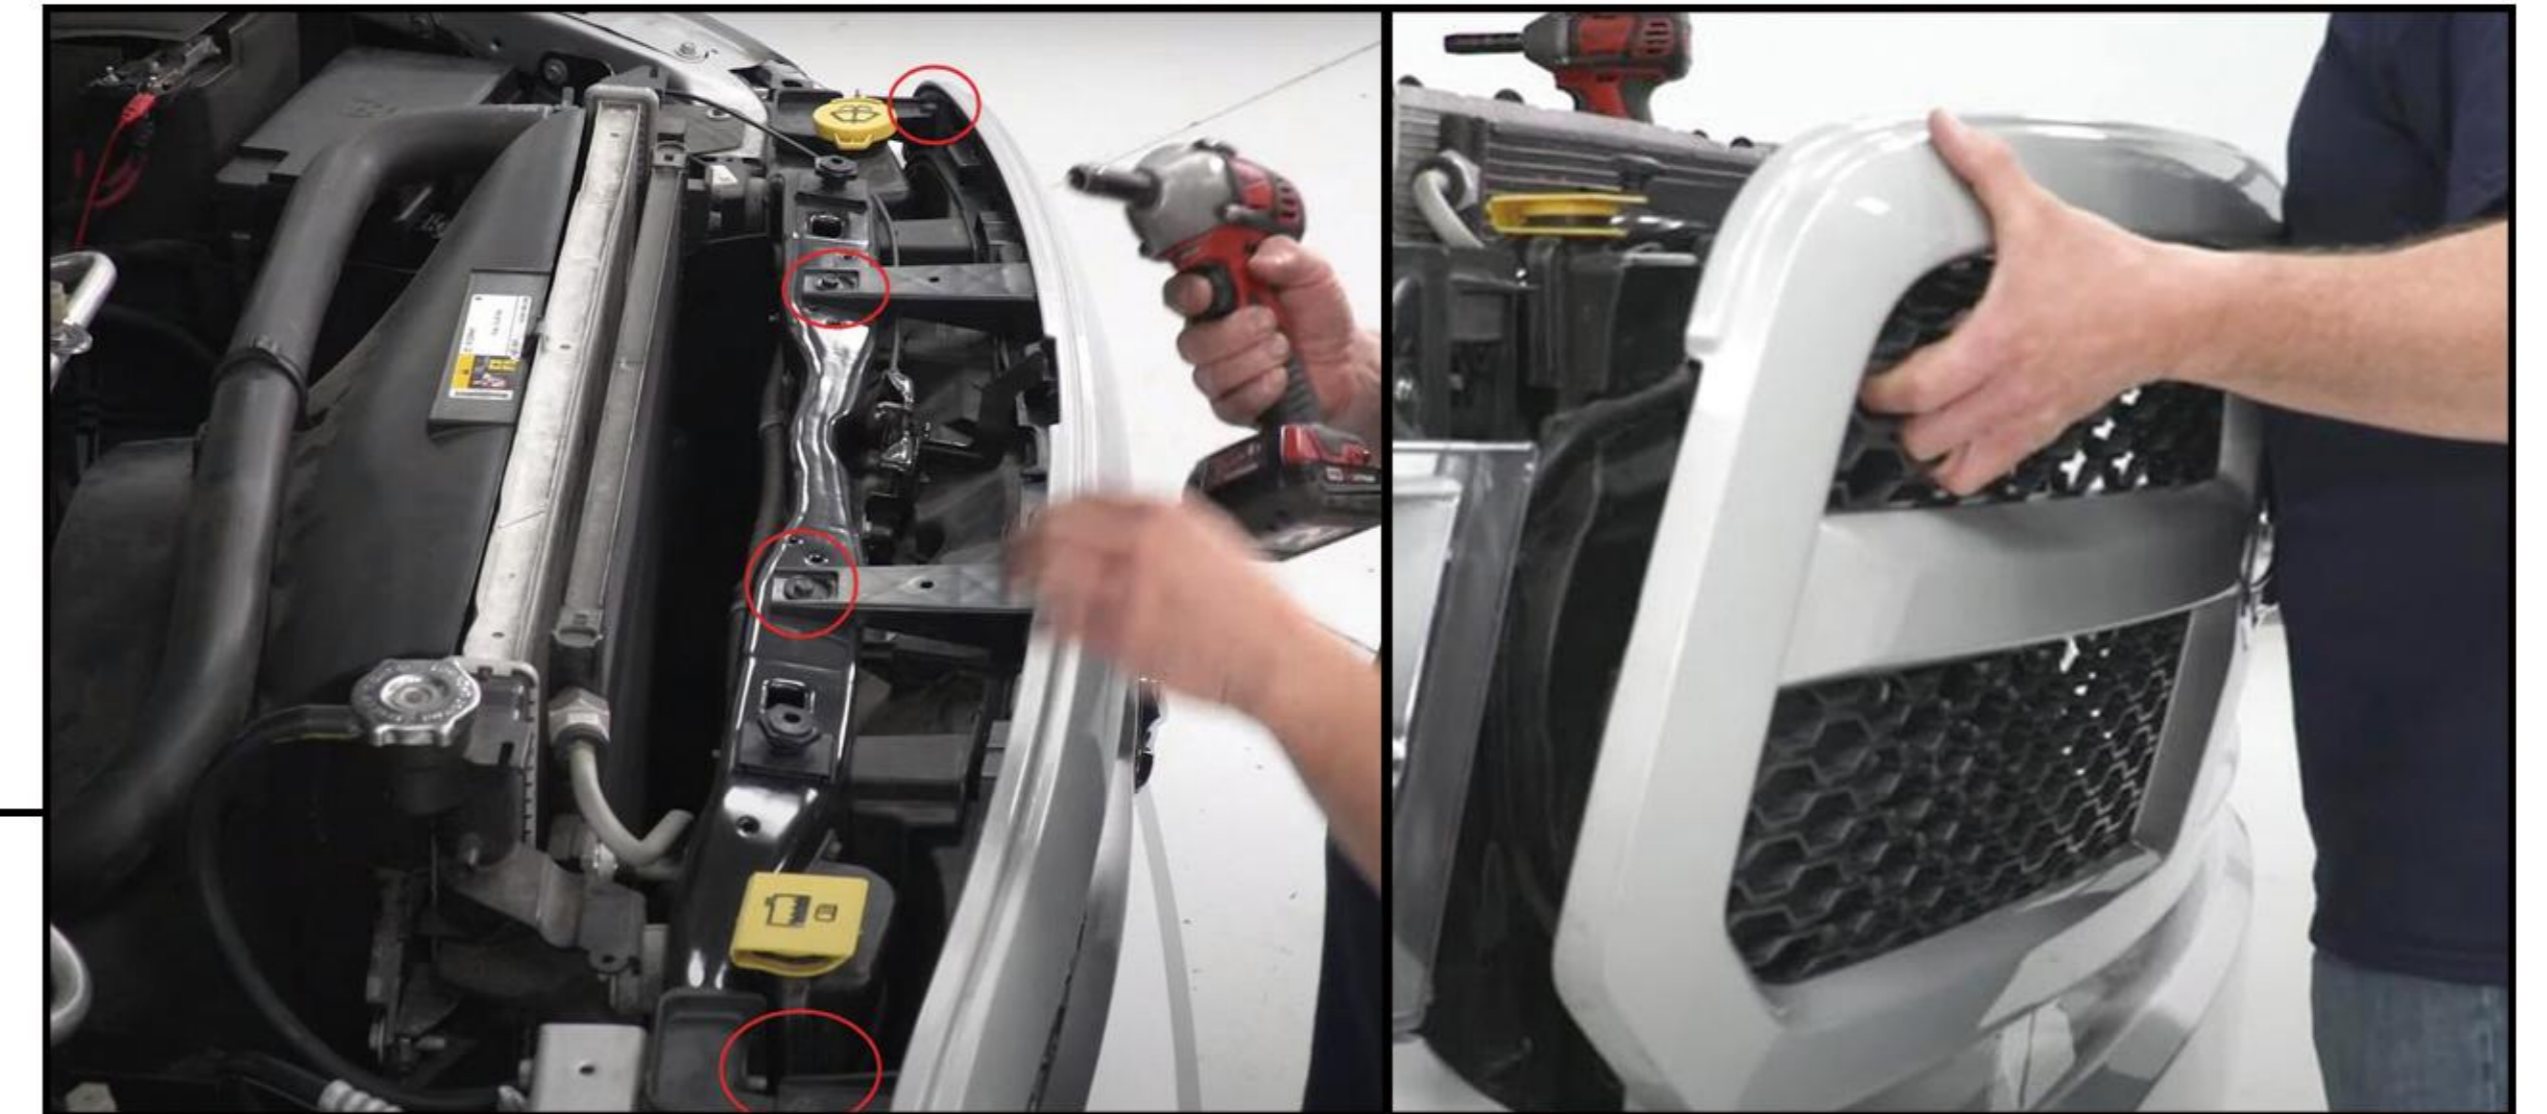


Remove the 4 screws and pull the whole grille from the truck.

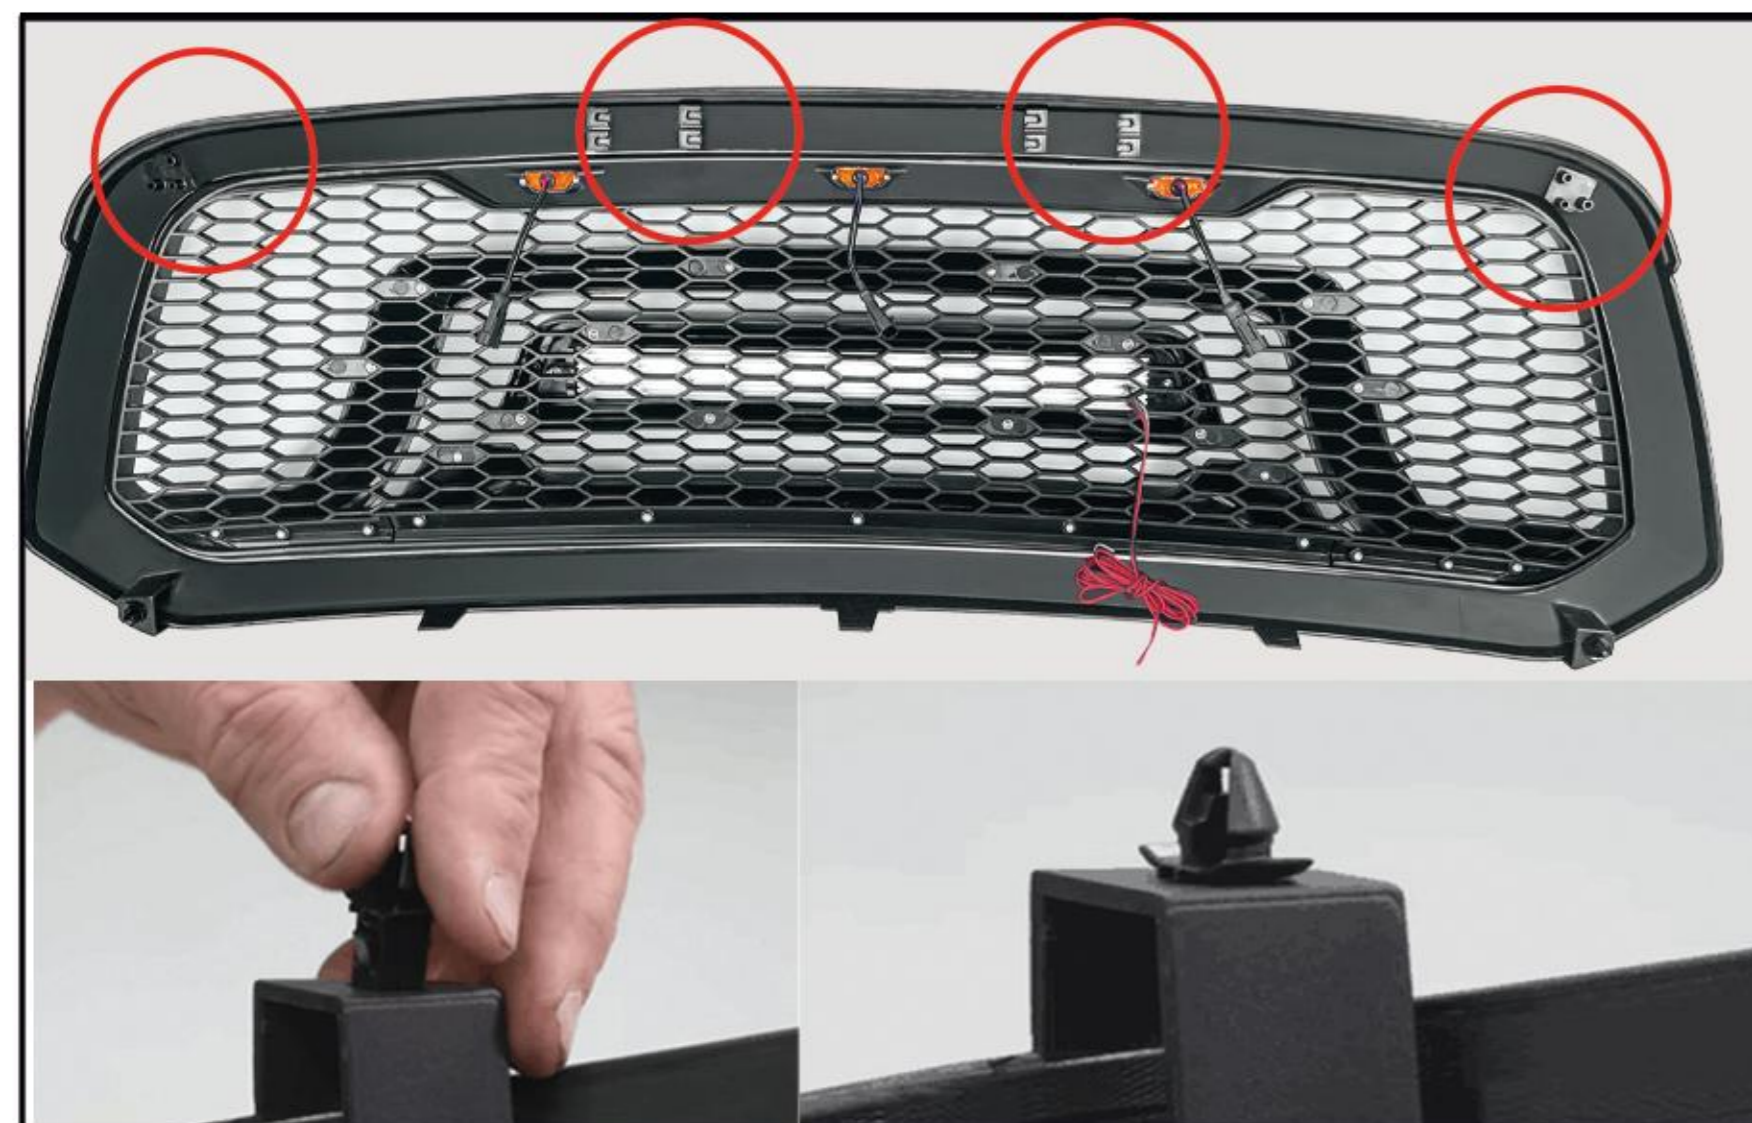

STEP 3

Install four brackets on the new grille and secure with screws. Push the clips into the two holes at the bottom of the new grille

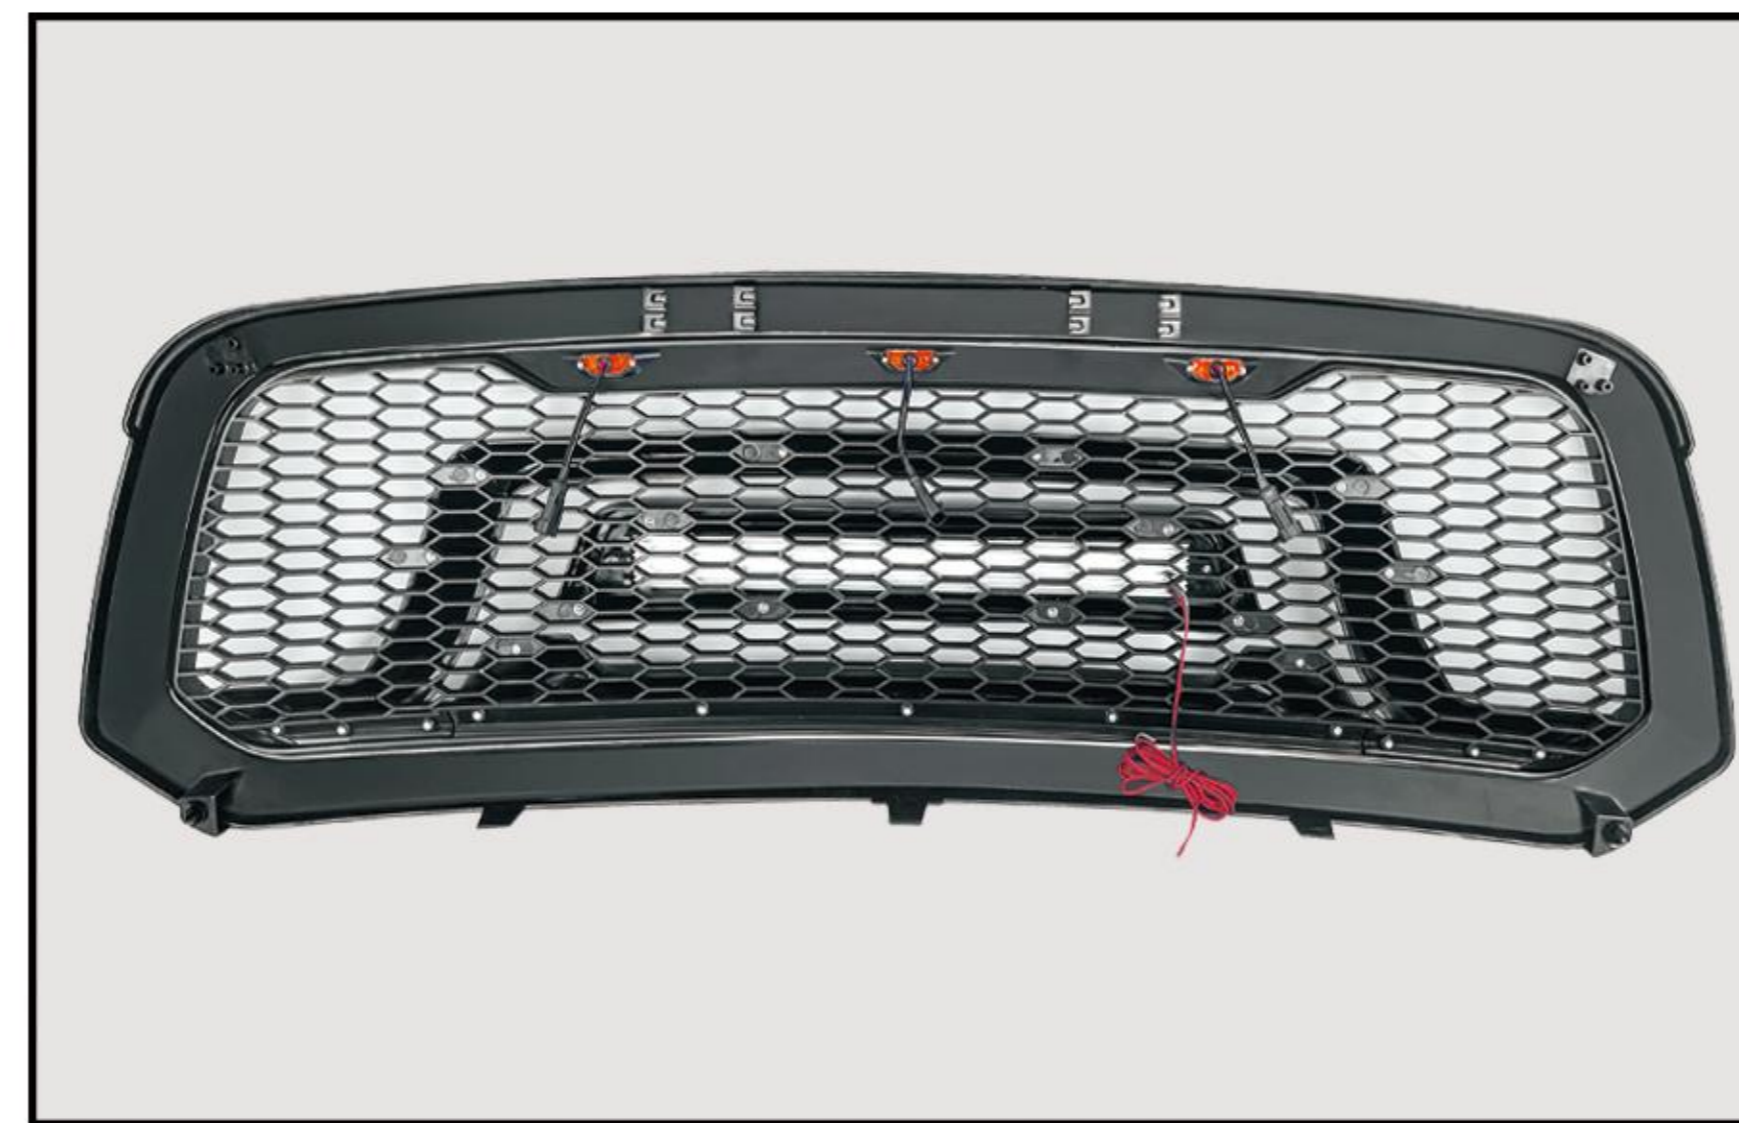

STEP 4

Wiring:
DRL wiring: The red wire connects to the ACC, the black wire connects to the negative of battery.
Amber lights wiring: The red wire connects to the ACC, the black wire connects to the negative of battery.



STEP 5

Fix all the bolts and clips and finish installation of new grille.